Service Manual

TOP NEXT

Order No. MAC0211071C1

E25

Service Manual

Room Air Conditioner

- CS-A18CKPG CU-A18CKP6G

© 2002 Matsushita Industrial Corp. Sdn. Bhd. (11969-T). All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public.
It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

TOP NEXT

1 Features

- High Efficiency
- Compact Design
- Comfort Environment
  - 8 hours of sleep mode operation
  - Air filter with function to reduce dust and smoke
  - Wider range of horizontal discharge air
  - New Automatic air swing and manual adjusted by remote control for horizontal airflow.
- Auto Restart
  - Random auto restart after power failure for safety restart operation
- Removable and Washable Front Panel
- Remote Control Self-illuminating Button
- Air Purifying Filter
  - Trap dust, tobacco smoke and tiny particles
  - Prevent the growth of bacteria and viruses trapped
- Solar Refreshing Deodorizing Filter
  - Remove unpleasant odour from the air
- Quality Improvement
  - Gas leakage protection
  - Prevent compressor reverse cycle

- Overload protector
- Noise prevention during soft dry operation.
- Anti-dew Formation Control (Cooling & Soft Dry)
- Overload Protection Control (Heating)
  - Outdoor Fan Control
  - Compressor High Pressure Control
- Blue Coated Condenser
  - High resistance to corrosion.
- Low outdoor ambient temperature control.

- Operation Improvement
  - Economy mode to reduce electrical power consumption
  - Powerful mode to reach the desired room temperature quickly
- Long Installation Piping
  - Long piping up to 25 meter
- 24-hour Timer Setting

TOP PREVIOUS NEXT

2 Functions

Remote Control

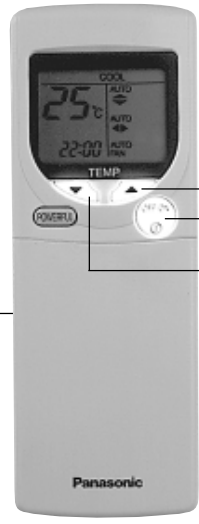

Self illuminating button

OFF / ON ⏻

Operation OFF / ON

MODE

Operation Mode Selection

- AUTO Automatic Operation Mode
- HEAT Heating Operation Mode
- COOL Cooling Operation Mode
- DRY Soft Dry Operation Mode

FAN SPEED

Indoor Fan Speed Selection

- FAN ■ Low Fan Speed
- FAN ■■■ Medium Fan Speed
- FAN ■■■■■ High Fan Speed
- AUTO FAN Automatic Fan Speed

AIR SWING

Vertical Airflow Direction Control

- ▲▼ Vertical Automatic Airflow Direction Control and Manual Airflow Direction Control (5 stages of adjustment).
- ◀▶ Horizontal Automatic Airflow Direction Control and Manual Airflow Direction Control (5 stages of adjustment).

POWERFUL

Powerful Mode Operation OFF/ON

ECONOMY

Economy Mode Operation OFF/ON

TEMP.

Room Temperature Setting

Heating, Cooling, Soft Dry Operation.

- Temperature Setting (16°C to 30°C)

Automatic Operation

- Hi Operation with 2°C higher than standard temperature.
- Operation with standard temperature.
- Lo Operation with 2°C lower than standard temperature.

ON-TIMER
OFF-TIMER

Timer Operation Selection

- 24-hour, OFF / ON Real Timer Setting.

TIME

Time / Timer Setting

- Hours and minutes setting.

SET
CANCEL

Timer Operation Set / Cancel

- ON Timer and OFF Timer setting and cancellation.

CLOCK

Clock Setting

- Current time setting.

SLEEP

Sleep Mode Operation OFF / ON

Indoor Unit

AUTO
OFF / ON

Automatic Operation Button

- Press for < 5s to operate Automatic operation mode.
  (Used when the remote control cannot be used.)
- Press continuously for 5s or < 10s to operate Test Run/Pump down. “Beep” sound will be heard at the 5th second.
  (Used when test running or servicing.)
- Press continuously for 10s and above to omit or resume the remote control signal receiving sound. “Beep, beep” sound will be heard at the 10th second.

Operation Indication Lamps (LED)

- POWER (Green) ..... Lights up in operation, blinks in Automatic Operation Mode judging and Hot Start operation.
- SLEEP (Orange) ..... Lights up in Sleep Mode Operation.
- TIMER (Orange) ..... Lights up in Timer Setting.
- POWERFUL (Orange) ... Lights up in Powerful Mode Operation.
- ECONOMY (Green) ..... Lights up in Economy Mode Operation.

Operation Mode

- Heating, Cooling, Soft Dry and Automatic Mode.

Powerful Operation

- Reaches the desired room temperature quickly.

Economy Operation

- To reduce electrical power consumption.

Random Auto Restart Control

- Operation is restarted randomly after power failure at previous setting mode.

Anti-Freezing Control

- Anti-Freezing control for indoor heat exchanger. (Cooling and Soft Dry)

Sleep Mode Auto Control

- Indoor Fan operates refer to Indoor Fan Speed control.
- Operation stops after 8 hours.

Indoor Fan Speed Control

- High, Medium and Low.
- Automatic Fan Speed Mode
  - Heating : Fan speed varies from Me → SSLo in accordance with indoor heat exchanger.
  - Cooling : Fan rotates at Hi, Me and SLo speed. Deodorizing control is available.
  - Soft Dry : Fan rotates at SLo speed. Deodorizing control is available.

Airflow Direction Control

- Automatic air swing and manual adjusted by remote control for vertical and horizontal airflow.

Time Delay Safety Control

- Restarting is inhibited for appro. 3 minutes.

7 Minutes Time Save Control

- Cooling Operation only.

Anti-Dew Formation Control

- Anti-Dew Formation Control for indoor unit discharge area.

Hot-Start Control

- At Heating Operation the indoor fan will operate at SLo speed when indoor heat exchanger temperature reaches 30°C.

Anti Cold Draft Control

- The indoor fan operates at Lo⁻ (30 sec.) after that SSLo when the indoor heat exchanger temperature is low.
  (During Heating mode thermal off)

Outdoor Unit

Compressor Reverse Rotation Protection Control

- To protect compressor from reverse rotation when there is a instantaneous power failure.

Overload Protector

- Inner protector.

60 Secs. Forced Operation Control

- Once the compressor is activated, it does not stop within the first 60 secs. However, it stops immediately with remote control stop signal.

Outdoor Fan Operation Control

- 6-pole induction motor (2 speed).
- For Cooling or Soft Dry operation
  Hi-speed ..... When outdoor temperature reaches to 31°C.
  Lo-speed..... When outdoor temperature reaches to 29°C.
- For Heating operation
  Hi-speed ..... When outdoor temperature reaches to 13.5°C.
  Lo-speed..... When outdoor temperature reaches to 15.5°C.
- For Over-heating Protection, the Fan is switched ON or OFF depending on the piping temperature and the outdoor temperature.

Deice Control

- To prevent frosting at outdoor heat exchanger during Heating Operation.

4-Way Valve Control

- When the unit is switched to “OFF” during Heating Operation, 4-way valve stays at Heating position for 5 minutes.

Low Ambient Temperature Control

- To protect air conditioner from damage under the low outdoor ambient temperature < -12°C.

3 Product Specifications

		Unit	CS-A18CK	CU-A18CK
Power Source		Phase, Voltage, Cycle	Single, 230 - 208, 60 Hz	
Cooling Capacity		kW (BTU/h)	5.00 - 4.95 (17,000 - 16,900)	
Heating Capacity		kW (BTU/h)	5.36 - 5.30 (18,300 - 18,100)	
Moisture Removal		l/h (Pint/h)	1.9 (4.0)	
Airflow Method		OUTLET INTAKE 	SIDE VIEW 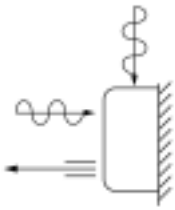	TOP VIEW 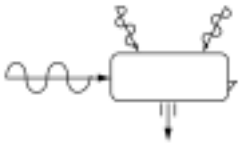
Air Volume	Indoor Air (Lo)	m3/min (cfm)	Cooling; 11.6 (410) - 11.6 (410) Heating; 12.4 (438) - 12.4 (438)	-
	Indoor Air (Me)	m3/min (cfm)	Cooling; 12.9 (455) - 12.9 (455) Heating; 12.9 (455) - 12.9 (455)	-
	Indoor Air (Hi)	m3/min (cfm)	Cooling; 13.6 (480) - 13.6 (480) Heating; 14.5 (512) - 14.5 (512)	Cooling; 38.8 (1,370)
	Indoor Air (SHi)	m3/min (cfm)	Cooling; 14.5 (512) - 14.5 (512) Heating; 14.5 (512) - 14.5 (512)	-
Noise Level		dB (A)	Cooling; High 44 - 44, Low 38 - 38 Heating; High 43 - 43, Low 38 - 38	Cooling; High 55 - 52 Heating; High 56 - 53
		Power level dB	-	-
Electrical Data	Input Power	kW	Cooling; 1.76 - 1.72 Heating; 1.76 - 1.72	

	Running Current		A	Cooling; 7.9 - 8.5 Heating; 7.9 - 8.5	
	EER		BTU/hW	Cooling; 9.7 - 9.8	
	COP		BTU/hW	Heating; 10.4 - 10.5	
	Starting Current		A	47.0	
Piping Connection Port(Flare piping)			inchinch	G ; Half Union 1/2 L ; Half Union 1/4	G ; 3-way valve 1/2 L ; 3-way valve 1/4
Pipe Size(Flare piping)			inchinch	G ; (gas side) 1/2 L ; (liquid side) 1/4	G ; (gas side) 1/2 L ; (liquid side) 1/4
DrainHose	Inner diameter		mm	12	-
	Length		mm	650	-
Power Cord	Length		m	-	-
	Number of core-wire			-	-
Dimensions	Height		inch (mm)	10 - 13/16 (275)	26 - 31/32 (685)
	Width		inch (mm)	39 - 9/32 (998)	31 - 1/2 (800)
	Depth		inch (mm)	8 - 9/32 (210)	11 - 13/16 (300)
Net Weight			lb (kg)	24 (11.0)	117 (53)
Compressor		Type		-	Rotary (1 cylinder)rolling piston type
	Motor	Type		-	Induction (2-poles)
	Rated	Output	kW	-	1.2
Air Circulation		Type		Cross-flow Fan	Propeller Fan
		Material		ASHT-18	PC + AES + Glass Fiber 15%
	Motor	Type		Transistor (8-poles)	Induction (6-poles)
		Input	W	44.8 - 53.5	151.2 - 135.7
	Rated	Output	W	30	54
	Fan Speed	Low	rpm	Cooling; 1,160 - 1,160 Heating; 1,240 - 1,240	-
		Medium	rpm	Cooling; 1,290 - 1,290 Heating; 1,290 - 1,290	-
		High	rpm	Cooling; 1,360 - 1,360 Heating; 1,400 - 1,400	980 - 900
		SuperHigh	rpm	Cooling; 1,400 - 1,400 Heating; 1,400 - 1,400	-
Heat Exchanger	Description			Evaporator	Condenser
	Tube material			Copper	Copper
	Fin material			Aluminium (Pre Coat)	Aluminium (Blue Coat)
	Fin Type			Slit Fin	Corrugated Fin
	Row / Stage			(Plate fin configuration, forced draft)	
				2 × 15	2 × 26
	FPI			21	16
	Size (W × H × L)		mm	810 × 315 × 25.4	769.2 732.9 × 660.6 × 44

Refrigerant Control Device			-	Capillary Tube
Refrigeration Oil		(cm3)	-	SUNISO 4GDID or ATMOS M60 (650)
Refrigerant (R-22)		g (oz)	-	1,540 (54.4)
Thermostat			Electronic Control	Mechanical Control
Protection Device			-	OLP
Capillary Tube	Length	mm	-	Cooling; 910, Heating; 655
	Flow Rate	l/min	-	Cooling; 11.5, Heating; 19.0
	Inner Diameter	mm	-	Cooling; 1.6, Heating; 2.1
Air Filter	MaterialStyle		P.P.Honeycomb	-
Capacity Control			Capillary Tube	
Compressor Capacitor		µF, VAC	-	40 µF, 370VAC
Fan Motor Capacitor		µF, VAC	-	3.0 µF, 450VAC

Note:

- Specifications are subject to change without notice for further improvement.
- (1) - CS-A18CKPG-4/CU-A18CKP6G-4 (USA).
- (2) - CS-A18CKPG-5/CU-A18CKP6G-5 (Canada).

TOP PREVIOUS NEXT

4 Dimensions

TOP PREVIOUS NEXT

CS-A18CK

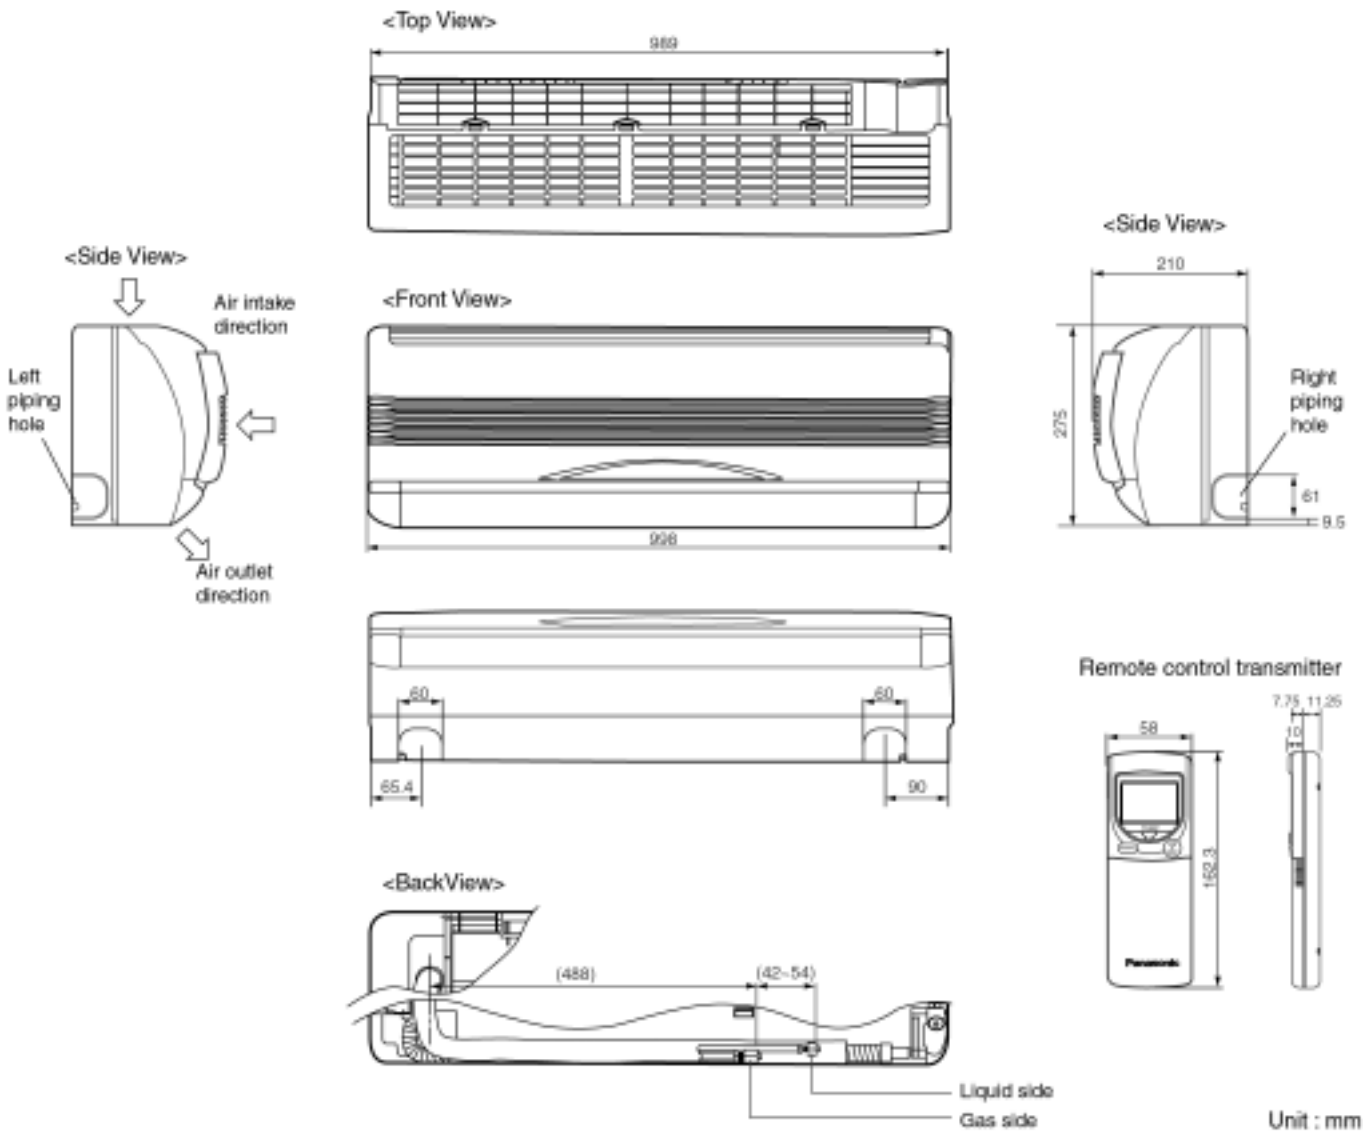

Relative position between the indoor unit and the installation plate <Front View>

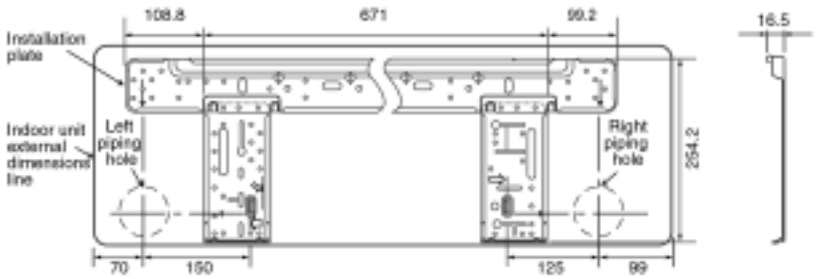

CU-A18CK

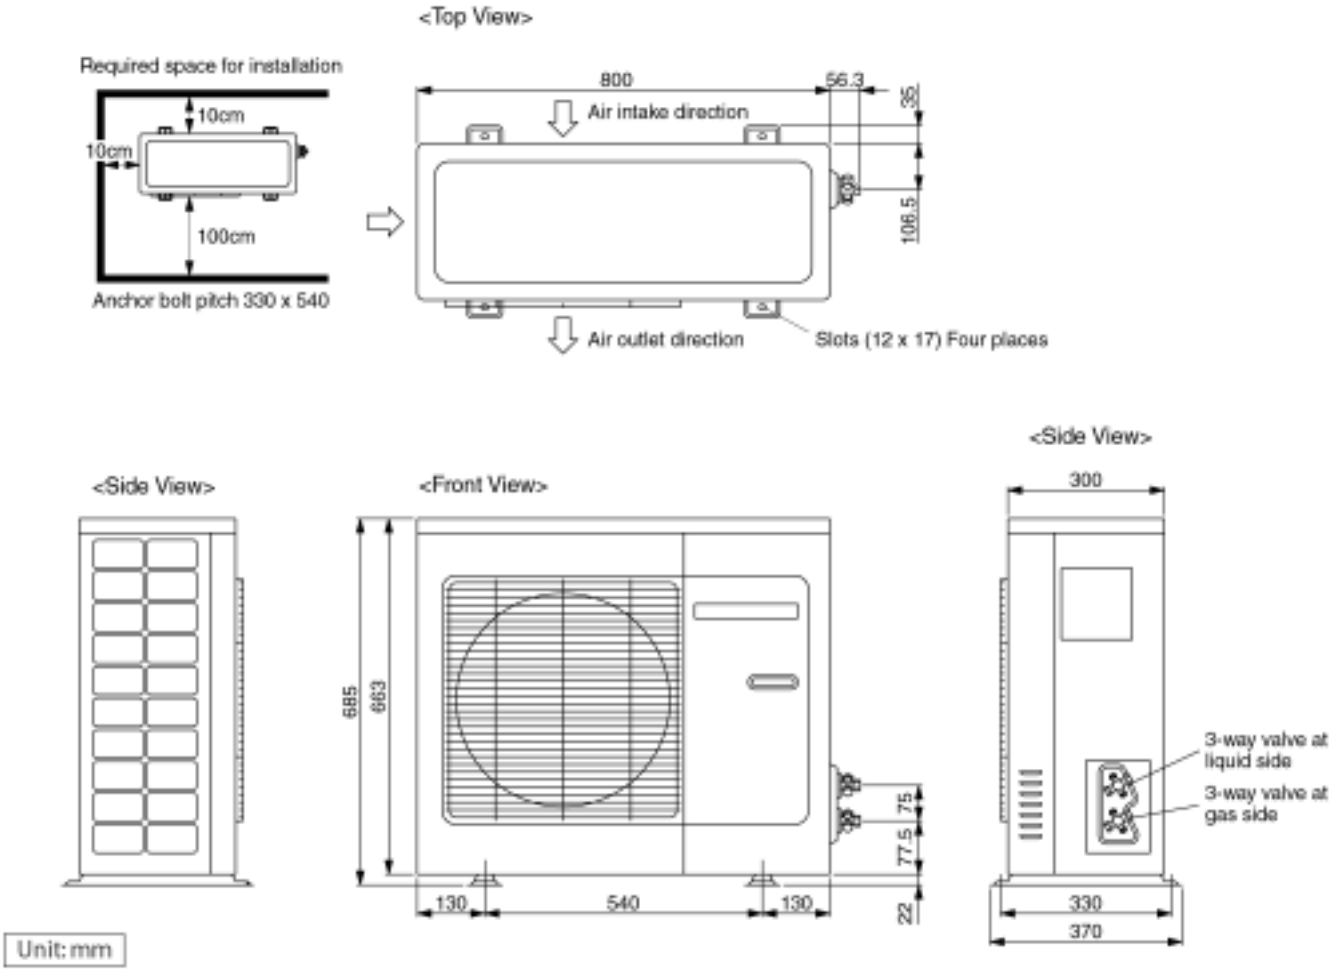

TOP PREVIOUS NEXT

5 Refrigeration Cycle Diagram

CS-A18CK / CU-A18CK

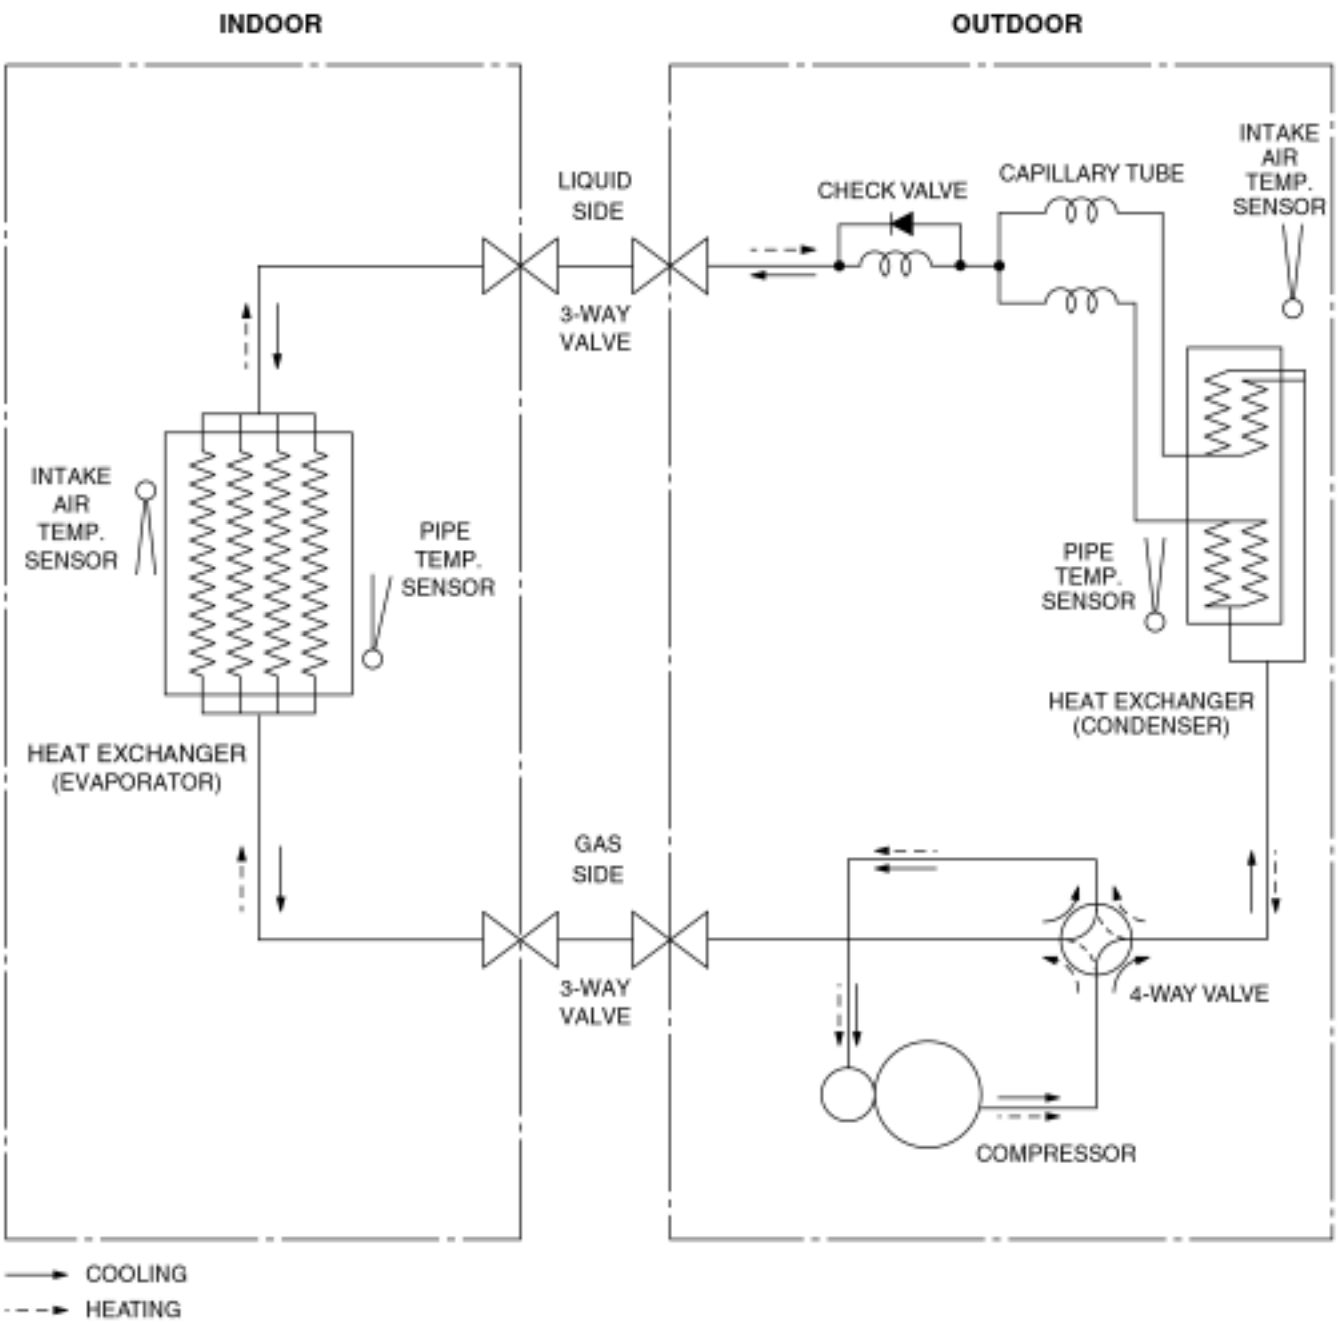

6 Block Diagram

TOP PREVIOUS NEXT

CS-A18CK / CU-A18CK

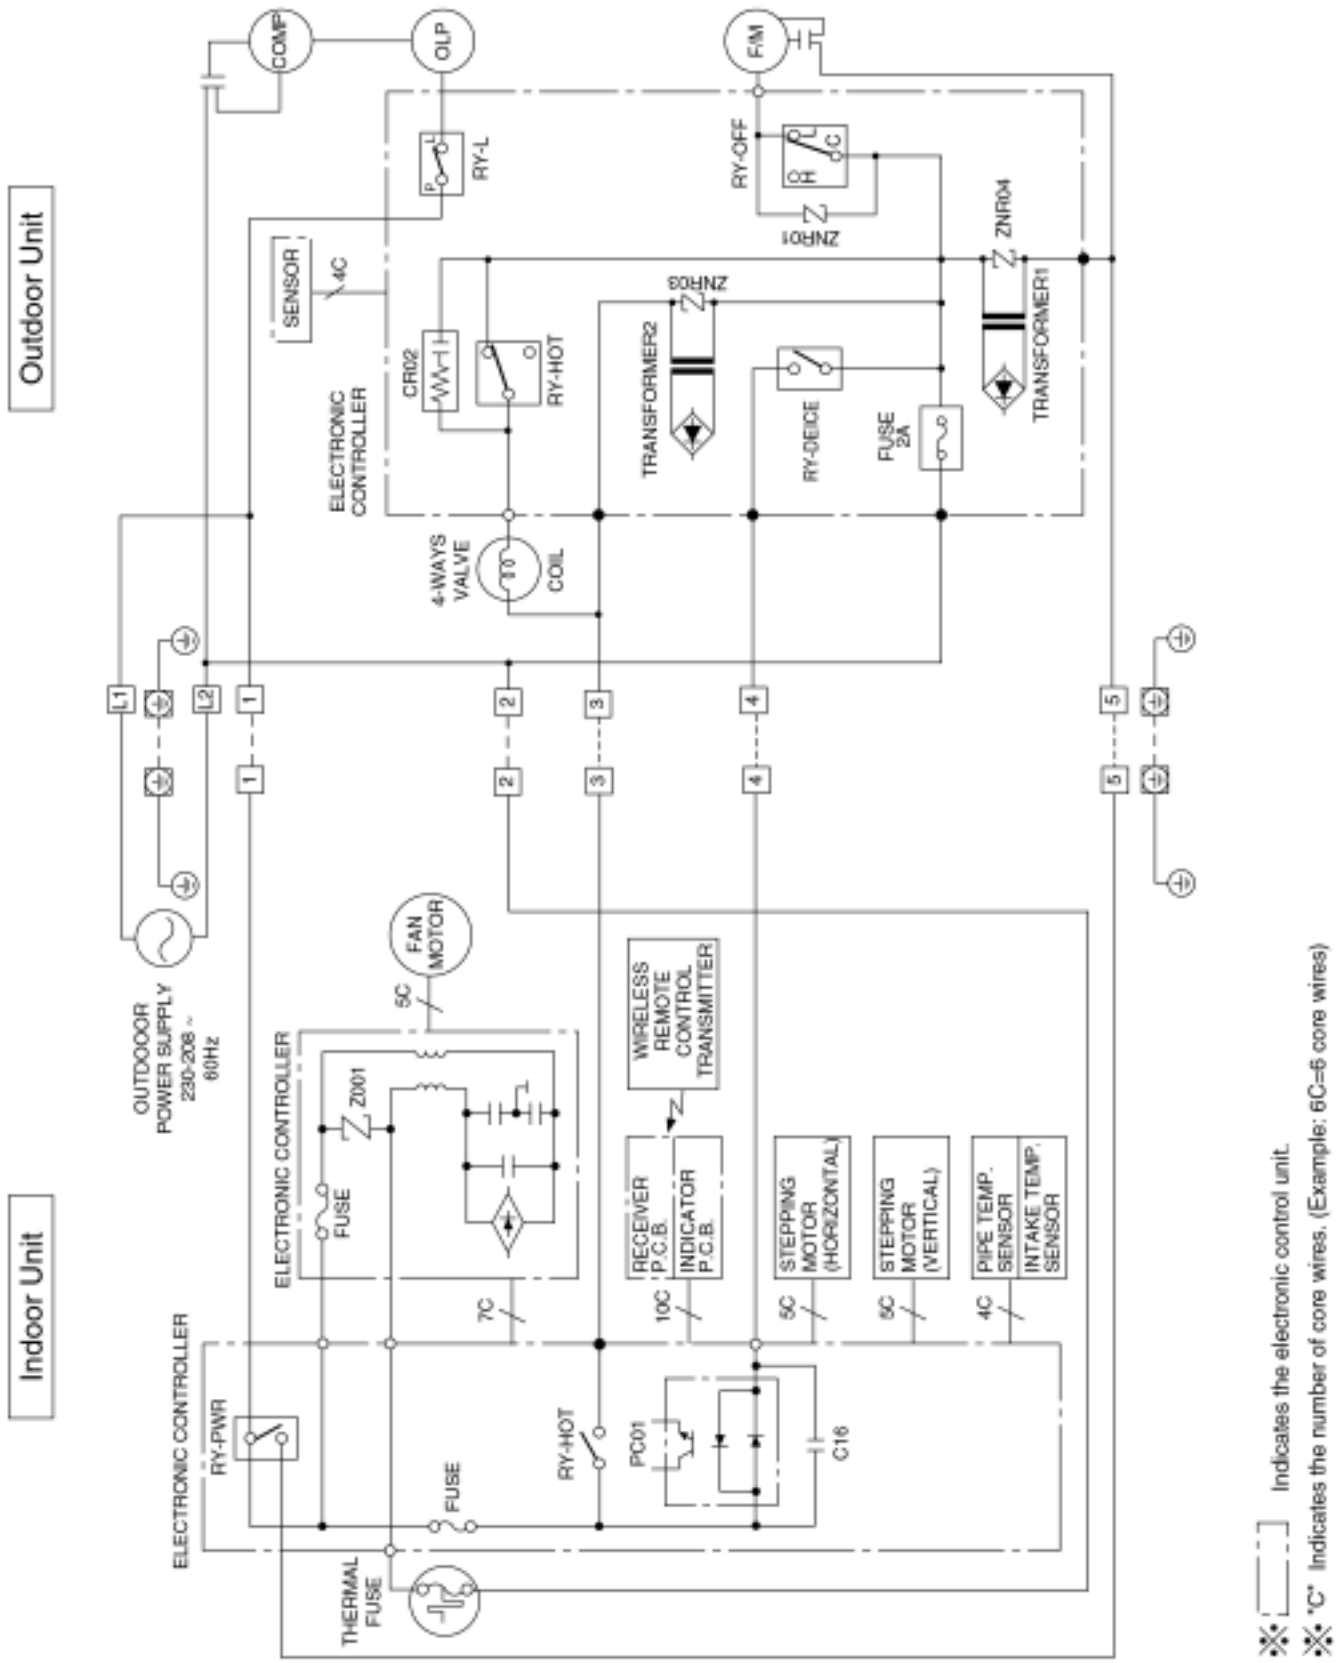

7 Wiring Diagram

CS-A18CK / CU-A18CK

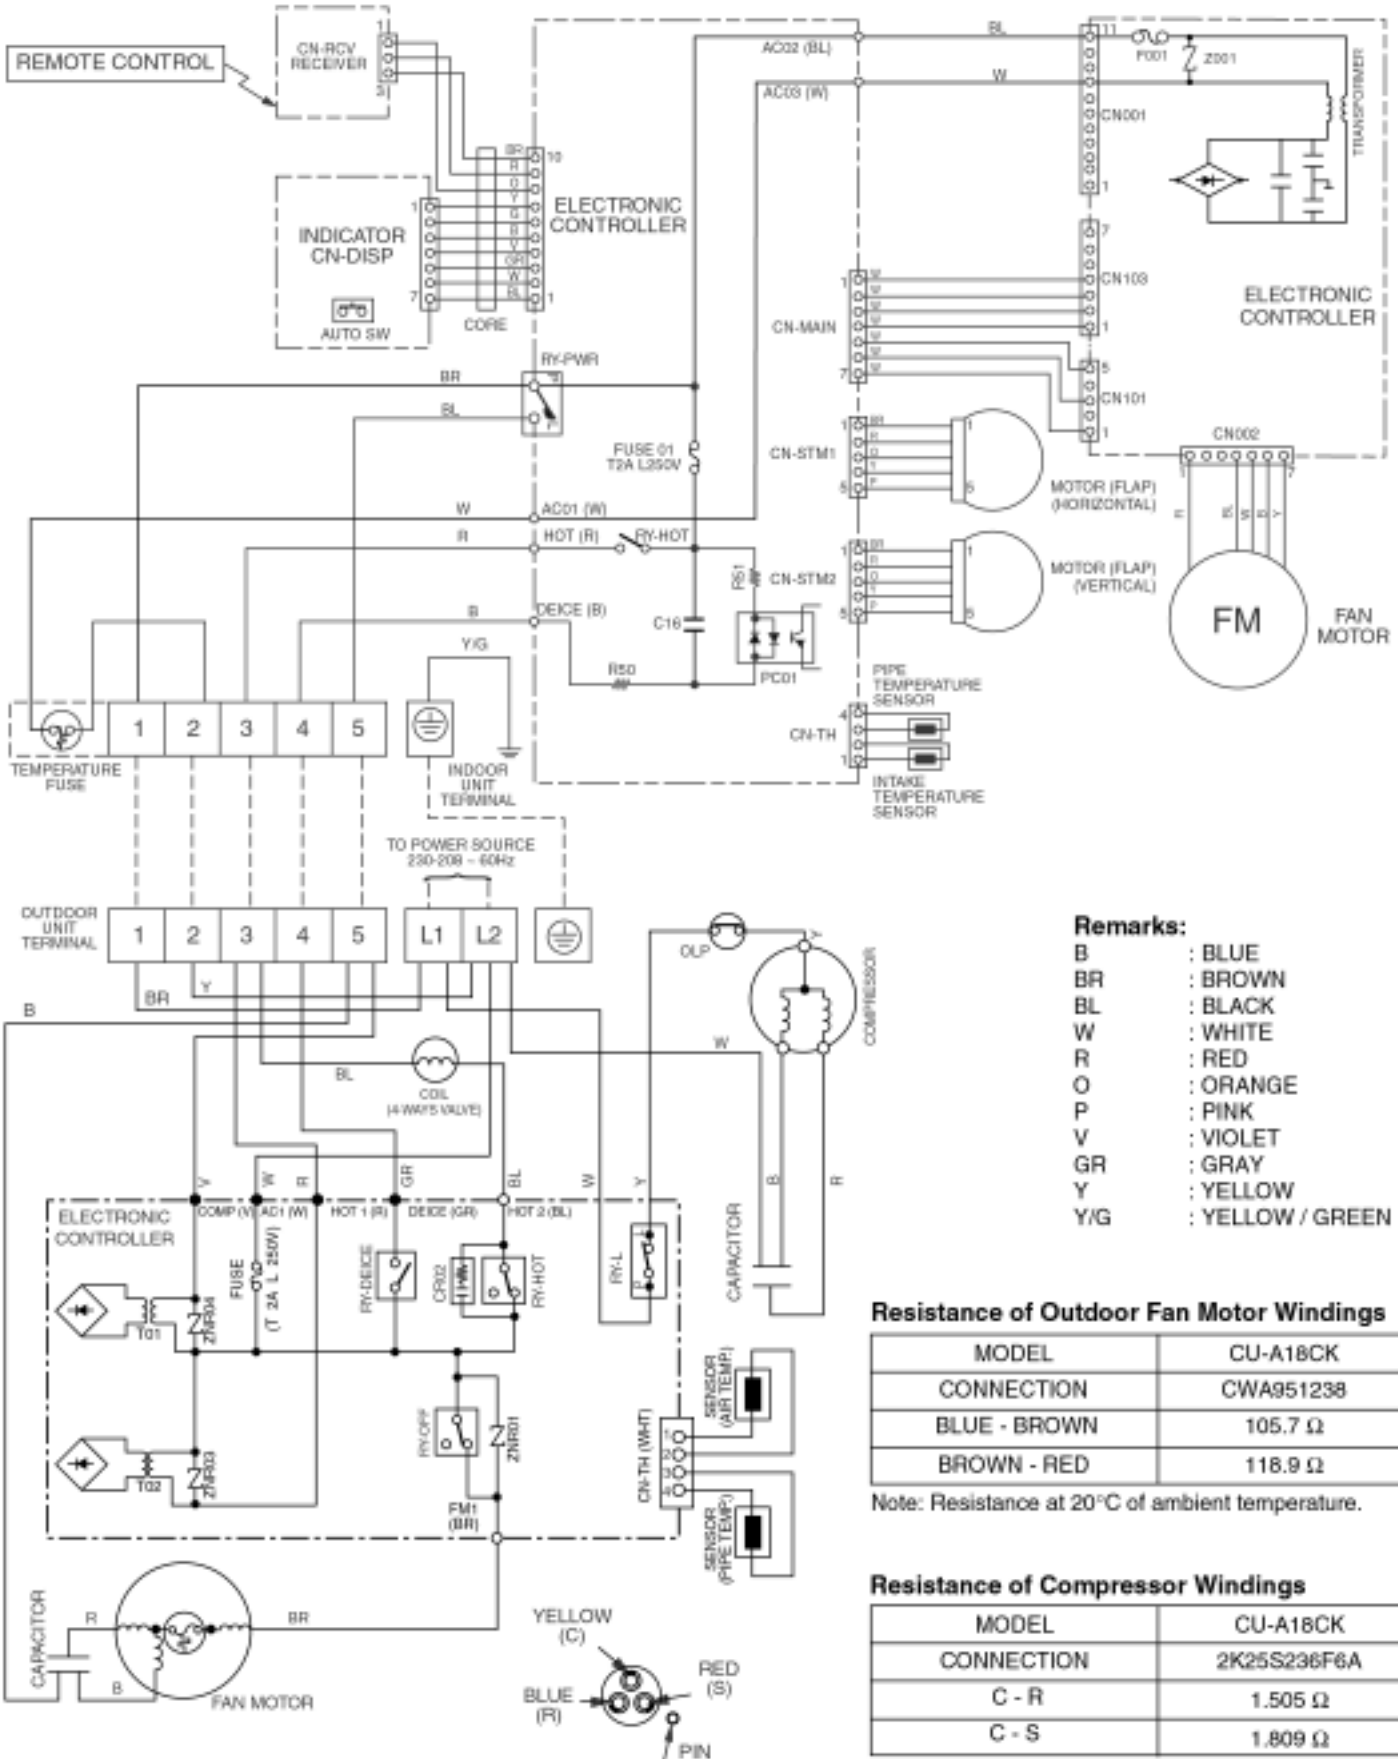

Remarks:

B	: BLUE
BR	: BROWN
BL	: BLACK
W	: WHITE
R	: RED
O	: ORANGE
P	: PINK
V	: VIOLET
GR	: GRAY
Y	: YELLOW
Y/G	: YELLOW / GREEN

Resistance of Outdoor Fan Motor Windings

MODEL	CU-A18CK
CONNECTION	CWA951238
BLUE - BROWN	105.7 Ω
BROWN - RED	118.9 Ω

Note: Resistance at 20°C of ambient temperature.

Resistance of Compressor Windings

MODEL	CU-A18CK
CONNECTION	2K25S236F6A
C - R	1.505 Ω
C - S	1.809 Ω

COMPRESSOR TERMINAL

C - R	1.505 Ω
C - S	1.809 Ω

Note: Resistance at 20°C of ambient temperature.

TOP PREVIOUS NEXT

8 Operation Details

TOP PREVIOUS NEXT

8.1 Cooling Mode Operation

8.2 Soft Dry Mode Operation

8.3 Heating Mode Operation

8.4 Automatic Mode Operation

8.5 Sleep Mode Auto Operation

8.6 Random Auto Restart Control

8.7 Indoor Fan Speed Control

8.8 Airflow Direction Control

8.9 Delay ON Timer Control

8.10 Remote Control Signal Receiving Sound

8.11 Economy Mode Operation

8.12 Powerful Mode Operation

8.13 Low outdoor ambient temperature control

TOP PREVIOUS NEXT

8.1 Cooling Mode Operation

Cooling in operation according to Remote Control setting.

Time Delay Safety Control (3 minutes)

- When the compressor is stopped by Remote Control, it restarts after 3 minutes when the Remote Control is turned ON.
- When the setting temperature is reached during cooling operation, the compressor stops and it will not start for 3 minutes.

7 minutes Time Save Control

- The compressor will start automatically if it has stopped for 7 minutes even if the room temperature is between the compressor ON temperature and OFF temperature.

Anti-Freezing Control

- If the temperature of the indoor heat exchanger falls continuously below 2°C for 4 minutes or more, the compressor turns off to protect the indoor heat exchanger from freezing. The fan speed setting remains the same.
- Compressor will restart again when the indoor heat exchanger temperature rises to 10°C (Recovery).

※ 3 minutes waiting of Time Delay Safety Control is valid for Cooling Operation.

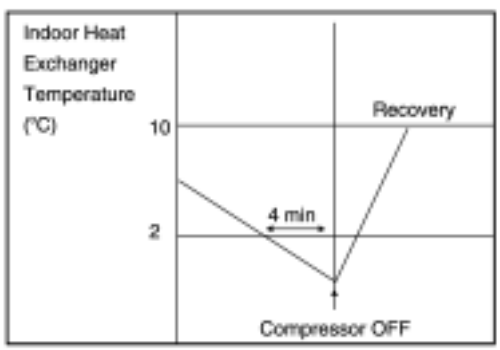

Compressor Reverse Rotation Protection Control

- If the compressor is operating continuously for 5 minutes or longer and the temperature

difference between intake air and indoor heat exchanger is 2.5°C or less for 2 minutes, compressor will stop and restart automatically.
(TimeDelay Safety Control is valid)

▴ T = Intake air temperature - Indoor heat exchanger temperature
This is to protect reverse rotation of the compressor when there is a instantaneous power failure.

Anti-Dew Formation Control

- Purpose is to prevent dew formation on indoor unit air discharge area.
- When the following conditions occur for 30 minutes continuously, anti-dew formation is controlled by indoor fan speed shift to low (Changed to Lo+):
  - Indoor intake air temperature is more than 24°C and less than 30°C.
  - Remote Control setting temperature is less than 25°C.
  - Compressor is on.
  - Cooling operation mode.
  - Indoor Fan motor operate at Low fan speed.
- This control is cancelled immediately when above condition is changed.

Automatic Fan Speed Mode

When Automatic Fan Speed is selected at Remote Control during cooling operation.

- Fan speed rotates in the range of Hi to Me.
- Deodorizing Control.

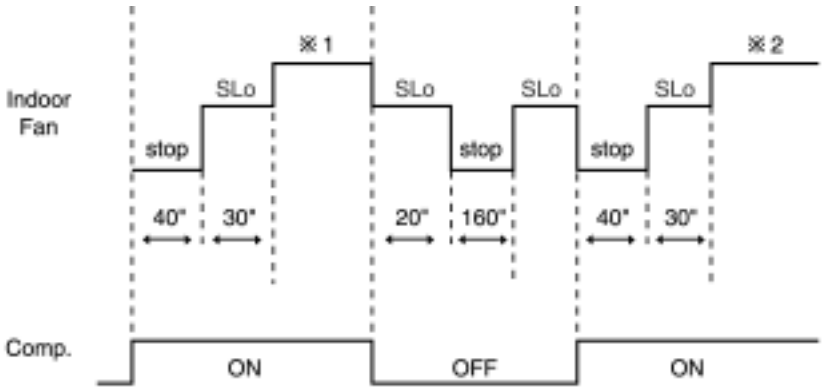

※ 1 Fan Speed is Hi until the compressor stops (when the room temperature reaches setting temperature).

※ 2 Fan Speed is Me after the compressor restarts.

Cooling Operation Time Diagram

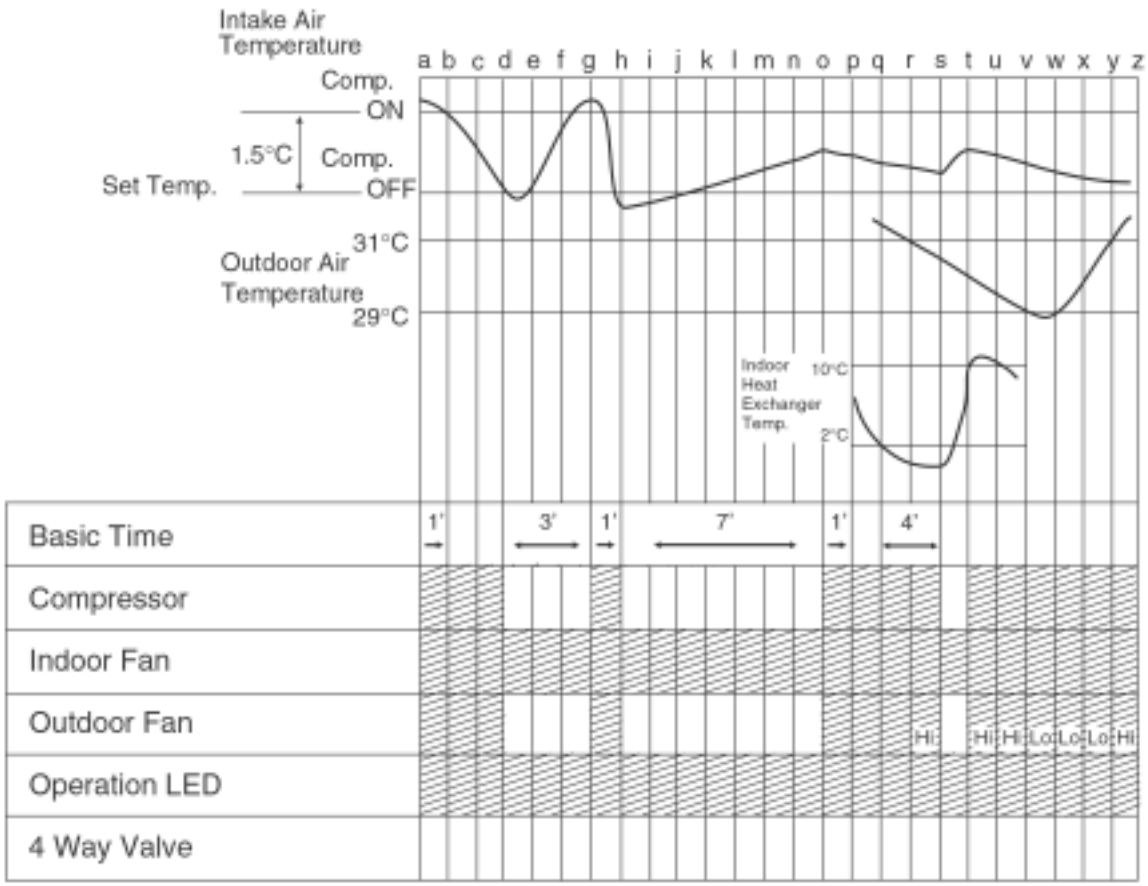

<Description of operation>

d – g : Time Delay Safety Control (waiting for 3 minutes)
g – h : 60 sec. Forced Operation
h – o : 7 min. Time Save Control
q – t : Anti Freezing Control
v – y : Outdoor Fan Control

Operation

Stop

TOP PREVIOUS NEXT

8.2 Soft Dry Mode Operation

- The unit starts cooling operation until the room temperature reaches the setting temperature set on the Remote Control, and then Soft Dry operation will start.
- During Soft Dry operation, the Indoor Fan will operate at SLo speed.
- Once room temperature reaches below Soft Dry OFF temperature. Indoor Fan, Compressor and Outdoor Fan stop for 6 minutes.

Time Delay Safety Control

- Once the compressor stops, it will not start for 3 minutes during Cooling operation.

Anti-Freezing Control

- Same as Anti-Freezing Control for Cooling Mode operation. (For Soft Dry region, 6 minutes waiting is valid during compressor stops.)

Compressor Reverse Rotation Protection Control

- Same as Compressor Reverse Rotation Protection Control for Cooling Mode Operation. (For Soft Dry region, 6 minutes waiting is valid during compressor stops.)

Anti-Dew Formation Control

- Same as Anti-Dew Formation Control for Cooling Mode operation.

Automatic Fan Speed Mode

When Automatic Fan Speed is selected at Remote Control during Soft Dry operation.

- Fan speed off and on at SLo speed.
- Deodorizing Control.

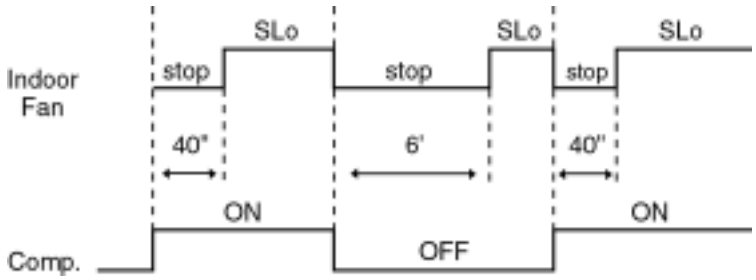

Soft Dry Operation Time Diagram

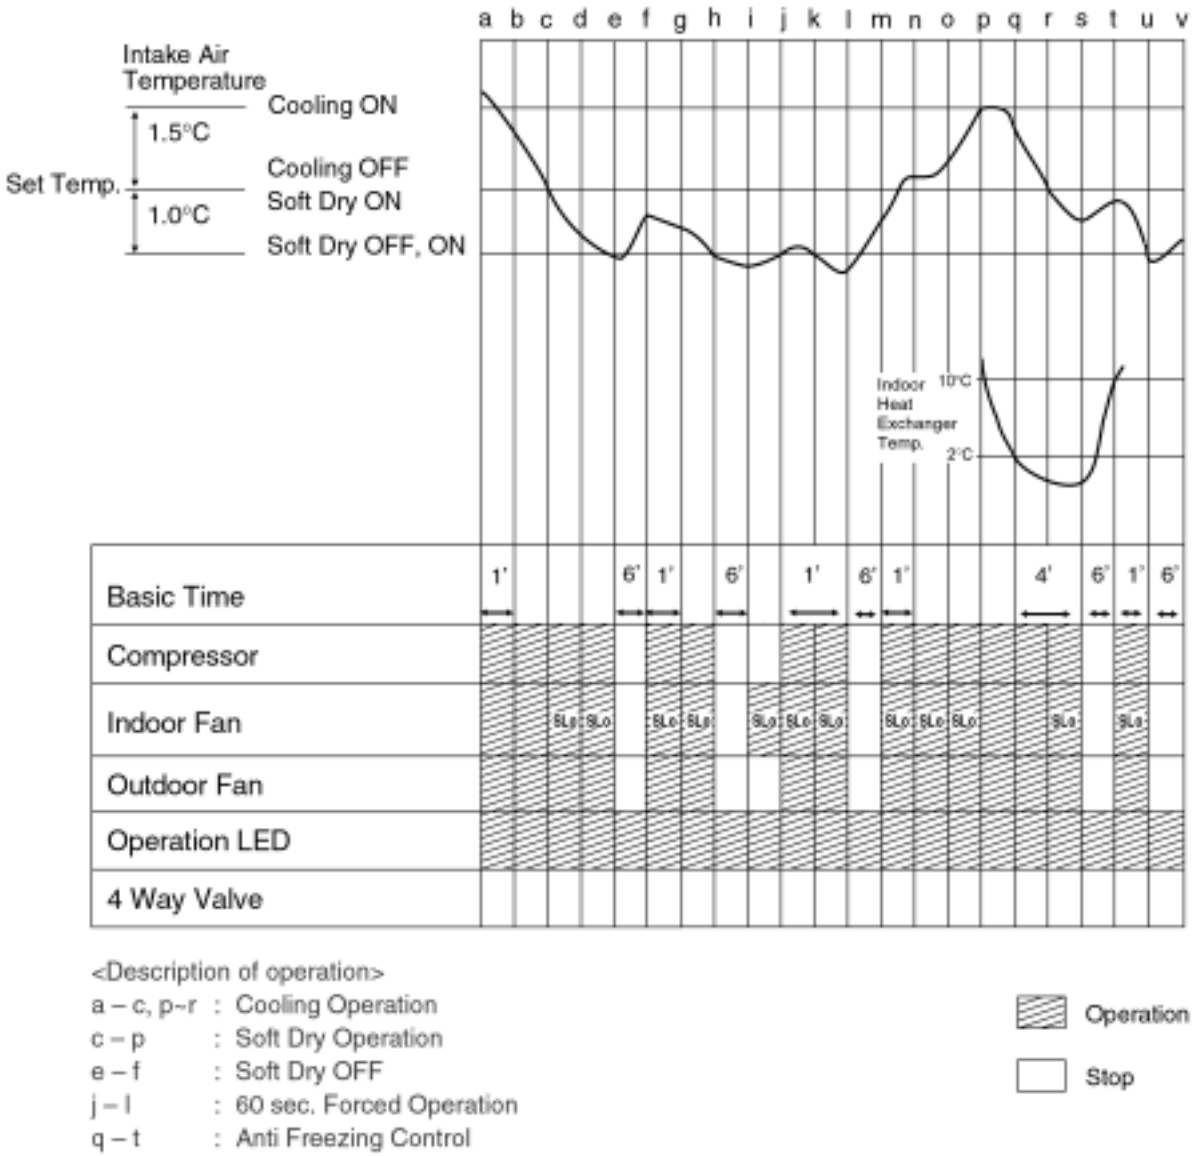

<Description of operation>

a – c, p~r : Cooling Operation
c – p : Soft Dry Operation
e – f : Soft Dry OFF
j – l : 60 sec. Forced Operation
q – t : Anti Freezing Control

Operation

Stop

TOP PREVIOUS NEXT

8.3 Heating Mode Operation

- Heating in operation according to Remote Control setting.

Time Delay Safety Control

- When the compressor is stopped by Power Switch, Remote Control or there is a power failure, it restarts after 3 minutes when the Power Switch, Remote Control is turned ON or the power supply is resumed.

- When the setting temperature is reached during heating operation, the compressor stops and it will not start for 4 minutes.

Overload Protection Control

(a) Outdoor Fan Control

- If the temperature of the Outdoor Heat Exchanger less than -3°C, Outdoor Fan is ON. The Outdoor Fan stop, when Outdoor Heat Exchanger temperature is Tb or more according to Outdoor Air Temperature region as table below:

  The Outdoor Fan restarts when the indoor heat exchanger temperature falls to 49°C.

Outdoor Air Temperature	<10°C	≥10°C – <15°C	≥15°C – <20°C	≥20°C – <25°C	≥25°C	Outdoor Fan OFF
T_b	≥5°C	≥4°C	≥3°C	≥2°C	≥1°C	

During starting of Heating mode and after deice, Outdoor Fan ON for 90 sec. (Hi).

(b) Compressor High Pressure Control

- If the indoor heat exchanger becomes 68°C or more, the compressor will stop and restart automatically.

  (Time Delay Safety Control - 4 minutes waiting).

4-way Valve Control

- 4-way valve ON during Heating operation, except deicing operation.
- When the unit is switched to OFF during Heating operation, 4-way valve stays at Heating position for 5 minutes.

Hot Start Control

When Heating operation starts, Indoor Fan will not start until the indoor heat exchanger reaches 30°C as diagram shown.

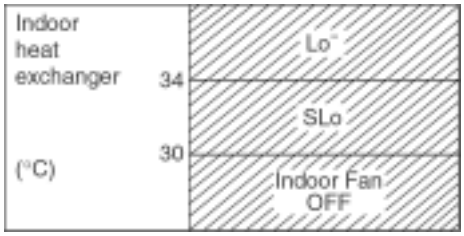

Hot Start is completed when indoor heat exchanger reaches 42°C.

Maximum Hot start duration = 4 minutes. After 4 minutes,

Hot start operation will be shifted to normal Heating operation.

Automatic Fan Speed Mode

When Automatic Fan Speed is selected at Remote Control during heating operation.

- Fan speed rotates in the range of Me → SLo according to the heat exchanger temperature.

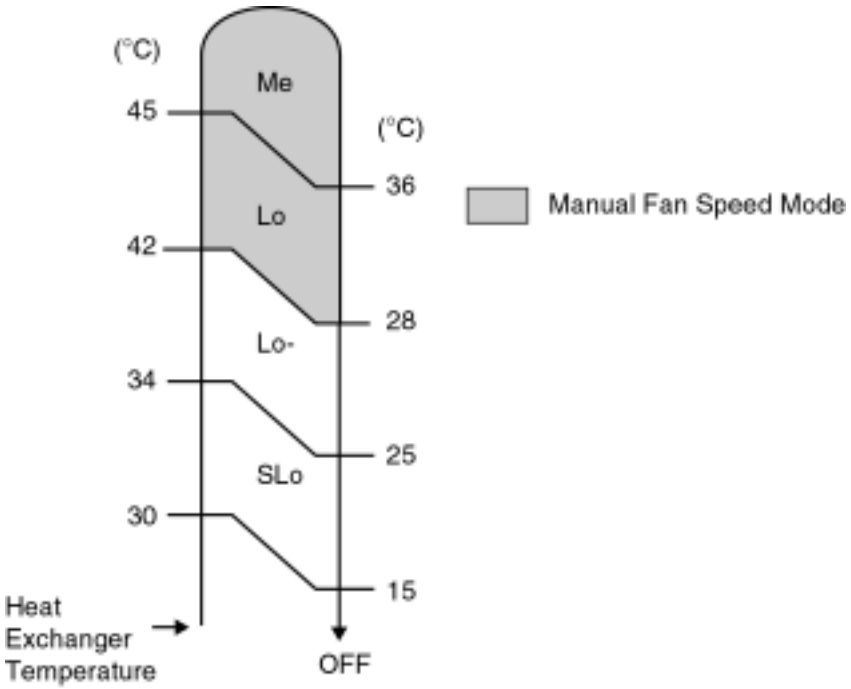

Anti Cold Draft Control

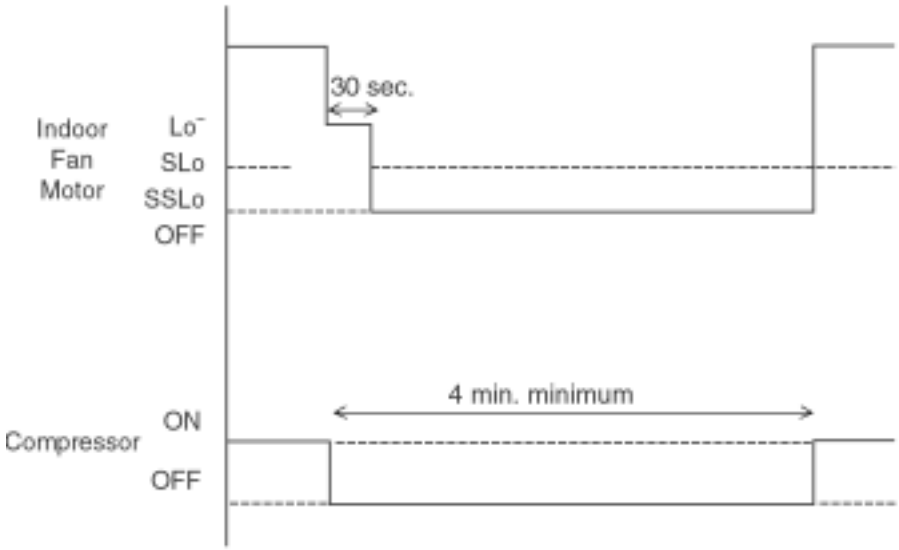

When COMP = Thermal OFF, indoor fan speed immediately changed to Lo⁻ for 30 sec., follow by SSLo speed until COMP = ON.

Heating Operation Time Diagram

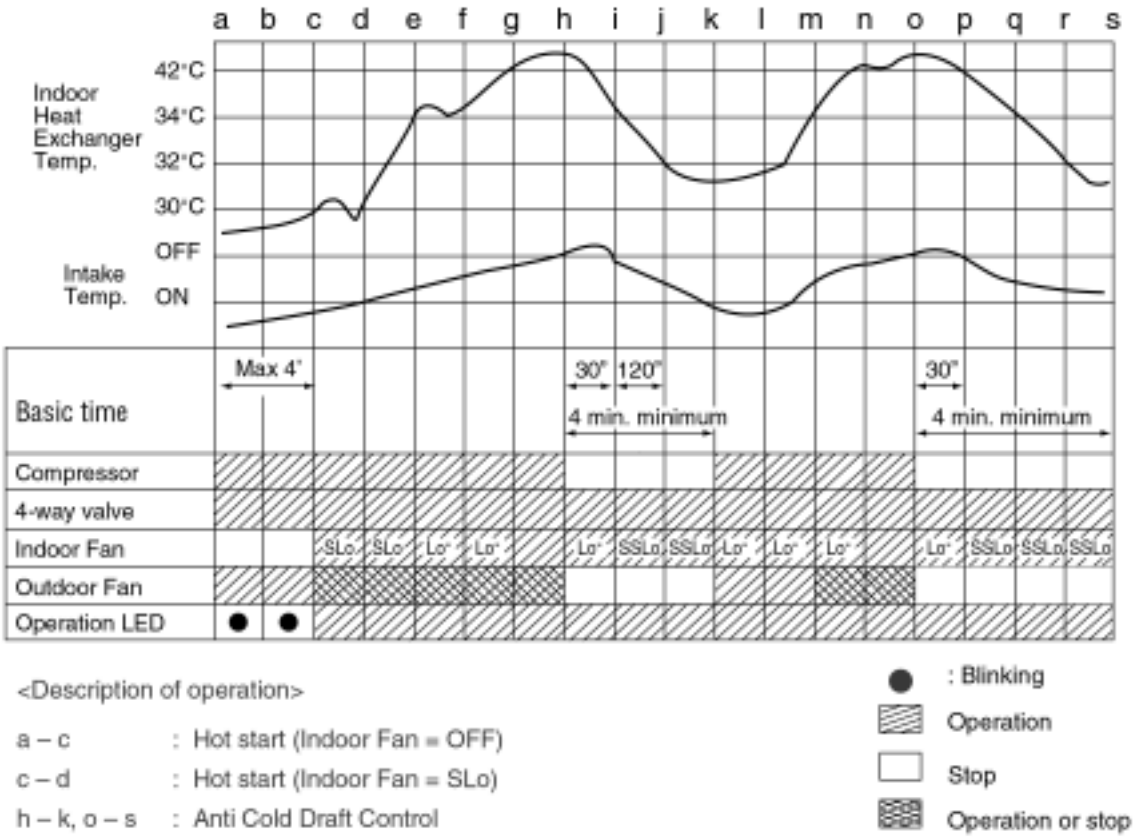

Deicing Control

Deice starts to prevent frosting at outdoor heat exchanger.

- Normal Deicing

  Deice operation detection commences in Heating operation starts or 60 minutes after previous deice operation. If the outdoor piping temperature drops to -4°C for 50 sec. continuously during compressor is in operation, deice will start.

  (There is no detection during Outdoor Fan stops.)

- Overload Deicing

  During heating operation, if the outdoor Fan OFF duration (due to overload control) is accumulated up to 60 minutes and after compressor starts for 1 minutes, deicing starts.

- Deicing ends when

  (a) 12 minutes after deicing operation starts;

  (b) The outdoor piping temperature rises to about 12°C.

- After deicing operation, compressor stops for 30 seconds and 4-way valve stays at cooling position for 10 seconds.

a) Normal Deicing Time Diagram

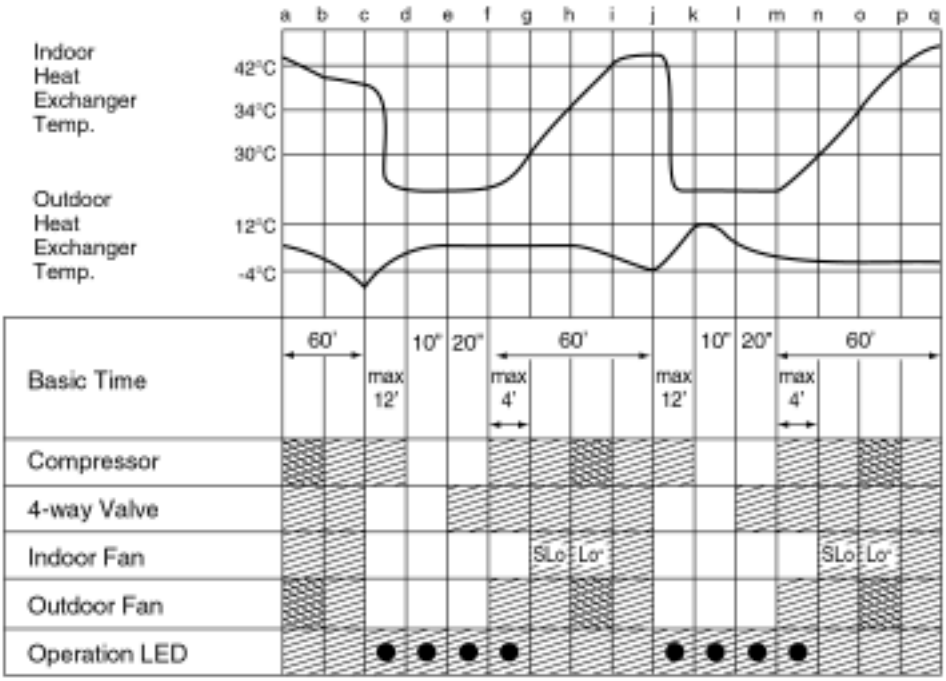

<Description of operation>

a – c : Deicing operation judging condition established
c – f : Deicing operation
f – g : Hot start (add 4 minute delay timing)

● : Blinking
Operation
Stop
Operation or stop

(b) Overload Deicing Time Diagram

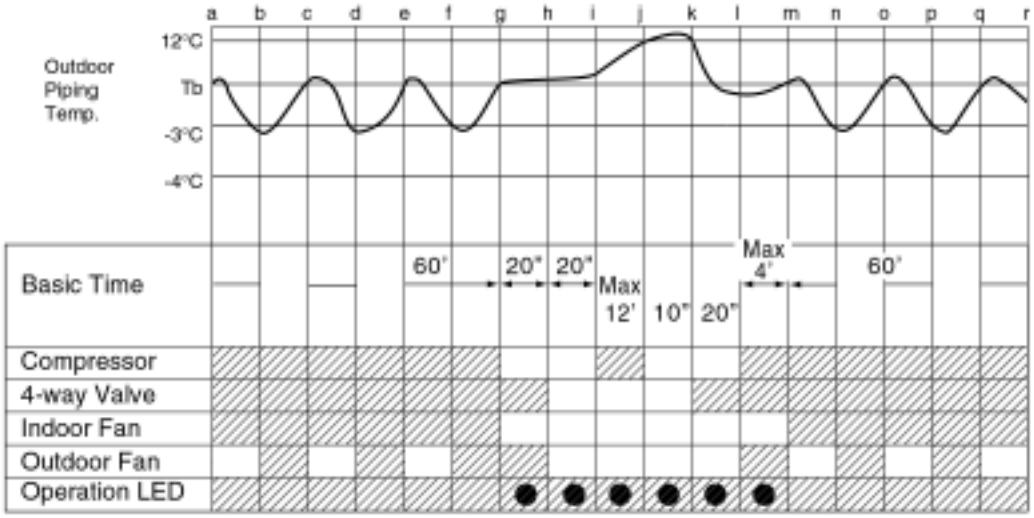

<Description of operation>

a – i : Overload control
i – l : Overload deicing
l – m : Hot start
m – r : Overload control
g – i : Preparation for overload deicing (For normal R22 control, operation for g – i is not included, applicable only for new refrigerant model).

● : Blinking
Operation
Stop

TOP PREVIOUS NEXT

8.4 Automatic Mode Operation

1. When the Automatic Mode Operation is selected, the indoor fan operates at SLo fan speed for 25 seconds to sense intake air temperature and determine the 1st operation mode. If indoor intake air temperatureis less than 16°C, Heating mode will immediate operate.

Standard for Determining Operation Mode
1st Judgement

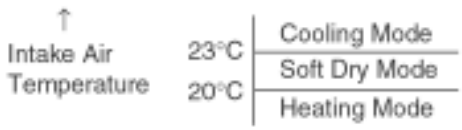

Operation Mode	Setting Temperature (Standard)
Cooling	25°C
Soft Dry	22°C
Heating	21°C

2. Operation mode will be determine again after 1 hour of operation, if the room temperature reaches to set temperature and compressor off time is over 7 minutes 30 seconds continuously.

※ The present operation mode will be continued, if the room temperature does not reach to set temperature (Compressor keeps running) even though after 1 hour from automatic operation mode started.

Standard for Determining Operation Mode
2nd Judgement onwards

Present Mode	Judgement		Next Mode		
			Cooling	Soft Dry	Heating
			O		O
Cooling	23°C	Cooling	(Judgement:	Not Applicable	(Judgement:
		Heating	23°C & Above)		Below 23°C)
				O	O
Soft Dry	23°C	Soft Dry	Not Applicable	(Judgement:	(Judgement:
		Heating		23°C & Above)	Below 23°C)
			O		O
Heating		Cooling	(Judgement:	Not Applicable	(Judgement:
	23°C	Heating	Above 23°C)		23°C & below)

※ Automatic Set TemperatureRefer 3. as below.

3. Automatic Set Temperature

For each operation, set temperature will automatically set as shown below.

However it can be selected 2°C higher or 2°C lower from standard set temperature by pressing the Room Temperature Setting button .

Operation	Hi	(Standard)	Lo
	(+2°C)	(±0°C)	(-2°C)
Cooling	27°C	25°C	23°C
Soft Dry	24°C	22°C	20°C
Heating	23°C	21°C	19°C

- The mode judging temperature and standard setting temperature can be increased by 2°C, by open the circuit of JX1 at indoor electronic controller.

	Setting Temperature (Standard)
Cooling Mode	27°C
Soft Dry Mode	24°C
Heating Mode	23°C

TOP PREVIOUS NEXT

8.5 Sleep Mode Auto Operation

Cooling or Soft Dry Operation

Purpose is to obtain a comfortable room temperature while sleeping. When you press the SLEEP Mode, the following movement will start to avoid overcooling.

- Sleep shift operation starts, when the room temperature reaches the setting temperature or after 1 hour of operation.
- The setting temperature will be risen by 0.5 °C at the start of operation and by 0.5 °C one hour later.
- The airflow volume will automatically change to Lo fan speed.
- Sleep Mode operation time is 8 hours, the operation will be stop after 8 hour.
- When used together with the Timer, the Timer has priority.

Heating Operation

Purpose is to obtain a comfortable room temperature while sleeping. When you press the SLEEP Mode, the following movement will start to avoid overheating.

- Sleep shift operation starts, when the room temperature reaches the setting temperature or after 1 hour of operation.
- The setting temperature will be decrease by 2 °C at the start of operation and by 3 °C one hour later.
- The fan speed refer to Indoor Fan Motor Control.
- Sleep Mode operation time is 8 hours, the operation will be stop after 8 hour.
- When used together with the Timer, the Timer has priority.

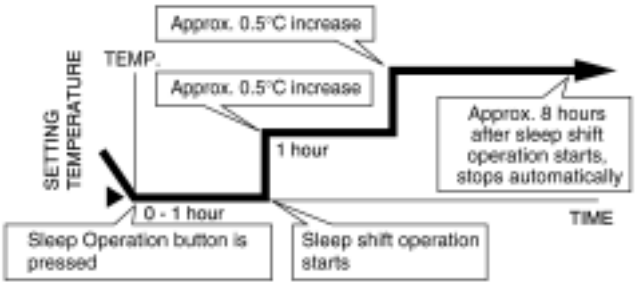
Approx. 0.5°C increase
TEMP.
Approx. 0.5°C increase
SETTING TEMPERATURE
1 hour
Approx. 8 hours after sleep shift operation starts, stops automatically
0 - 1 hour
TIME
Sleep Operation button is pressed
Sleep shift operation starts

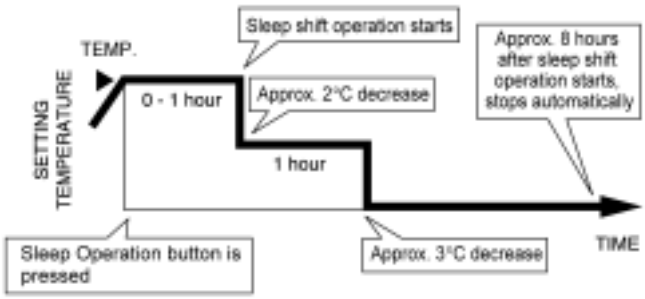
Sleep shift operation starts
TEMP.
Approx. 8 hours after sleep shift operation starts, stops automatically
SETTING TEMPERATURE
0 - 1 hour
Approx. 2°C decrease
1 hour
TIME
Sleep Operation button is pressed
Approx. 3°C decrease

8.6 Random Auto Restart Control

- If there is a power failure, operation will be automatically restarted after 3 to 4 minutes when the power is resumed.

  It will start with previous operation mode and airflow direction.

- Restart time is decided randomly using 4 parameter:-

  Intake air temperature, setting temperature, fan speed and Air Swing Blade position.

- Auto Restart Control is not available when Timer or Sleep Mode is set.

- This control can be omitted by open the circuit of JX2. (Refer Circuit Diagram)

8.7 Indoor Fan Speed Control

- Auto Fan Speed Control

  When set to Auto Fan Speed, the fan speed is adjusted between maximum and minimum setting as shown in the table.

- Manual Fan Speed Control

  Basic fan speed adjustment (3 settings, from Lo to Hi) can be carried out by using the Fan Speed selection button at the remote control.

Tap				SHi	Hi	Me	Lo+	Lo	Lo-	SLo	SSLo	Stop
Cooling	Normal	Airflow volume Manual	Hi		○							
			Me			○						
			Lo					○				
		Airflow volume Auto			○	○				○		○
		Sleep Shift							○			
	Powerful	Airflow volume Manual		○								
		Airflow volume Auto		○								
		Sleep Shift							○			
	Economy	Airflow volume Manual								○		
		Airflow volume Auto								○		
		Sleep Shift							○			
Soft Dry	Normal, Powerful, Economy	Airflow volume Manual								○		○
		Airflow volume Auto								○		○
		Sleep Shift							○			
Heating	Normal	Airflow volume Manual	Hi	○					○	○	○	○
			Me			○			○	○	○	○
			Lo				○		○	○	○	○
		Airflow volume Auto				○	○		○	○	○	○
		Sleep Shift							○	○	○	○
	Powerful	Airflow volume Manual		○		○	○		○	○	○	○
		Airflow volume Auto				○	○		○	○	○	○
		Sleep Shift							○	○	○	○
	Economy	Airflow volume Manual		○		○	○		○	○	○	○
		Airflow volume Auto				○	○		○	○	○	○
		Sleep Shift							○	○	○	○

8.8 Airflow Direction Control

Vertical Airflow Direction Auto-Control

- When set a Airflow Direction Auto-Control with remote control, the louver swings up and down as shown in the diagram.
- The louver does not swing when the Indoor Fan Motor stops during operation at the upper limit.
- When stopped with remote control, the discharge vent is reset, and stopped at the closing position.
- During Anti-dew condensation prevention, Airflow Direction Auto-control angle change from 0° - 36° to 12° - 28° under Cooling and Soft Dry operation mode.

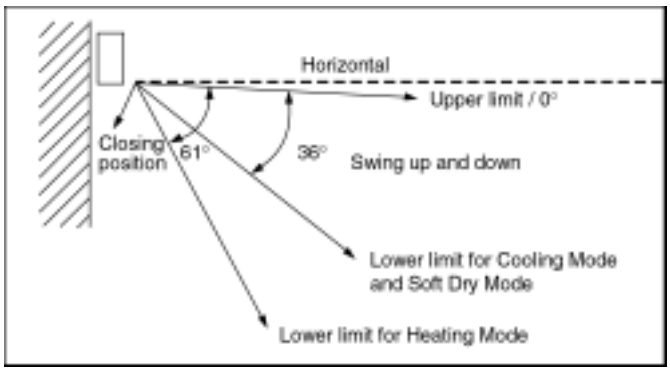

※ 1. There is no swinging while indoor fan motor is stopped during Cooling and Soft Dry operation.

※ 2. When the intake air temperature reaches 38°C, the louver is changed from upper to lower limit. When the intake air temperature falls to 35°C, the louver is changed from louver to upper limit.

Vertical Airflow Direction manual Control

- When the manual Airflow Direction Selection Button is pressed, the automatic airflow is released and the airflow direction louver move up and down in the range shown in the diagram.

  The louver can be adjusted by pressing the button to the desired louver position.
- When the remote control is used to stop the operation, the discharge vent is reset, and stopped at the closing position.
- During Anti-dew condensation prevention, Airflow Direction Manual control angle change from 14°, 19°, 24°, 30°, 36° to 16°, 18°, 20°, 22°, 24° under Coolingand Soft Dry operation

mode.

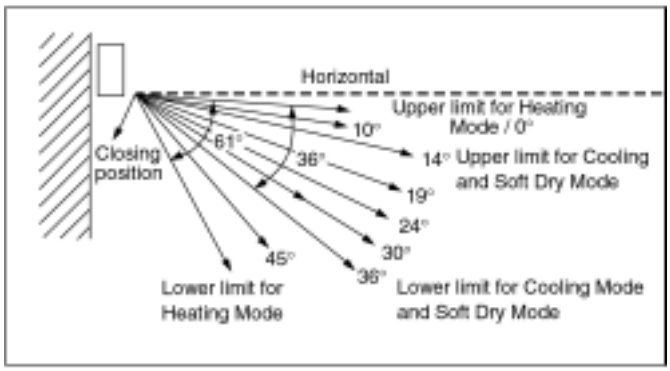

Horizontal Airflow Direction Auto-Control

- When set a Airflow Direction Auto-Control with remote control, the vanes swings left and right as shown in the diagram.
- The vanes does not swing when the Indoor Fan Motor stops during operation at 22° angle.
- When stopped with remote control, the discharge vent is reset, and stopped at the reset position.
- During Anti-dew condensation prevention, Airflow Direction Auto-control angle change from 0° - 44° to 14° - 30° under Cooling and Soft Dry operation mode.

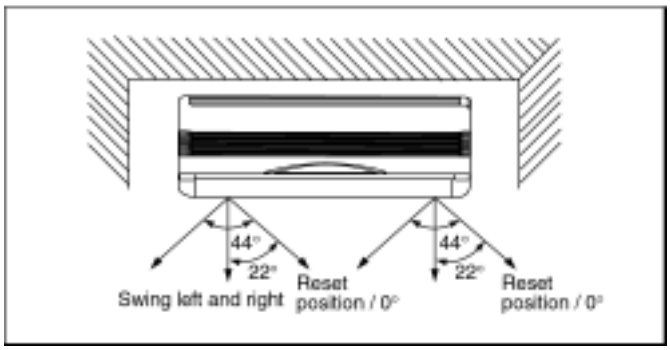

※ 1. There is no swinging while indoor fan motor is stopped during Cooling and Soft Dry operation.

※ 2. In Heating operation, when the intake air temperature reaches set temperature, the airflow direction is Auto Swing left and right. When the intake air temperature falls to 2°C lower than set temperature,the airflow direction is stop at 22° angle.

Horizontal Airflow Direction manual Control

- When the manual Airflow Direction Selection Button is pressed, the automatic airflow is released and the airflow direction vane move left and right in the range shown in the diagram.

The louver can be adjusted by pressing the button to the desired vane position.

- When the remote control is used to stop the operation, the vanes is reset, and stopped at reset position.

- During Anti-dew condensation prevention, Airflow Direction Manual control angle change from 0°, 11°, 22°, 33°, 44° to 14°, 18°, 22°, 26°, 30° under Coolingand Soft Dry operation mode.

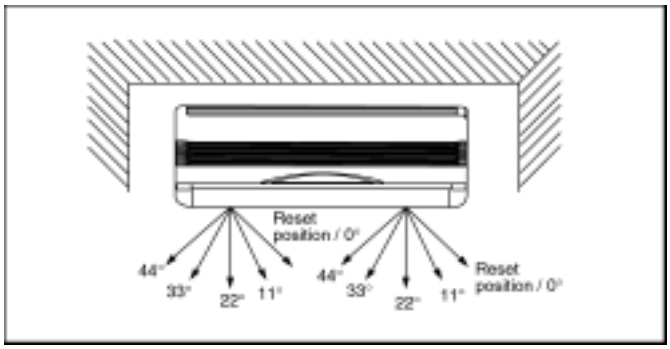

TOP PREVIOUS NEXT

8.9 Delay ON Timer Control

- When the Delayed ON Timer is set by using the remote control, the unit will start operate slightly before the set time, so that the room will reach nearly to the set temperature by the desired time.
- For Cooling and Soft Dry mode, the operation will start 15 minutes before the set time.
- For Heating mode, the operation will start 30 minutes before the set time.
- For Automatic mode, the indoor fan will operate at SLo speed for 25 seconds, 30 minutes before the set time to detect the intake air temperature to determine the operation mode. The operation indication lamp will blink at this time.

8.10 Remote Control Signal Receiving Sound

- Long beep sound will be heard when:-
    - Stopping the Air Conditioner using ON/OFF switch.
    - Stopping the Sleep Mode.
    - Stopping the Powerful Mode.
    - Stopping the Economy Mode.
- Short beep sound will be heard for others.
- To switch off the beep sound:-

  Press the Automatic Operation Button continuously for 10 seconds or more (beep beep will b heard at the 10th second).

  Repeat the above if you want to switch ON the beep sound.

  ※ However, if the Automatic Operation Button has been pressed the Automatic operation will be activated. If you do not require this operation, you may change it by using the remote control.

8.11 Economy Mode Operation

Purpose of this operation is to save or reduced electrical power consumption of the room air conditioner.

However consumer is advised to use Economy Mode operation after the room temperature reaches the desired temperature.

1. Cooling and Soft Dry Mode

   - When the Economy Mode is set, the set temperature will be automatically increased 0.5°C against the present setting temperature. This operation automatically will be running under SLo Fan speed.

   - Vertical Airflow Direction:-

     In Manual or Auto setting, the vane will automatically change to Auto Air Swing.

2. Heating Mode

   - When the Economy Mode is set, the temperature will be automatically decreased 0.5°C against the present setting temperature.

   - The Fan Speed will shift as shown below:

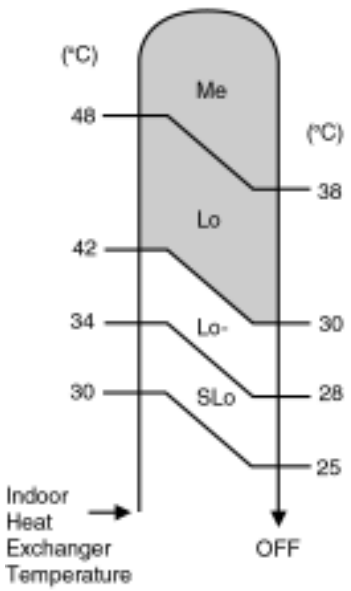

- When the Auto Fan speed is selected, the fan speed will automatically change from Lo to Me depending to the Indoor piping temperature.
- When the manual Fan Speed is selected, the fan speed will automatically change to Lo, then follows set fan speed when the Indoor piping temperature reaches 42°C.

Set Fan Speed

3. Vertical Airflow Direction:-

In Manual or Auto setting, the vane will automatically change to Auto Air Swing.

4. Economy Mode will stop if:

- Economy mode button is pressed again.
- Stopped by ON / OFF switch.
- Timer-off activates.
- Powerful mode button is pressed.
- Fan Speed control button is pressed.
- Sleep mode button is pressed ON.
- Operating mode is changed.
- Air Swing condition is changed.

TOP PREVIOUS NEXT

8.12 Powerful Mode Operation

Purpose of this operation is to be obtain the setting temperature quickly.

1. Cooling and Soft Dry Mode

   - When the Powerful Mode is set, the set temperature will be automatically decreased 3°C against the present setting temperature. This operation automatically will be running under SHi Fan Speed (Cooling), SLo Fan Speed (Soft Dry).

   - Vertical Airflow Direction:-

     In Manual setting, the vane will automatically shift down 10° lower than previous setting.

     In Auto setting, the vane will automatically swing up and down. However the upper and down. However the upper and lower limit will be shifted 10° downward.

2. Heating Mode

   - When the Powerful Mode is set, the set temperature will be automatically increased 3°C against the present setting temperature.

   - The Fan Speed will shift as shown below:

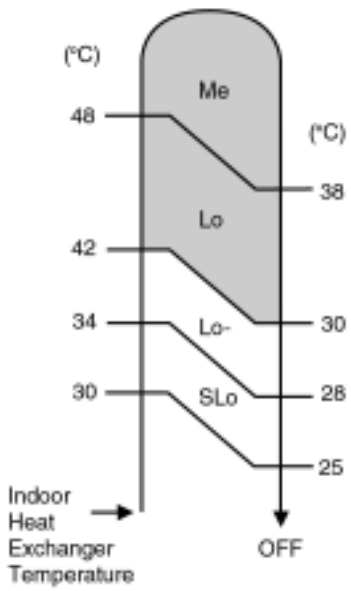

- When the Auto Fan speed is selected, the fan speed will automatically change from Lo to Me depending to the Indoor piping temperature.
- When the manual Fan Speed is selected, the fan speed will automatically set to Lo, then follows set fan speed when the Indoor piping temperature reaches 42°C.

Set Fan Speed

3. Vertical Airflow Direction:-

In Manual setting, the vane will automatically shift down 5° lower than previous setting.

In Auto setting, the vane will automatically shift between upper and lower limit depending on the intake air temperature as Heating Mode, Airflow Direction Auto-Control. However the upper and lower limit will be shifted 5°Cdownward.

4. Powerful mode will operate for 15 minutes only.

5. Powerful Mode will stop if:

    - Powerful mode button is pressed again.
    - Stopped by ON / OFF switch.
    - Timer-off activates.
    - Economy mode button is pressed.
    - Sleep mode button is pressed.
    - Operating mode is changed.

TOP PREVIOUS NEXT

8.13 Low outdoor ambient temperature control

A. Purpose

To protect air conditioner from damage under the low outdoor ambient temperature.

(Low outdoor ambient temperature < -12°C).

B. During low outdoor ambient temperature control activated, other compressor & outdoor fan motor control is ignored. (Apply to all operation modes.)

C. Basic operation

1. Protection control

   Outdoor unit stop operation regardless operation mode setting.

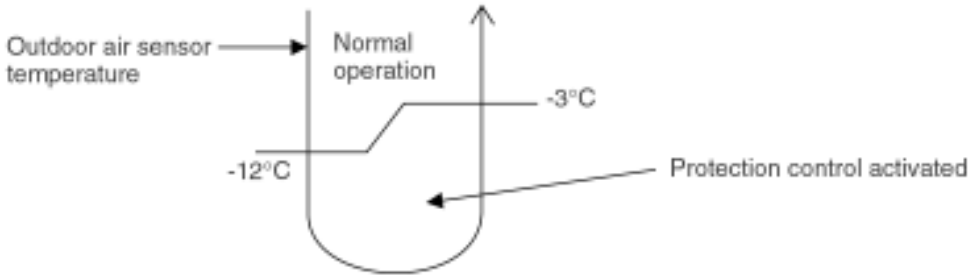

* Detail of operation refer to timing diagram

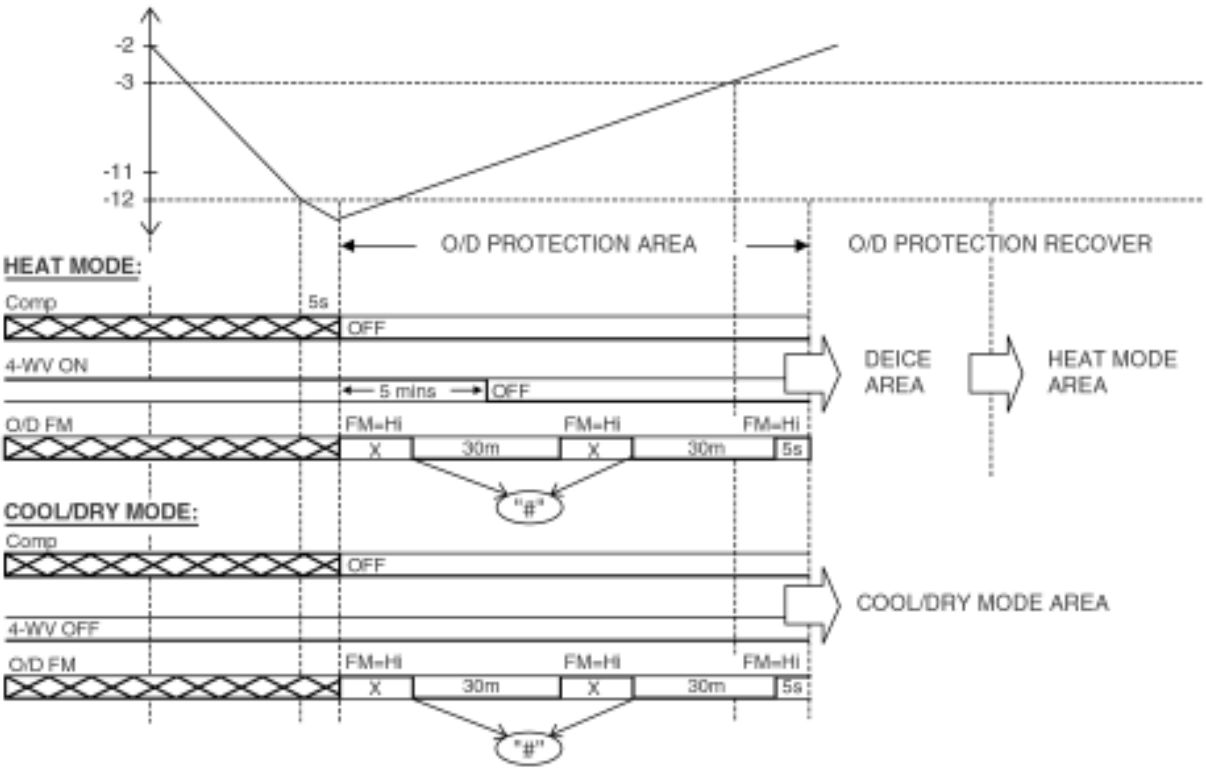

Note:

: Fan motor off condition depends on:

a. 1 min over after FM ON. And

b. Air temperature < -3°C during 1 min.

So the FM Off time is between 5 sec. to 1 min. 5 sec.

D. Indoor condition during protection control

#1: I/D fan speed and protection control depends on the operation mode. Then, the condition follow operation mode in table above.

	Operation mode		I/D FM		Protection control;
	Cooling		Setting speed		Compressor reverse rotation protection

Soft dry	Cooling zone	Setting speed		Compressor reverse rotation protection
	Soft dry zone	S Lo		Compressor reverse rotation protection
Heating		Speed depends on I/D piping temperature		Nil
Automatic		Depends on mode judgement. #1		

TOP PREVIOUS NEXT

9 Operating Instructions

SAFETY PRECAUTIONS

Before operating, please read the following "Safety Precautions" carefully.

- To prevent personal injury, injury to others and property damage, the following instructions must be followed.
- Incorrect operation due to failure to follow instructions will cause harm or damage, the seriousness of which is classified as follow:

⚠ Warning
This sign warns of death or serious injury.

⚠ Caution
This sign warns of damage to property.

- The instructions to be followed are classified by the following symbols:

This symbol (with a white background) denotes an action that is PROHIBITED.

These symbols (with a black background) denote actions that are COMPULSORY.

■ Installation Precautions

⚠ Warning

- **Do not install, remove and reinstall the unit by yourself.**
  Improper installation will cause leakage, electric shock or fire. Please engage an authorized dealer or specialist for the installation work.

⚠ Caution

- **This room air conditioner must be earthed.**
  Improper grounding could cause electric shock.
- **Ensure that the drainage piping is connected properly.**
  Otherwise, water will leak out.
- **Do not install the unit in a potentially explosive atmosphere.**
  Gas leak near the unit could cause fire.

■ Operation Precautions

⚠ Warning
This sign warns of death or serious injury.

- Do not operate with wet hands.
- Do not insert finger or other objects into the indoor or outdoor units.
- Do not expose directly to cold air for a long period.
- Use specified power cord.
- If abnormal condition (burnt smell, etc.) occurs, switch off the power supply.

⚠ Caution
This sign warns of injury.

- Do not wash the unit with water.
- Do not use for other purposes such as preservation.
- Do not use any combustible equipment at airflow direction.
- Do not sit or place anything on the outdoor unit.
- Switch off the power supply before cleaning.
- Ventilate the room regularly.
- Pay attention as to whether the installation rack is damaged after long period of usage.
- Switch off the power supply if the unit is not used for a long period.

NAME OF EACH PART

■ Indoor Unit

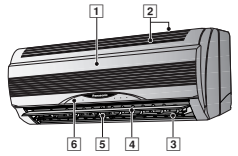

1 Front Panel
2 Air Intake Vent
3 Air Outlet Vent
4 Vertical Airflow Direction Louver
5 Horizontal Airflow Direction Louver
6 Indicator Panel



1 Auto Operation Button
(when the front panel is opened)

2 Economy Mode Indicator	–	GREEN
3 Powerful Mode Indicator	–	ORANGE
4 Power Indicator	–	GREEN
5 Sleep Mode Indicator	–	ORANGE
6 Timer Mode Indicator	–	ORANGE

● **Indoor Unit**
(when the front panel is opened)

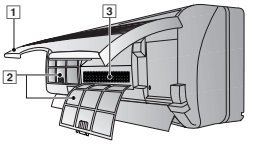

1 Front Panel
2 Air Filters
3 Air Purifying Filter

■ Outdoor Unit

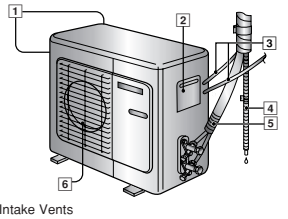

1 Air Intake Vents
2 Ground Terminal
(Inside cover)
3 Conduit
4 Drain Hose
5 Piping
6 Air Outlet Vents

■ Accessories

● **Remote Control**

● **Remote Control Holder**

● **Two RO3 (AAA) dry-cell batteries or equivalent**

● **Air Purifying Filter**

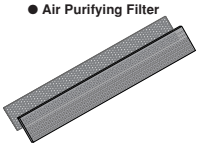

(Air Purifying Filter)

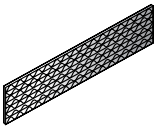

(Solar Refreshing Deodorizing Filter)

NAME OF EACH PART

■ Remote Control

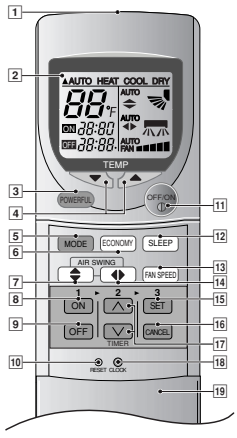

1 Signal Transmitter

2 Operation Display

3 Powerful Mode Operation Button

4 Room Temperature Setting Button (Illuminating button)

5 Operation Mode Selection Button

6 Economy Mode Operation Button

7 Vertical Airflow Direction Button

8 ON-Timer Button

9 OFF-Timer Button

10 Reset Point (Press with fine-tipped object to clear the memory)

11 OFF/ON Button (Illuminating button)

12 Sleep Mode Operation Button

13 Fan Speed Selection Button

14 Horizontal Airflow Direction Button

15 Timer Set Button

16 Timer Cancellation Button

17 Time-Setting Button

18 Clock Button

19 Remote Control Cover

● **Remote Control Signal.**
- Make sure it is not obstructed.
- Maximum distance : 10 m (32.8 ft.).
- Signal received sound.
  One short beep or one long beep.

● **Notes for Remote Control.**
- Do not throw or drop.
- Do not get it wet.
- Certain type of fluorescent lamps may affect signal reception. Consult your dealer.

● **How to Insert the Batteries**

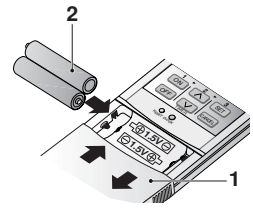

1 Slide down the remote control cover completely to remove it.

2 Insert the batteries
– Be sure the direction is correct
– 12.00 at display - flashing
- Set the current time (CLOCK) immediately to prevent battery exhaustion.

3 Re-install the remote control cover by inserting it in the side groves and pushing inward.

● **About the batteries**
- Can be used for approximately one year.

● **Observe the following when replacing the batteries**
- Replace with new batteries of the same type.
- Do not use rechargeable batteries (Ni-Cd).
- Remove the batteries if the unit is not going to be used for a long period.

PREPARATION BEFORE OPERATION

■ Indoor Unit



1 Open the front panel

2 Remove the air filters

3 Fit the air purifying filters in place

4 Insert the air filters

5 Close the front panel

■ Remote Control
– To set the current time

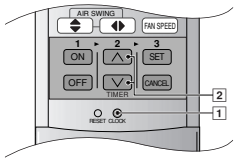

1 Press 1.

2 Then press 2 to increase or decrease the time.

3 Press 1 again.
Set time at display will light up.

HOW TO OPERATE

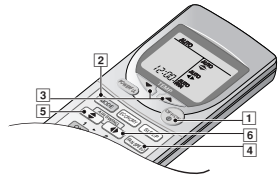

■ **To start the operation**
- Press 1.
- POWER indicator (green) on the indoor unit will light up.
- To stop, press once more.

■ **Setting Mode**
- Press 2 to select:-

AUTO – Automatic Operation
HEAT – Heating Operation
COOL – Cooling Operation
DRY – Soft Dry Operation

■ **Setting Temperature**
- Press 3 to increase or decrease the temperature.
- The temperature can be set between 60°F ~ 86°F.
- Recommended temperature:

COOL	75°F ~ 78°F
DRY	2°F ~ 4°F Lower than the room temperature
HEAT	68°F ~ 75°F

- During **AUTO** Operation, press 3 to select:-

AUTO Hi
- Operation with 4°F higher than the standard temperature.

AUTO
- Operation with the standard temperature.

AUTO Lo
- Operation with 4°F lower than the standard temperature.

● **Standard Temperature**

Indoor temperature	Operation	Standard temperature
73°F	Cooling	77°F
	Soft Dry	72°F
68°F	Heating	70°F

- At the beginning of the automatic operation, Heating, Cooling or Soft Dry is automatically selected according to the indoor temperature.
- The operation mode changes every hour, when necessary.

■ Setting the Fan Speed

• Press 4 to select:-

FAN – Low Fan Speed
FAN – Medium Fan Speed
FAN – High Fan Speed
AUTO FAN – Automatic Fan Speed

The speed of the indoor fan is adjusted automatically according to the operation. The indoor fan stops occasionally during cooling operation.

■ Setting the Vertical Airflow Direction

• Press 5 to select:-



AUTO • For COOL/DRY operation.
Swing up/down automatically.

AUTO • For HEAT operation
When the discharge air temperature is low such as at the start of the heating operation, the air blows at horizontal level. As the temperature rises, the hot air blows in a downwards direction.

■ Setting the Horizontal Airflow Direction

• Press 6 to select:-

Horizontal Airflow Direction	Indoor Unit	
	Remote Control	

AUTO • For COOL/DRY operation.
Swing left/right automatically.

AUTO • For HEAT operation
There is no air swing during the discharge air temperature is low. When the temperature rises, the horizontal airflow louvers swing left/right automatically.

● Use this air conditioner under the following conditions:

(Unit in °C)

DBT: Dry Bulb Temp WBT: Wet Bulb Temp	Indoor		Outdoor	
	DBT	WBT	DBT	WBT
Maximum Temperature-Cooling (Maximum Temperature-Heating)	32 (30)	23 (-)	43 (24)	26 (18)
Minimum Temperature-Cooling (Minimum Temperature-Heating)	16 (16)	11 (-)	16 (-5)	11 (-6)

● Notes

- If the unit is not going to be used for an extended period of time, turn off the main power supply. If it is left at the ON position, approximately 2.5 W of electricity will be used even if the indoor unit has been turned off with the remote control.
- If operation is stopped, then restart immediately, the unit will resume operation only after 3 minutes.

● Operation Details

COOL – Cooling Operation
- To set the room temperature at your preference cooling comfort.

AUTO – Automatic Operation
- Sense indoor temperature to select the optimum mode.
- Temperature is not displayed on the remote control during AUTO operation.

DRY – Soft Dry Operation
- A very gentle Cooling Operation, prior to dehumidification. It does not lower the room temperature.
- During Soft Dry operation, the indoor fan operates at Low fan speed.

HEAT – Heating Operation
- Heat is obtained from outdoor air to warm up the room. When the outdoor ambient air temperature falls, the heating capacity of the unit might be reduced.
- Defrosting Operation
  Depend on the outdoor temperature, the operation occasionally stops to melt the frost on the outdoor unit.

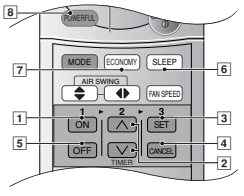

SETTING THE TIMER

Ensure that the current time is correct before setting the timer. The timer cannot be set if the time display is flashing.

■ ON-TIMER Operation

To start the air conditioner operation automatically.
- Press 1 to set the operation.
- Press 2 to increase or decrease the time.
- Then press 3.
- To cancel this operation, press 4.

■ OFF-TIMER Operation

To stop the air conditioner operation automatically.
- Press 5 to set the operation.
- Press 2 to increase or decrease the time.
- Then press 3.
- To cancel this operation, press 4.

● Timer Mode Operation Details

- When the ON-Timer is set, operation will start before the actual set time. This is to enable the room temperature reaches the set temperature at the set time.

COOL, DRY –> 15 minutes in advance HEAT, AUTO –> 30 minutes in advance

- Once the ON/OFF Timer is set, operation will start/stop at the set time everyday.
- The current time is not displayed when the timers are set.
- When both timers are used together, the TIMER mode indicator on the indoor unit remains lit even when the operation is stopped by the OFF-TIMER.

CONVENIENCE OPERATION

■ Sleep Mode Operation

To obtain a comfortable room temperature while sleeping:-
- Press 6.
- Sleep mode indicator on the indoor unit will light up.
- To cancel this operation, press once more.

● Sleep Mode Operation Details

- When the room temperature reaches the set temperature, the airflow volume will change to low automatically.
- Sleep Mode Operation time is 8 hours.
- When used together with the timer, the timer has a priority.

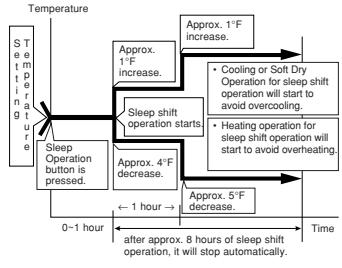
Temperature
Setting Temperature
Approx. 1°F increase.
Approx. 1°F increase.
• Cooling or Soft Dry Operation for sleep shift operation will start to avoid overcooling.
Sleep shift operation starts.
• Heating operation for sleep shift operation will start to avoid overheating.
Sleep Operation button is pressed.
Approx. 4°F decrease.
Approx. 5°F decrease.
← 1 hour →
0~1 hour
Time
after approx. 8 hours of sleep shift operation, it will stop automatically.

■ Economy Mode Operation

To save electrical power consumption.
Please use this mode when the room has reached your desired temperature.
- Press 7.

※ Economy mode indicator (green) on the indoor unit will light up.
- Press once more to cancel this operation.

■ Powerful Mode Operation

To obtain the set temperature quickly.
- Press 8.

※ Powerful mode indicator (orange) on the indoor unit will light up.
※ Powerful mode will operate for 15 minutes only.
- To cancel this operation, press once more.

● Economy / Powerful Mode Operation Details

- Economy and Powerful operation cannot be selected simultaneously.
- The changes of the temperature and airflow volume are automatic.
- The remote control display remains unchanged.
- If sleep button or operation mode button is pressed, economy or powerful operation will be cancelled.

Economy Mode Operation	Temperature	Airflow volume
COOL / DRY	1°F higher than set temp.	Super Low
HEAT	1°F lower than set temp.	Automatic

Powerful Mode Operation	Temperature	Airflow volume
COOL / DRY	5°F lower than set temp.	Super High
HEAT	5°F higher than set temp.	Automatic

CARE AND MAINTENANCE

■ Cleaning the Indoor Unit and Remote Control

- Wipe gently with a soft, dry cloth.
- Do not use water hotter than 104˚F or polishing fluid to clean the unit.

■ Cleaning the Air Filter

(Recommendation:- If the unit is operated in a dusty environment, clean the filters every two weeks, continuous use of this dirty filters will reduce cooling or heating efficiency)

1 Remove dirt using a vacuum cleaner.

2 Wash back of the air filter with water.

3 If badly soiled, wash it with soap or a mild household detergent.

4 Let it dry and reinstall it.
Be sure the "FRONT" mark is facing you.
※ Damaged air filter.
Consult the nearest authorized dealer.
Part No.: CWD001049.

- Do not use benzene, thinner, scouring powder or clothes soaked in caustic chemical to clean the unit.

■ Cleaning the Front Panel

(Must be removed before washing)

1 Raise the front panel higher than the horizontal and pull to remove it.

2 Gently wash with water and a sponge.

- Do not press the front panel too hard when washing.
- When use kitchen cleaning fluid (neutral detergent), rinse throughly.
- Do not dry the front panel under direct sunlight.

3 To fix the front panel, raise the front panel horizontally, match the protruding portion on the indoor unit to the fulcrum and push into place.

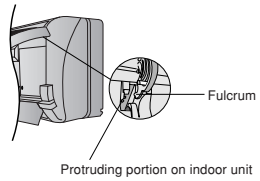

■ Air Purifying Filters

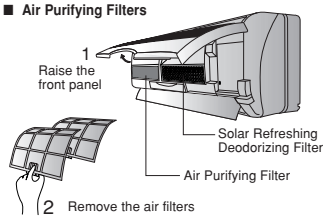

● **Solar Refreshing Deodorizing Filter**

- Used to remove unpleasant odor and deodorize the air in the room.
- Reusable.
- Vacuum, place under direct sunlight for 6 hours and fit it back in place.
(Recommended : every 6 months)
- Recommended to change this filter every 3 years.

● **Air Purifying Filter**

- This new filter helps trap small airborne particles such as dust, pollen and tobacco smoke.
- Recommended to change this filter every 3 months.

- Do not reuse damaged filters.
Consult the nearest authorized dealer to purchase a new filter.
Air Purifying Filter No.: CZ-SF51P
Solar Refreshing Deodorizing Filter No.: CZ-SFD70P

- If you operate the air conditioner with dirty filters:-
– Air is not purified
– Cooling or heating capacity decreases
– Foul odor is emitted

■ Pre-season Inspection

● **Is the discharged air cold/warm?**
Operation is normal if 15 minutes after the start of operation, the difference between the air intake and outlet vents temperature is:-

COOL –> 14°F or above HEAT –> 25°F or above

● **Are the air intake or outlet vents of the indoor or outdoor units obstructed?**

● **Are the remote control batteries weak?**
If the remote control display appears weak, replace the batteries.

■ When the Air Conditioner is Not Used for an Extended Period of Time

1 To dry the internal parts of the indoor unit, operate the unit for 2 - 3 hours using:-

COOL operation with 86°F set temperature

2 Stop the operation by remote control and switch off the circuit breaker.
Note: If the unit is not switched off by the remote control, it will start operating when the circuit breaker is switched to ON (because the unit is equipped with Auto Restart Control).

3 Remove the remote control batteries.

■ Recommended Inspection

- After used over several seasons, the unit will become dirty and thus decreases the unit's performance. Depending on the operation conditions, a dirty unit may produce odor and dust may pollute dehumidification system. Therefore, a seasonal inspection is recommended in addition to regular cleaning. (Consult an authorized dealer).

HELPFUL INFORMATION

■ Auto Operation Button



• Raise the front panel and press.

● **Automatic Operation**

- If the remote control fails to function or has been misplaced, press the Auto Operation button to start the Automatic operation.
- The Automatic operation will be activated immediately once the Auto operation button is pressed. However, temperature cannot be adjusted in this operation.
- The power indicator on the indoor unit will blink until the operation mode is selected automatically.
- To cancel this operation, press once more.

● **Remote Control Signal Receiving Sound**

- To switch off the beep (Signal Receiving Sound), press the Auto Operation button for 10 seconds continuously or longer.
"Beep", "beep" sound will be heard at the tenth seconds.
Note: "Beep" sound will be heard at the fifth seconds;
However please press continuously until you heard "beep", "beep" sound.
- Repeat the above steps if you want to switch on the Signal Receiving Sound.

● **(This is for Servicing purposes only.)**
Note: If you press this button continuously for 5 to 10 seconds, Test Run operation will be performed. A "beep" sound will be heard at the fifth seconds indicating the Test Run starts to operate.

■ Auto Restart Control

- If power is resumed after a power failure, the operation will restart automatically after 3 - 4 minutes.
- Operation will be restarted automatically under the previous operation mode and airflow direction when power is resumed as the operation is not stopped by the remote control.

■ Timer Setting

- When power failure occurs, the timer setting will be cancelled. Once power is resumed, reset the timer.

■ Thunder and Lightning

- This air conditioner is equipped with a built-in surge protective device. However, in order to further protect your air conditioner from being damaged by abnormally strong lightning activity, you may switch off the circuit breaker.

ENERGY SAVING AND OPERATION HINTS

■ Setting the Temperature

- Approximately 10% of electricity can be saved.
- Set the temperature higher or lower than the desired temperature.

Cooling operation : 2°F higher Heating operation : 4°F lower

■ Air Filters

- Clean the air filters every 2 weeks.
- Dirty filters may reduces cooling or heating efficiency.

■ Keep All Doors and Windows Closed

- Otherwise, cooling or heating performance will be reduced and electricity cost is wasted.

■ Outdoor Unit

- Do not block the air outlet vents. Otherwise, it will lower the cooling or heating performance.

■ Timer and Sleep Mode

- To prevent wastage of electricity, use sleep mode when sleeping or Timer when going out.

■ Avoid Direct Sunlight

- Keep curtains or drapes closed to avoid direct sunlight during cooling operation.

TROUBLESHOOTING

■ Normal Operation

Is it okay?	This is the answer
• Air conditioner has been restarted, but does not operate for 3 minutes.	• This is to protect the air conditioner. Wait until the air conditioner begins to operate.
• A sound like water flowing can be heard.	• This is the sound of refrigerant flowing inside the air conditioner.
• It seems that fog is coming out from the air conditioner.	• Condensation occurs when the airflow from the air conditioner cools the room.
• The room has a peculiar odor.	• This may be a damp smell emitted by the wall, carpet, furniture or clothing in the room.
• During Automatic Vertical Airflow setting, indoor fan stops occasionally.	• This is to remove smell emitted by the surroundings.
• The outdoor unit emits water or steam.	• In COOL/DRY operation, moisture in the air condenses into water on the cool surface of outdoor unit piping that causes dripping.
• Operation stops for about 12 minutes during heating (The power indicator blinks).	• This is to melt the frost which has accumulated on the outdoor unit (defrosting operating). This will take no longer than about 12 minutes. Water drips from the outdoor unit. Wait until this operation ends. (the power indicator will light up). (Frost will accumulates on the outdoor unit when the outdoor temperature is low and humidity is high.)
• During heating operation, indoor fan may run at on and off conditions.	• This is to prevent undesired cooling effect during heating operation.

■ Abnormal Operation

Check the following points before calling for repairs or service. If the malfunction persists, please contact your nearest servicenter. For assistance, please call: (866)-292-7292, for Hawaii residents call (808)-488-7779.

Is it okay?	Please check
• **The air conditioner does not operate.**	• Has the circuit breaker been tripped? • Is the timer being used correctly?
• **Air conditioner produces loud noise during operation.**	• Is the installation work slanted? • Is the front grille closed properly?
• **The air conditioner does not cool or warm effectively.**	• Has the temperature been set incorrectly? • Are the filters dirty? • Are the intake or outlet vents of the outdoor unit obstructed? • Are all windows and doors closed?
• **Remote control / display doesn't work**	• Batteries empty? • Batteries correctly inserted (+) and (–)?

■ Call the Dealer Immediately

If the following conditions occur, turn off the circuit breaker, and then call your authorized Panasonic dealers or servicenter.

- **Abnormal noise is heard during operation.**
- **Water or foreign material gets into the remote control by mistake.**
- **Water leak from the indoor unit.**
- **Switches or buttons do not operate properly.**
- **The circuit breaker switches off frequently.**
- **Power supply cord become unusually warm.**

Service information can be obtained by calling (866)-292-7292, for Hawaii residents call (808)-488-7779.

To expedite the repair of your air conditioner:
- Please have your proof of purchase.
- List all symptoms the unit is exhibiting.

PRODUCT SPECIFICATIONS

Models				CS-A18CKPG CU-A18CKP6G
ELECTRICAL RATING	Phase			1
	Frequency		(Hz)	60
	Voltage		(V)	208 – 230
COOLING	Capacity		(Btu/h)	16,900 – 17,000
	Current		(Amp)	8.5 – 7.9
	Input Power		(Watts)	1,720 – 1,760
	EER		(Btu/Watt.h)	9.8 – 9.7
	SEER			10.0 – 10.0
	Moisture Removal		(pints/h)	4.2
	Room Air Circulation		(cf/min)	463
HEATING	Capacity		(Btu/h)	18,100 – 18,300
	Current		(Amp)	8.5 – 7.9
	Input Power		(Watts)	1,720 – 1,760
	EER		(Btu/Watt.h)	10.5 – 10.4
	HSPF			6.8 – 6.8
	Moisture Removal		(pints/h)	
	Room Air Circulation		(cf/min)	470
DIMENSIONS	Indoor	Height	cm (inches)	27.5 (10 –13/16)
		Width	cm (inches)	99.8 (39 –9/32)
		Depth	cm (inches)	21.0 (8 – 9/32)
	Outdoor	Height	cm (inches)	68.5 (26 – 31/32)
		Width	cm (inches)	80.0 (31 –1/2)
		Depth	cm (inches)	30.0 (11 –13/16)
NET WEIGHT	Indoor		kg (lb)	11.0 (24)
	Outdoor		kg (lb)	53 (117)
GROSS WEIGHT	Indoor		kg (lb)	13.5 (30)
	Outdoor		kg (lb)	60.0 (132)

- Specifications are subject to change without notice for further improvement.

■ REFERENCE

Model Number:

Dealer's Address:

Dealer's Tel :

Serial Number :
(Located on the side of unit)

Date of Purchase :

Dealer's Name:

Please affix your proof of purchase here for future reference.

© 2002 Matsushita Electrical Co, Ltd. All Right Reserved.

10 Installation Instructions

Required tools for Installation Works							
1.	Philips screw driver	5.	Spanner	9.	Gas leak detector	13.	Multimeter
2.	Level gauge	6.	Pipe cutter	10.	Measuring tape	14.	Torque wrench18 N.m (1.8 kgf.m) 55 N.m (5.5 kgf.m) 65 N.m (6.5 kgf.m)
3.	Electric drill, hole core drill (ø70 mm)	7.	Reamer	11.	Thermometer	15.	Vacuum pump
4.	Hexagonal wrench (4 mm)	8.	Knife	12.	Megameter	16.	Gauge manifold

10.1 Safety Precautions

10.2 INDOOR UNIT

10.2.1 SELECT THE BEST LOCATION(Refer to Select the best location section)

10.2.2 HOW TO FIX INSTALLATION PLATE

10.2.3 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

10.2.4 INDOOR UNIT INSTALLATION

10.2.5 INDOOR UNIT ELECTRICAL WIRING

10.3 OUTDOOR UNIT

10.3.1 SELECT THE BEST LOCATION(Refer to Select the best location section)

10.3.2 INSTALL THE OUTDOOR UNIT

10.3.3 CONNECTING THE PIPING

10.3.4 EVACUATION OF THE EQUIPMENT

10.3.5 OUTDOOR UNIT ELECTRICAL WIRING

10.3.6 PIPE INSULATION

10.1 Safety Precautions

- Read the following SAFETY PRECAUTIONS carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation due to ignoring of the instruction will cause harmor damage, and the seriousness is classified by the following indications.

⚠ WARNING	This indication shows the possibility of causing death or serious injury.

⚠ CAUTION	This indication shows the possibility of causing injury or damage to properties only.

The items to be followed are classified by the symbols:

⃠	Symbol with background white denotes item that is PROHIBITED from doing.

- Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructionsfor future reference.

⚠ WARNING	
1.	Engage dealer or specialist for installation. If installation done by the user is defective, it will cause water leakage, electrical shock or fire.
2.	Install according to this installation instruction strictly. If installation is defective, it will cause water leakage, electrical shock or fire.
3.	Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.
4.	Install at a strong and firm location which is able to withstand the set s weight. If the strength is not enough or installation is not properly done, the set will drop and cause injury.

5.	For electrical work, follow the local national wiring standard, regulation and this installation instruction. An independent circuit and single outlet must be used. If electrical circuit capacity isnot enough or defect found in electrical work, it will cause electrical shock or fire.
6.	Use the UL listed or CSA approved AWG16 wire (or heavier wire) and connect tightly for indoor/outdoor connection. Connect tightly and clamp the cable so that no external force will be actedon the terminal. If connection or fixing is not perfect, it will cause heat-up or fire at the connection.
7.	Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause heat-up at connection point of terminal, fire or electricalshock.
8.	When carrying out piping connection, take care not to let air substances other than the specified refrigerant go into refrigeration cycle. Otherwise, it will cause lower capacity, abnormal high pressurein the refrigeration cycle, explosion and injury.

	⚠ CAUTION
1.	The equipment must be earthed. It may cause electrical shock if grounding is not perfect.
2.	Do not install the unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.
3.	Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.
	ATTENTION
1.	Selection of the installation location. Select a installation location which is rigid and strong enough to support or hold the unit, and select a location for easy maintenance.
2.	Power supply connection to the room air conditioner. Connect the power supply cord of the room air conditioner to the mains. Power supply point should be in an easily accessible placefor power disconnection in case of emergency. Power supply connection to a circuit breaker for the permanent connection. Use an approved 15A fuse or circuit breaker for the permanent connection. It must be a double pole switch with a minimum3 mm contact gap.
3.	Do not release refrigerant. Do not release refrigerant during piping work for installation, reinstallation and during repairing a refrigeration parts. Take care of the liquid refrigerant, itmay cause frostbite.
4.	Installation work. It may need two people to carry out the installation work.
5.	Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.
6.	It is not possible to carry out installation when the outdoor unit temperature reach -12°C (10.4°F).

Attached accessories

No.	Accesories part	Qty.	No.	Accessories part	Qty.
1	Installation plate	1	6	Solar refreshing deodorizing filter	1
2	Installation plate fixing screw	6	7	Remote Control holder	1
3	Remote control	1	8	Remote Control holder fixing screw	2
4	Battery	2	9	Drain elbow	1
5	Air purifying filter	1			

Applicable piping kit

CZ-4F5, 7, 10AN (CS-A18CKPG)

SELECT THE BEST LOCATION

INDOOR UNIT

- There should not be any heat source or steam near the unit.
- There should not be any obstacles blocking the air circulation.
- A place where air circulation in the room is good.
- A place where drainage can be easily done.
- A place where noise prevention is taken into consideration.
- Do not install the unit near the door way.
- Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.
- Recommended installation height for indoor unit shall be at least 7.5ft (2.3 m).

OUTDOOR UNIT

- If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed.

- There should not be any animal or plant which could be affected by hot air discharged.
- Keep the spaces indicated by arrows from wall, ceiling, fence or other obstacles.
- Do not place any obstacles which may cause a short circuit of the discharged air.
- If piping length is over 24.6ft (7.5m), additional refrigerant should be added as shown in the table.

Model	Piping size		Rated Length ft (m)	Max. Elevation ft (m)	Max. Piping Length ft (m)	Additional Refrigerant (g/m)
	Gas	Liquid				
CS-A18CKPG	1/2"	1/4"	16.4 ft (5 m)	65.6 ft (20 m)	82 ft (25 m)	0.22 oz/ft (20 g/m)

Example: For CS-A18CKPG

If the unit will be installed at a 10m distance, the quantity of additional refrigerant should be 50g...(10 - 7.5)m × 20g/m = 50g

Indoor/Outdoor Unit Installation Diagram

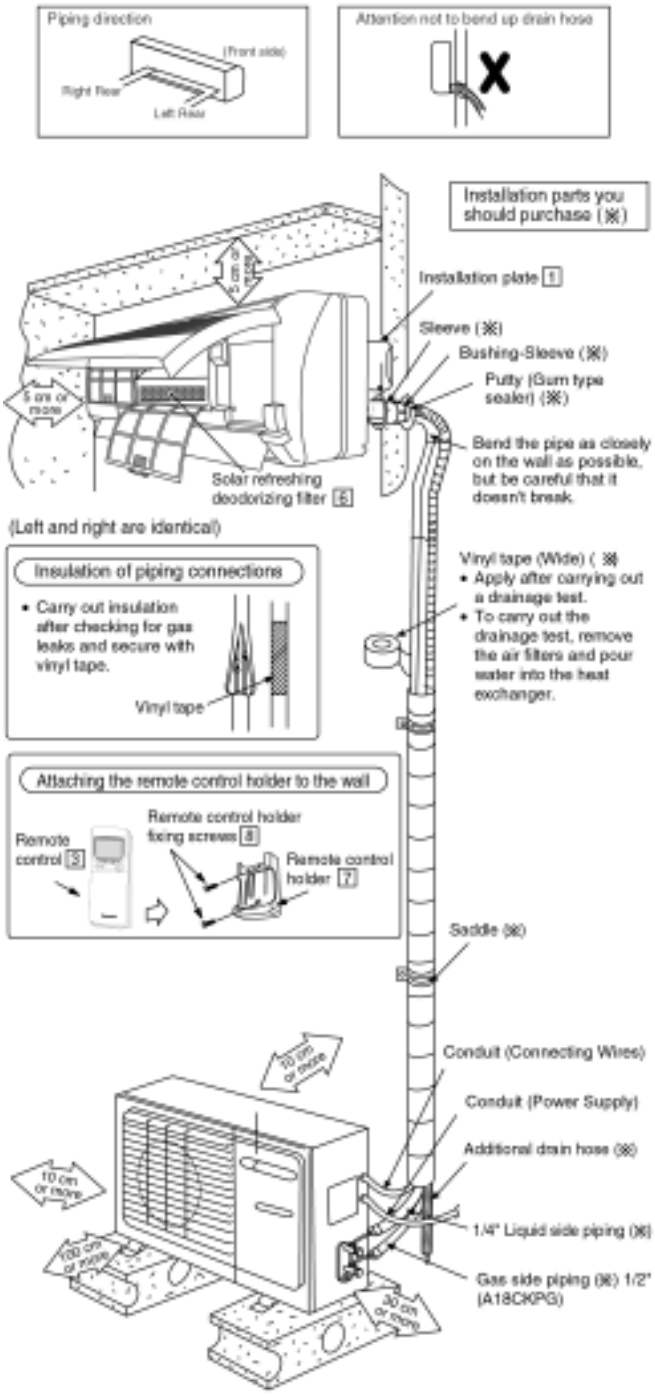
Piping direction
(Front side)
Right Rear
Left Rear
Attention not to bend up drain hose
Installation parts you should purchase (※)
5 cm or more
Installation plate 1
Sleeve (※)
Bushing-Sleeve (※)
Putty (Gum type sealer) (※)
5 cm or more
Bend the pipe as closely on the wall as possible, but be careful that it doesn't break.
Solar refreshing deodorizing filter 6
(Left and right are identical)
Insulation of piping connections
• Carry out insulation after checking for gas leaks and secure with vinyl tape.
Vinyl tape
Vinyl tape (Wide) (※)
• Apply after carrying out a drainage test.
• To carry out the drainage test, remove the air filters and pour water into the heat exchanger.
Attaching the remote control holder to the wall
Remote control 3
Remote control holder fixing screws 8
Remote control holder 7
Saddle (※)
10 cm or more
Conduit (Connecting Wires)
Conduit (Power Supply)
Additional drain hose (※)
10 cm or more
100 cm or more
1/4" Liquid side piping (※)
Gas side piping (※) 1/2" (A18CKPG)
30 cm or more

- This illustration is for explanation purposes only.
  The indoor unit will actually face a different way.

TOP PREVIOUS NEXT

10.2 INDOOR UNIT

TOP PREVIOUS NEXT

10.2.1 SELECT THE BEST LOCATION(Refer to Select the best location section)

10.2.2 HOW TO FIX INSTALLATION PLATE

10.2.3 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

10.2.4 INDOOR UNIT INSTALLATION

10.2.5 INDOOR UNIT ELECTRICAL WIRING

TOP PREVIOUS NEXT

10.2.1 SELECT THE BEST LOCATION (Refer to Select the best location section)

TOP PREVIOUS NEXT

10.2.2 HOW TO FIX INSTALLATION PLATE

The mounting wall is strong and solid enough to prevent it from the vibration.

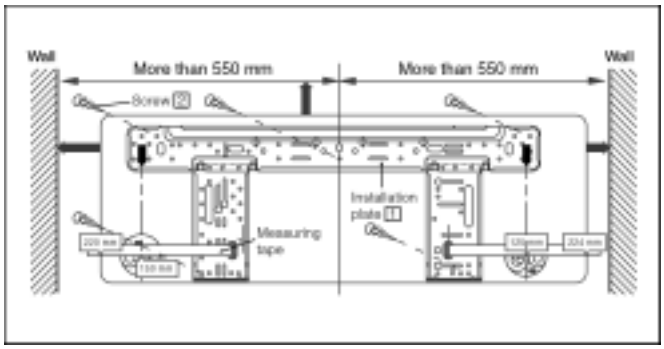

The centre of installation plate should be at more than 550 mm at right and left of the wall.

The distance from installation plate edge to ceiling should more than 67 mm.

From installation plate left edge to unit s left side is 47 mm.

From installation plate right edge to unit s right is 73 mm.

Ⓑ : For left side piping, piping connection for liquid should be about 126 mm from this line.
For left side piping, piping connection for gas should be about 174 mm from this line.
: For left side piping,piping connecting cable should be about 984 mm from this line.
:

1. Mount the installation plate on the wall with 5 screws or more.
(If mounting the unit on the concrete wall consider using anchor bolts.)

    - Always mount the installation plate horizontally by aligning the marking-off line with the thread and using a level gauge.

2. Drill the piping plate hole with ø70 mm hole-core drill.

    - Line according to the arrows marked on the lower left and right side of the installation plate. The meeting point of the extended line is the centre of the hole. Another method is by putting measuring tape at position as shown in the diagramabove. The hole centre is obtained by measuring the distance namely 150 mm and 125 mm for left and right hole respectively.

- Drill the piping hole at either the right or the left and the hole should be slightly slanted to the outdoor side.

TOP PREVIOUS NEXT

10.2.3 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

TOP PREVIOUS NEXT

1. Insert the piping sleeve to the hole.
2. Fix the bushing to the sleeve.
3. Cut the sleeve until it extrudes about 15 mm from the wall.

> Caution
> When the wall is hollow, please be sure to use the sleeve for tube ass y to prevent dangers caused by mice biting the connecting cable.

4. Finish by sealing the sleeve with putty or caulking compound at the final stage.

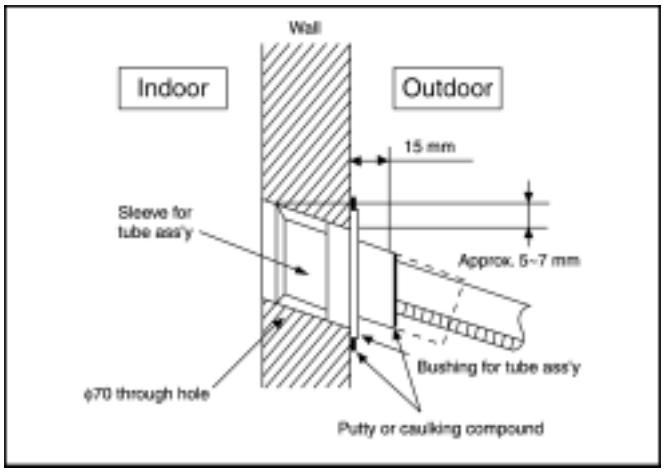

TOP PREVIOUS NEXT

10.2.4 INDOOR UNIT INSTALLATION

1. For the right rear piping

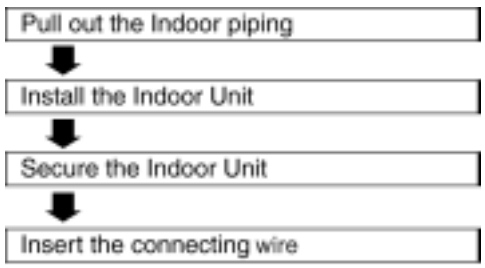

2. For the embedded piping

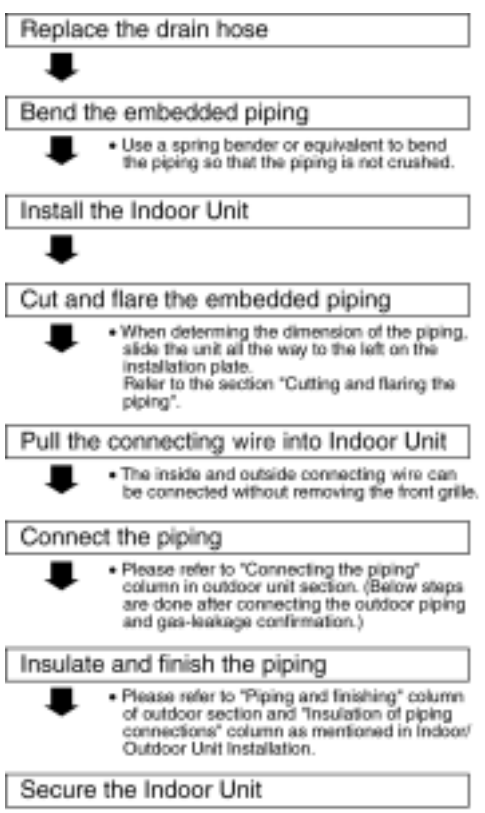
Replace the drain hose
Bend the embedded piping
• Use a spring bender or equivalent to bend the piping so that the piping is not crushed.
Install the Indoor Unit
Cut and flare the embedded piping
• When determing the dimension of the piping, slide the unit all the way to the left on the installation plate.
Refer to the section "Cutting and flaring the piping".
Pull the connecting wire into Indoor Unit
• The inside and outside connecting wire can be connected without removing the front grille.
Connect the piping
• Please refer to "Connecting the piping" column in outdoor unit section. (Below steps are done after connecting the outdoor piping and gas-leakage confirmation.)
Insulate and finish the piping
• Please refer to "Piping and finishing" column of outdoor section and "Insulation of piping connections" column as mentioned in Indoor/ Outdoor Unit Installation.
Secure the Indoor Unit

Pull out the piping and drain hose

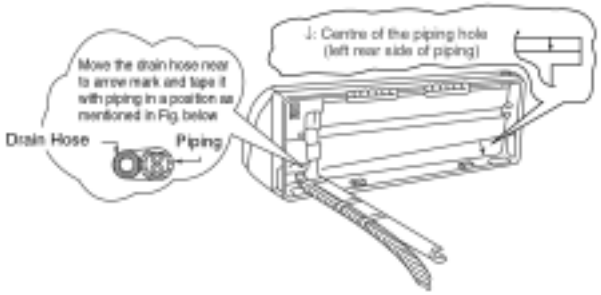
Move the drain hose near to arrow mark and tape it with piping in a position as mentioned in Fig. below
Drain Hose
Piping
↓: Centre of the piping hole (left rear side of piping)

Insert the connecting wire

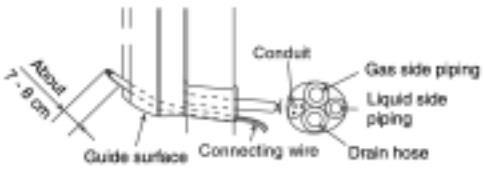

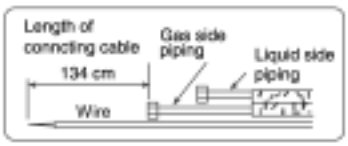

Install the Indoor Unit

Hook the indoor unit onto the upper portion of installation plate (Engage the indoor unit with the upper edge of the installation plate). Ensure the hooks are properly seated on the installation plate by moving in left and right.

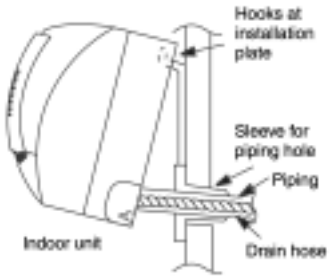

Secure the Indoor Unit

1. Tape the extra power supply cord in a bundle and keep it behind the chassis.
   - Ensure that the power supply cord is not clamped in between the unit's hook (2 positions) and installation plate.
2. Press the lower left and right side of the unit against the installation plate until hooks engages with their slots (a click will be heard).

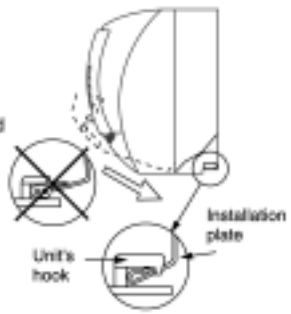

To take out the unit, push the PUSH marking at the bottom unit, and pull it slightly towards you to disengage the hooks from the unit.

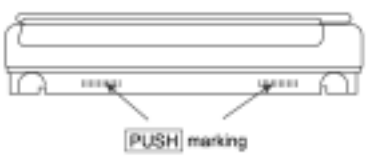

(This can be used for left rear piping & left bottom piping also.)

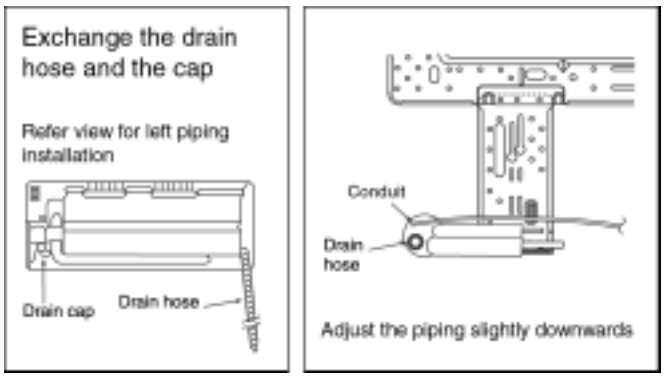

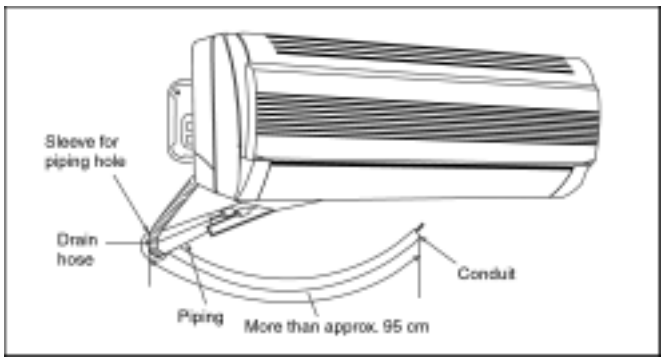

• How to pull the piping and drain hose out, in case of the embedded piping.

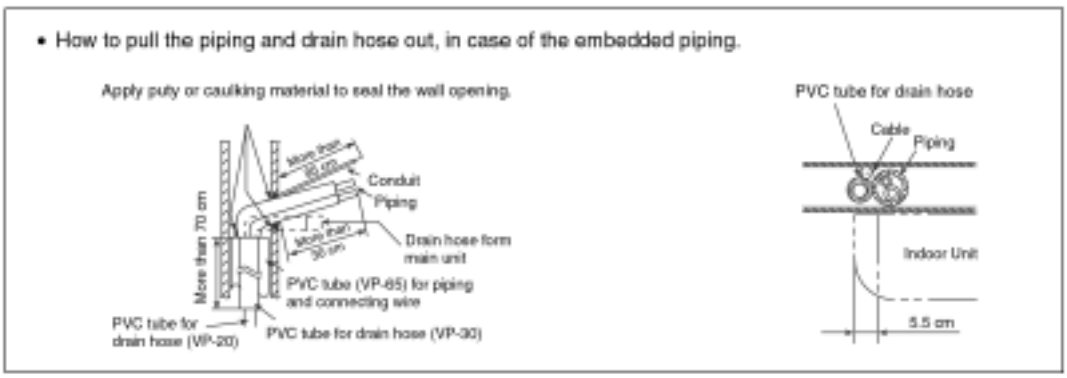
Apply puty or caulking material to seal the wall opening.
More than 70 cm
More than 30 cm
More than 30 cm
Conduit
Piping
Drain hose form main unit
PVC tube (VP-65) for piping and connecting wire
PVC tube for drain hose (VP-30)
PVC tube for drain hose (VP-20)
PVC tube for drain hose
Cable
Piping
Indoor Unit
5.5 cm

TOP PREVIOUS NEXT

10.2.5 INDOOR UNIT ELECTRICAL WIRING

1. Remove the control board metal cover.

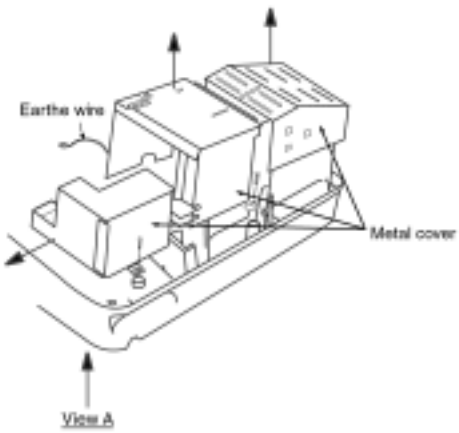

2. Unscrew the conduit cover & fix the conduit connector to conduit cover with lock nut, then secure it against chassis.

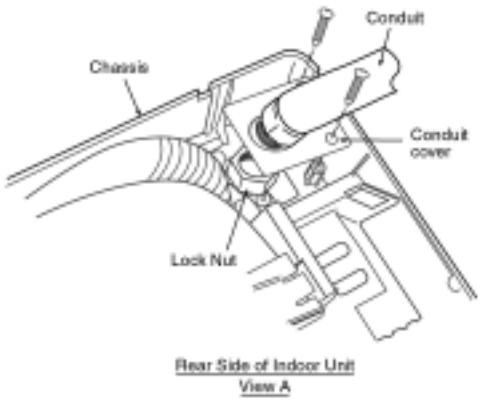

3. Connecting between indoor unit and outdoor unit should be UL listed or CSA approved 6 × AWG16 wire.

    - Ensure the color of wires of outdoor unit and the terminal Nos. are the same as the indoor s respectively.

    - Earth lead wire should be longer than the other lead wires as shown in the figure for the electrical safety in case the cord slips out from the anchorage.

CS/CU-A18CKPG

Terminals on the indoor unit	1	2	3	4	5	⏚
Color of wires						
Terminals on the outdoor unit	1	2	3	4	5	⏚

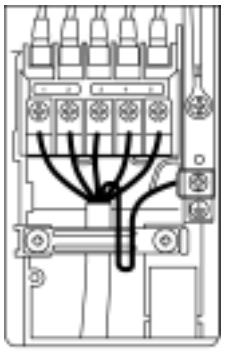

A18CKPG

4. Secure the wire onto the control board with the holder (clamper).

5. After completed wiring connection, fix back the metal cover to the original location.

INSTALLATION OF AIR PURIFYING FILTERS

1. Open the front panel.

2. Remove the air filters.

3. Put air purifying filters (left) and solar refreshing deodorizing filter (right) into place as shown in illustration below.

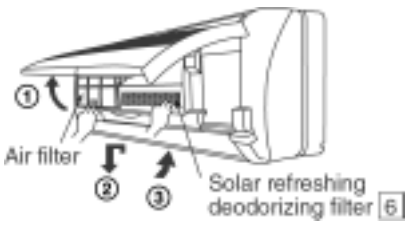

HOW TO TAKE OUT FRONT GRILLE

Please follow the steps below to take out front grille if necessary such as when servicing.

1. Set the vertical airflow direction louver to the horizontal position.

2. Slide down the three caps on the front grille as shown in the illustration below, and then remove the three mounting screws.

3. Pull the lower section of the front grille towards you to remove the front grille.

When reinstalling the front grille, first set the vertical airflow direction louver to the horizontal position and then carry out above steps 2 - 3 in the reverse order.

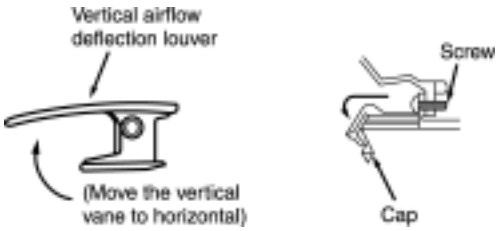

AUTO SWITCH OPERATION

The below operations will be performed by pressing the AUTO switch.

1. AUTO OPERATION MODE

   The Auto operation will be activated immediately once the Auto Switch is pressed.

2. TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)

   The Test Run operation will be activated if the Auto Switch is pressed continuously for more than 5 sec. to below 10 sec.. A pep sound will occur at the fifth sec., in order to identify the starting of Test Run operation

3. REMOTE CONTROLLER RECEIVING SOUND ON/OFF

   The ON/OFF of Remote Controller receiving sound can be change over by pressing the AUTO Switch continuously for 10 sec. and above. A pep , pep sound will occur at the tenth sec.,in order to indicate the ON/OFF change over of remote control receiving sound.

TOP PREVIOUS NEXT

10.3 OUTDOOR UNIT

TOP PREVIOUS NEXT

10.3.1 SELECT THE BEST LOCATION(Refer to Select the best location section)

10.3.2 INSTALL THE OUTDOOR UNIT

10.3.3 CONNECTING THE PIPING

10.3.4 EVACUATION OF THE EQUIPMENT

10.3.5 OUTDOOR UNIT ELECTRICAL WIRING

10.3.6 PIPE INSULATION

TOP PREVIOUS NEXT

10.3.1 SELECT THE BEST LOCATION (Refer to Select the best location section)

TOP PREVIOUS NEXT

TOP PREVIOUS NEXT

10.3.2 INSTALL THE OUTDOOR UNIT

- After selecting the best location, start installation according to Indoor/Outdoor Unit Installation Diagram.

1. Fix the unit on concrete or rigid frame firmly and horizontally by bolt nut. (ø10 mm).

2. When installing at roof, please consider strong wind and earthquake. Please fasten the installation stand firmly with bolt or nails.

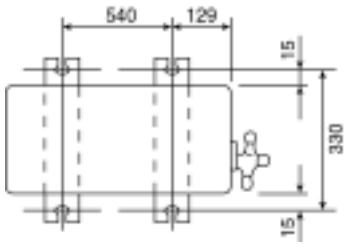

10.3.3 CONNECTING THE PIPING

TOP PREVIOUS NEXT

Connecting The Piping To Indoor Unit

Please make flare after inserting flare nut (locate at joint portion of tube assembly) onto the copper pipe. (In case of using long piping)

Connect the piping

- Align the center of piping and sufficiently tighten the flare nut with fingers.
- Further tighten the flare nut with torque wrench in specified torque as stated in the table.

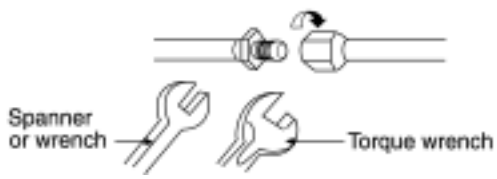

MODEL	Piping size (Torque)	
	Gas	Liquid
CS-A18CKPG	1/2 (55 N.m)	1/4 (18 N.m)

Connecting The Piping To Outdoor Unit

Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge. Make flare after inserting the flare nut (located at valve) onto the copper pipe.

Align center of piping to valves and then tighten with torque wrench to the specified torque as stated in the table.

CUTTING AND FLARING THE PIPING

1. Please cut using pipe cutter and then remove the burrs.
2. Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused.

   Turn the piping end down to avoid the metal powder entering the pipe.
3. Please make flare after inserting the flare nut onto the copper pipes.

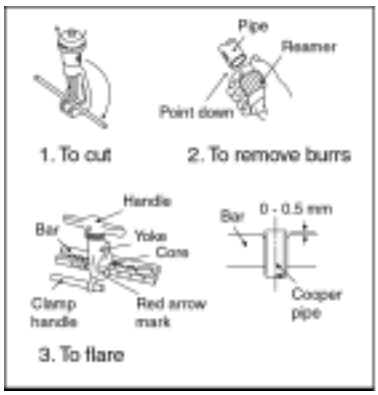

■ Improper flaring ■

When properly flared, the internal surface of the flare will evenly shine and be of even thickness. Since the flare part comes into contact with the connections, carefully check the flare finish.

TOP PREVIOUS NEXT

10.3.4 EVACUATION OF THE EQUIPMENT

WHEN INSTALLING AN AIR CONDITIONER, BE SURE TO EVACUATE THE AIR INSIDE THE INDOOR UNIT AND PIPES in the following procedure.

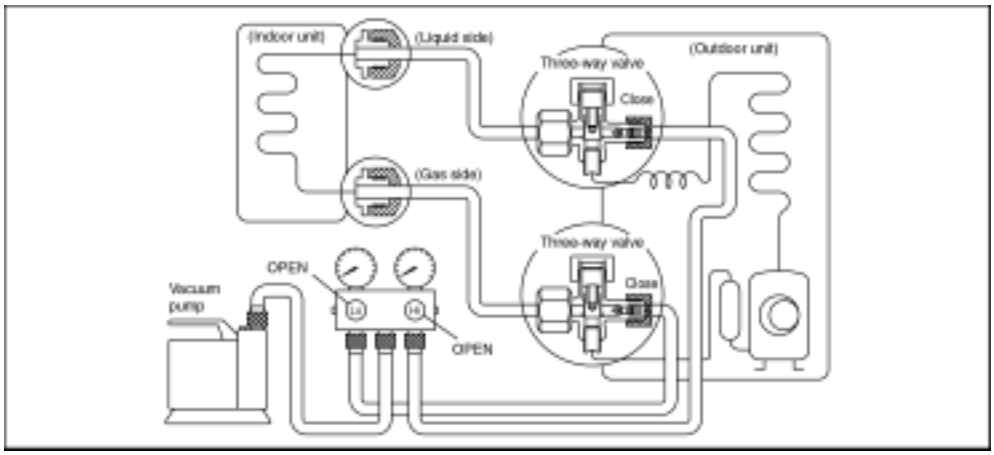

1. Connect a charging hose with a push pin to the Low and High side of a charging set and the service port of the 3-way valve.
    - Be sure to connect the end of the charging hose with the push pin to the service port.
2. Connect the center hose of the charging set to a vacuum pump.
3. Turn on the power switch of the vacuum pump and make sure that the needle in the gauge moves from 0 cmHg (0 MPa) to
   -76 cmHg (-0.1 MPa). Then evacuate the air approximately ten minutes.
4. Close the valve of both the Low and High sides of the charging set and turn off the vacuum pump. Make sure that the needle in the gauge does not move after approximately five minutes.

   Note: BE SURE TO FOLLOW THIS PROCEDURE IN ORDER TO AVOID REFRIGERANT GAS LEAKAGE.
5. Disconnect the charging hose from the vacuum pump and from the service port of the 3-way valve.
6. Tighten the service port caps of the 3-way valve at a torque of 18 N.m with a torque wrench.
7. Remove the valve caps of both of the 2-way valve and 3-way valve. Position both of the valves

to OPEN using a hexagonal wrench (4 mm).

8. Mount valve caps onto the 2-way valve and the 3-way valve.
    - Be sure to check for gas leakage.

CAUTION

- If gauge needle does not move from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa), in step 3 above take the following measure:
- If the leak stops when the piping connections are tightened further, continue working from step 3.
- If the leak does not stop when the connections are retightened, repair the location of leak.
- Do not release refrigerant during piping work for installation and reinstallation. Take care of the liquid refrigerant, it may cause frostbite.

TOP PREVIOUS NEXT

10.3.5 OUTDOOR UNIT ELECTRICAL WIRING

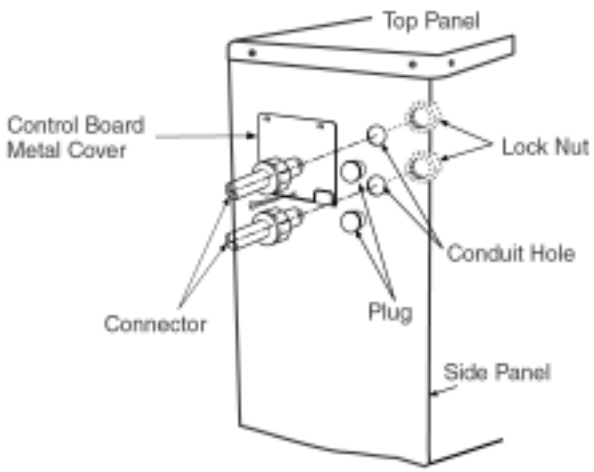

1. Remove Top Panel.
2. Remove Control Board Cover.
3. Remove Plugs.
4. Fix the conduit connector to the conduit hole with lock-nut, then secure it.
5. Connecting wire between indoor unit and outdoor unit should be UL listed or CSA approved 6 × AWG16 wire.

CS/CU-A18CKPG

Terminals on the indoor unit	1	2	3	4	5	⏚
Color of wires						
Terminals on the outdoor unit	1	2	3	4	5	⏚

6. Secure the wire onto the control board with the holder (clamper).
7. Wire connection to the power supply (208/230V 60 Hz) through circuit breaker.
    - Connect the UL listed or CSA approved wires (AWG12) to the terminal board, and connect the other end of the wires to circuit breaker.

Terminals on the outdoor unit	L1	L2	⏚
Color of wires			
Terminals on the circuit breaker	(L)	(N)	⏚

Note: Secure the wires onto the control board with the holder (clamper).

8. After completed wiring connection, fix back the control board cover and the top panel to the original position with the screws.

TOP PREVIOUS NEXT

10.3.6 PIPE INSULATION

1. Please carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installation Diagram. Please wrap the insulated piping end to prevent water from going inside the piping.

2. If drain hose or connecting piping is in the room (where dew may form), please increase the insulation by using POLY-E FOAM with thickness 6 mm or above.

DISPOSAL OF OUTDOOR UNIT DRAIN WATER

- If a drain elbow is used, the unit should be placed on a stand which is taller than 3 cm (1.18 in).

- If the unit is used in an area where temperature falls below 0°C (32°F) for 2 or 3 days in succession, it is recommended not to use a drain elbow, for the drain water freezes and the fan will not rotate.

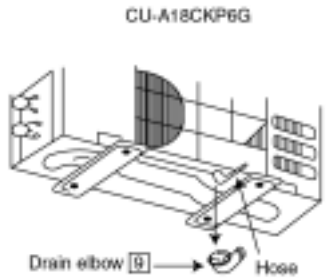

Install the hose at an angle so that the water smoothly flows out.

CHECK THE DRAINAGE

- Open front panel and remove air filters.
  (Drainage checking can be carried out without removing the front grille.)

- Pour a glass of water into the drain tray-styrofoam.

- Ensure that water flows out from drain hose of the indoor unit.

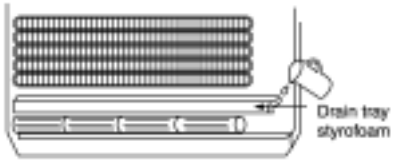

EVALUATION OF THE PERFORMANCE

- Operate the unit at cooling operation mode for fifteen minutes or more.
- Measure the temperature of the intake and discharge air.
- Ensure the difference between the intake temperature and the discharge is more than 8°C.

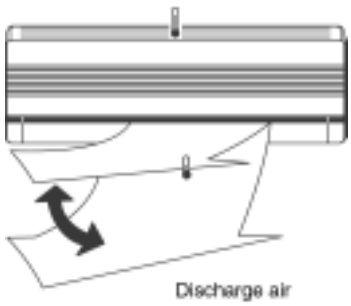

CHECK ITEMS

- ☐ Is there any gas leakage at flare nut connections?
- ☐ Has the heat insulation been carried out at flare nut connection?
- ☐ Is the connecting wire being fixed to terminal board firmly?
- ☐ Is the connecting wire being clamped firmly?
- ☐ Is the drainage OK?
  (Refer to Check the drainage section)
- ☐ Is the earth wire connection properly done?
- ☐ Is the indoor unit properly hooked to the installation plate?
- ☐ Is the power supply voltage complied with rated value?
- ☐ Is there any abnormal sound?
- ☐ Is the cooling operation normal?
- ☐ Is the thermostat operation normal?
- ☐ Is the remote control s LCD operation normal?
- ☐ Is the air purifying filter installed?

11 3-way Valve

	3-way Valve (Liquid Side)		3-way Valve (Gas Side)	
	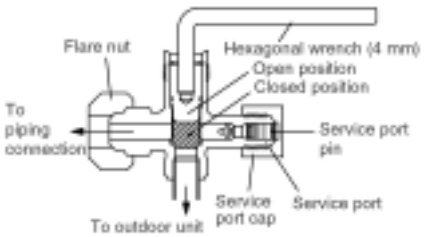		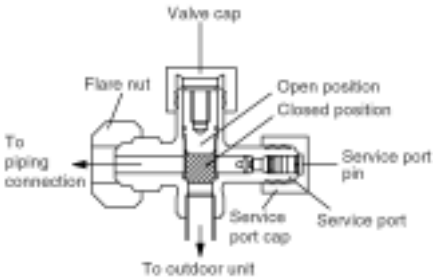	
Works	Shaft Position	Service Port	Shaft Position	Service Port
Shipping	Closed (With valve cap)	Closed (With cap)	Closed (With valve cap)	Close (With cap)
(Installation and Re-installation)	Closed (Clockwise)	Open (Connected manifold gauge w/charging cylinder)	Closed (Clockwise)	Open (Push-pin)
Operation	Open (With valve cap)	Closed (With cap)	Open (With valve cap)	Closed (With cap)
Pumping down (Transferring)	Closed (Clockwise)	Closed (With cap)	Open (Counter-Clockwise)	Open (Connected manifold gauge)
Evacuation (Servicing)	Open (Counter-clockwise)	Open (Connected manifold gauge)	Open (Counter-clockwise)	Open (Connected manifold gauge)

Gas charging	Open	Open	Open	Open
(Servicing)	(Counter-clockwise)	(Connected manifold gauge)	(Counter-clockwise)	(Connected manifold gauge)
Pressure check	Open	Closed	Open	Open
(Servicing)	(Counter-clockwise)	(With cap)	(Counter-clockwise)	(Connected manifold gauge)
Gas releasing	Open	Open	Open	Open
(Servicing)	(Counter-clockwise)	(Connected manifold gauge)	(Counter-clockwise)	(Connected manifold gauge)

11.1 Air Purging of the Piping and Indoor Unit

11.1.1 Air purging

11.1.2 Pumping down

11.1.3 Re-air purging

11.1.4 Balance refrigerant of the 3-way valves

11.1.5 Evacuation

11.1.6 Gas charging

TOP PREVIOUS NEXT

11.1 Air Purging of the Piping and Indoor Unit

11.1.1 Air purging

11.1.2 Pumping down

11.1.3 Re-air purging

11.1.4 Balance refrigerant of the 3-way valves

11.1.5 Evacuation

11.1.6 Gas charging

11.1.1 Air purging

- Required tools:

  Hexagonal wrench, adjustable wrench, torque wrenches, wrench to hold the joints, gas leak detector, and charging set.

The air in the indoor unit and in the piping must be purged. If air remains in the refrigeration pipes, it will affect the compressor, reduce the cooling capacity, and could lead to a malfunction.

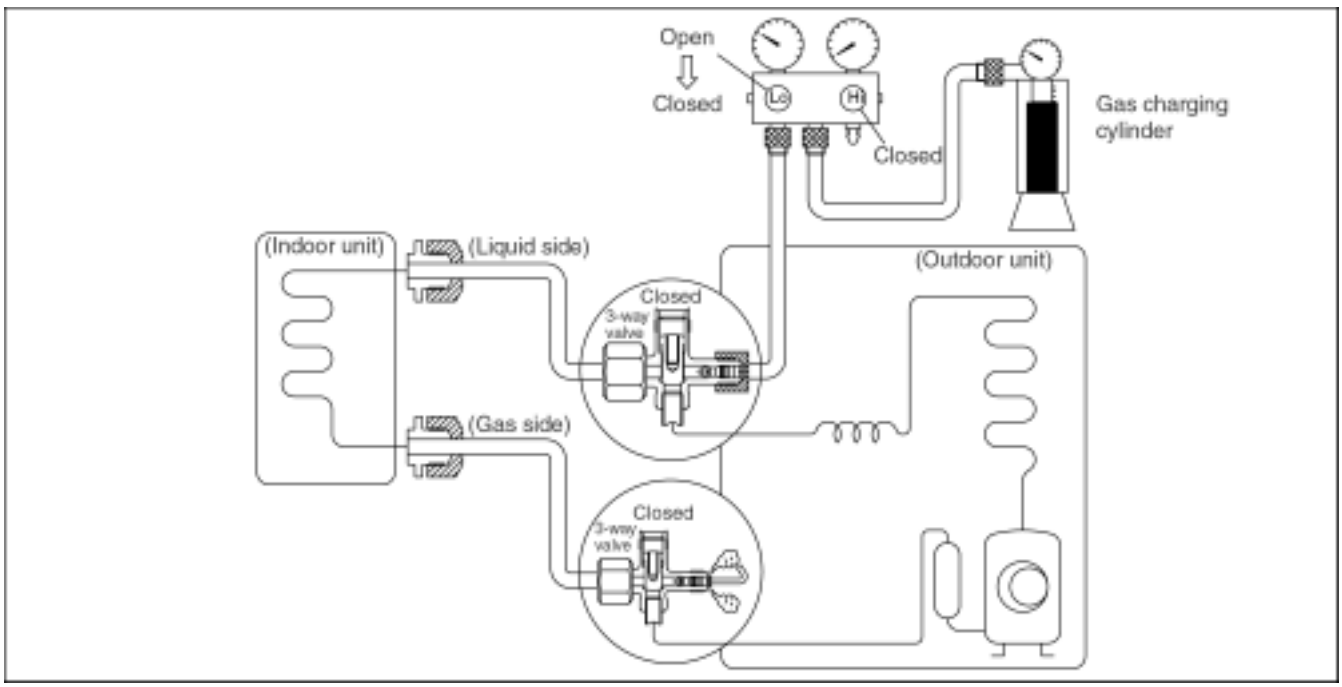

	Service port cap
	Be sure, using a torque wrench to tighten the service port nut (after using the service port), so that it prevents the gas leakage from the refrigeration cycle.

Procedure:

1. Recheck the piping connections.
2. Open the valve caps and service port caps for both 3-way valves.
3. Connect the charging cylinder to the manifold gauge as shown above.
4. Open the valve of the low pressure side of manifold gauge counterclockwise for 10 seconds, and then close i t.

5. Check for gas leakage.
    - Check the flare connections for gas leakage.
6. Purge the air from the system.
    - Open the Low pressure side valve of the manifold gauge.
    - Press the service port pin with the hexagonal wrench to purge the air for three seconds and then wait for one minute.
      Repeat this three times or more.
7. Balance the refrigerant in the pipings and the indoor unit.
    - Close the Low pressure side valve of the manifold gauge.
    - Press the service port pin with the hexagonal wrench to release the refrigerant until the gauge indicates 0.1 to 0.3 MPa.
8. Use torque wrench to tighten the service port cap to a torque of 18 N.m.
9. Set the both 3-way valves to the open position.
10. Mount the valve caps to the 3-way valves.
11. Check for gas leakage.
    - At this time, especially check for gas leakage from the both 3-way valve s caps, and from the service port caps.

Caution If gas leakage is discovered in step (3) above, take the following measures: A. Re-tighten the connecting portion with torque wrenches. If the leakage ceases, continue the works from step (4). B. Locate and repair the leak. (Gas leak detector) Repeat the works from step (1).

11.1.2 Pumping down

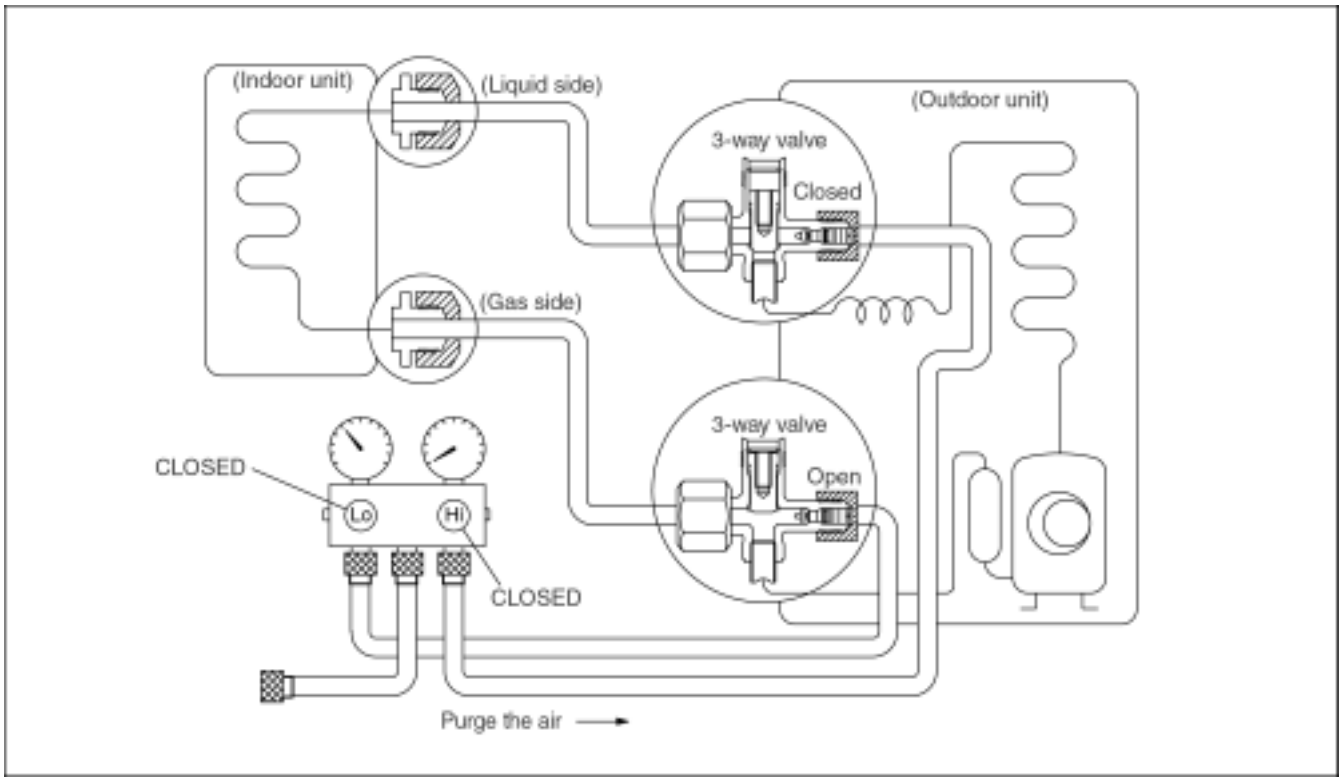

Procedure:

1. Confirm that both the 3-way valves are set to the open position.
    - Remove the valve caps and confirm that the valve caps are in the raised position.
    - Be sure to use a hexagonal wrench to operate the valve stems.
2. Operate the unit for 10 to 15 minutes.
3. Stop operation and wait for 3 minutes, then connect the manifold gauge to the service port of the 3-way valve as shown above.
    - Connect the manifold gauge to the gas side service port.
4. Air purging of the charge hose.
    - Open the Low pressure side valve of manifold gauge slightly to purge air from the charge hose.
5. Set the liquid side (High side) 3-way valve to the close position.

6. Operate the air conditioner at the cooling cycle and stop it when the gauge indicates 0.1 MPa.

    - If the unit cannot be operated at the cooling (weather is rather cool), press the Pump Down switch on the Indoor unit.

    - So that the unit can be operated.

7. Immediately set the gas side (Low side) 3-way valve to the close position.

    - Do this quickly so that the gauge ends up indicating 0.1 0.3 MPa.

8. Disconnect the manifold gauge, and mount both the 3-way valve s caps and the service port caps.

    - Use torque wrench to tighten the service port nut to a torque of 18 N.m.

    - Be sure to check for gas leakage.

11.1.3 Re-air purging

(Re-installation)

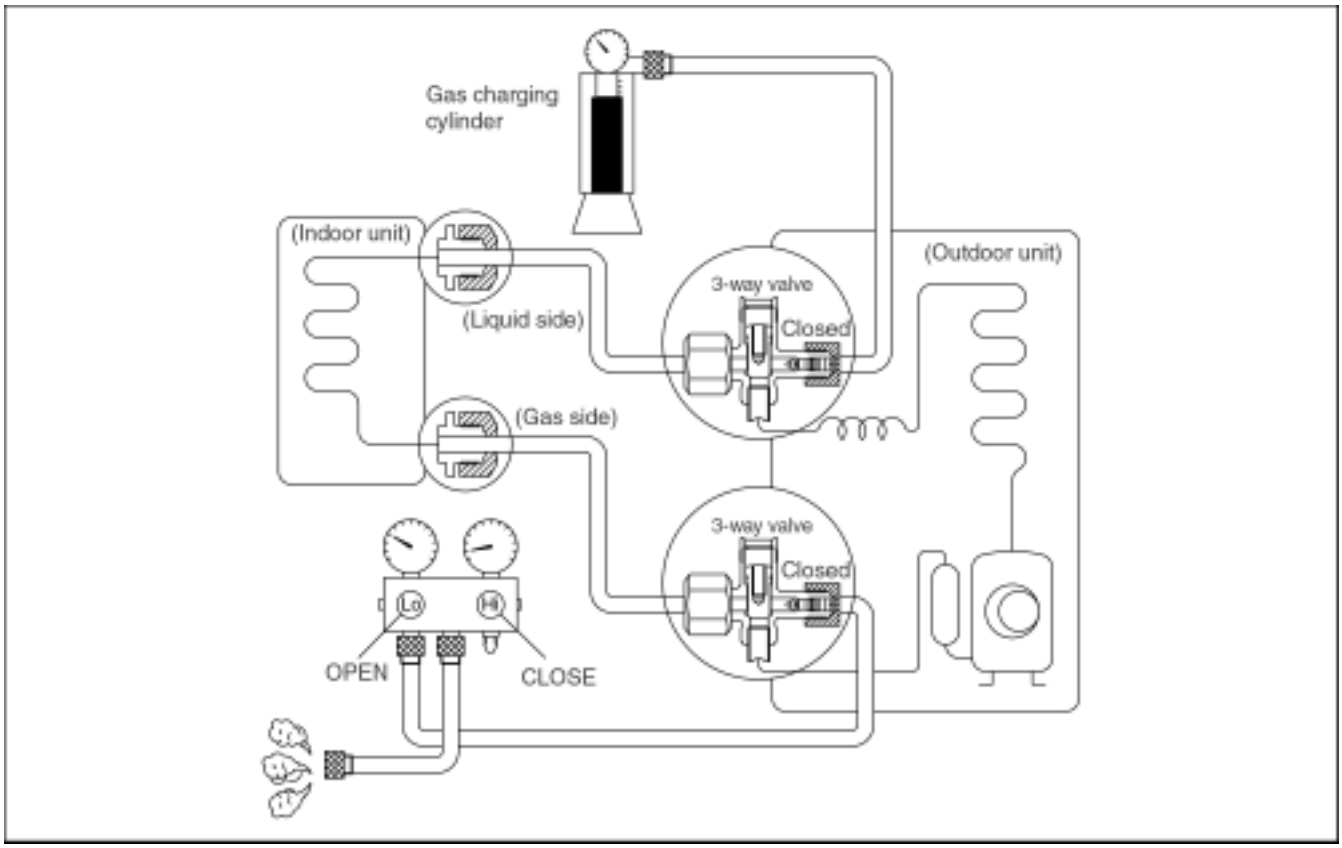

Procedure:

1. Remove the cap nut from 3-way valves.
    - Remove the cap nut from 3-way valves after carefully checked whether the piping connection was properly and certainly done.
2. Confirm that valve in both 3-way valves are set to the CLOSE.
3. Connect the gas cylinder to the liquid-side (high-pressure) 3-way valve and the charge set to the gas side (low-pressure) 3-way valve.
    - Remove the flare nut from the service ports to connect the manifold gauge and gas cylinder.
    - Close the valves on the gas cylinder and manifold gauge.
4. Air purging.

- Open the valve on the gas cylinder.
- Open the valve on the manifold gauge, discharge for three seconds and wait for one minute. Repeat this three times.

5. Check for gas leakage.
   - Check the flare connections for gas leakage.
6. Discharge the refrigerant.
   - Close the valve on the gas cylinder and discharge the refrigerant until the gauge indicates 0.1 to 0.3 MPa.
7. Disconnect the manifold gauge and gas cylinder.
8. Mount the valve caps and the service port caps onto the 3-way valves.
   - Be sure to use a torque wrench to tighten the service port nut.
   - Be sure to check for gas leakage.

11.1.4 Balance refrigerant of the 3-way valves

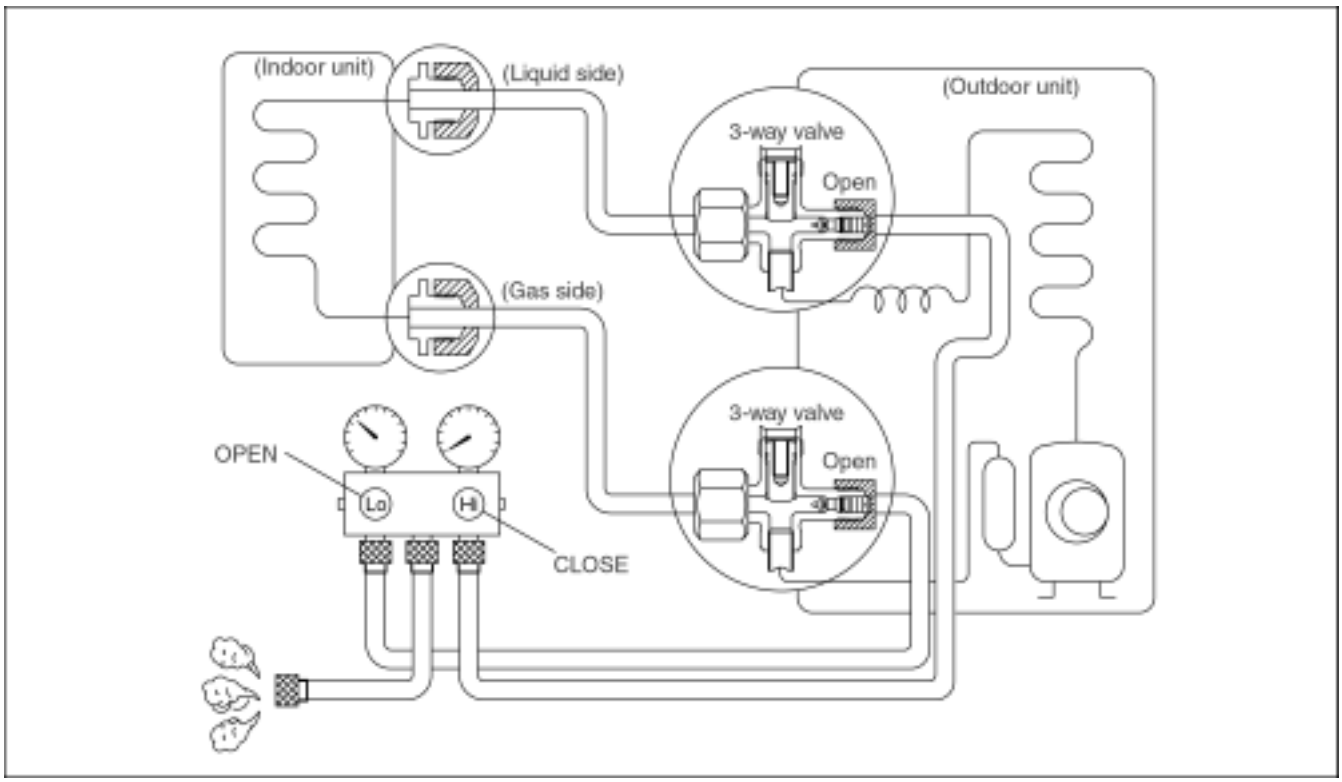

Procedure:

1. Confirm that both the 3-way valves are set to the open position.
2. Connect the manifold gauge to the gas side (Low side) 3-way valve s port.
    - Leave the valve on the manifold gauge closed.
    - Connect the manifold gauge to the service port.
3. Open the valves (Low side) on the manifold gauge and discharge the refrigerant until the gauge indicates 0.1 MPa.
    - If there is no air in the refrigeration cycle [the pressure when the air conditioner is not running is higher than 0.1 MPa]. If this is the case, it will not be necessary to apply a evacuation.
    - Discharge the refrigerant gradually; if it is discharged too suddenly, the refrigeration oil will also be discharged.

11.1.5 Evacuation

TOP PREVIOUS NEXT

(No refrigerant in the refrigeration cycle)

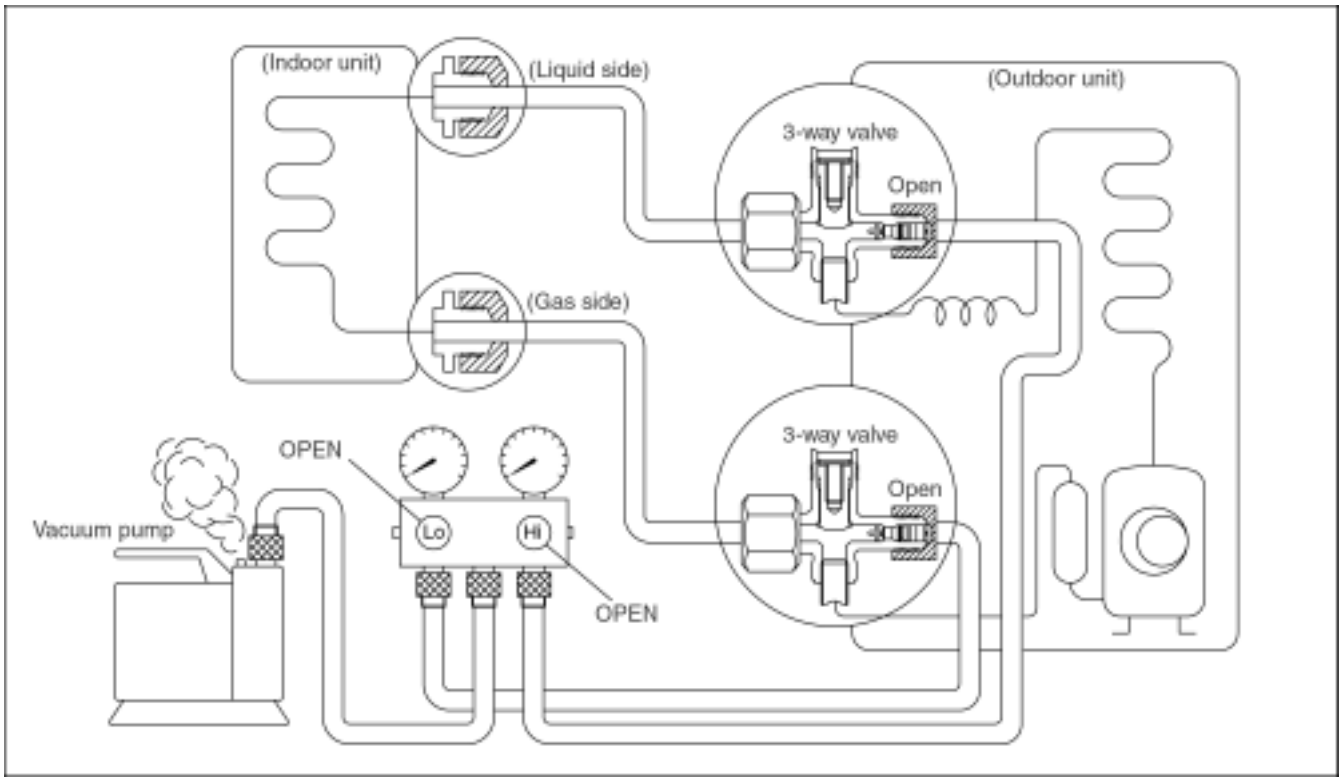

Procedure:

1. Connect the vacuum pump to the manifold gauge s centre hose.
2. Evacuation for approximately one hour.
    - Confirm that the gauge needle has moved toward -0.01 MPa.
3. Close the valve (Low side) on the manifold gauge, turn off the vacuum pump, and confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).
4. Disconnect the manifold gauge from the vacuum pump.
    - Vacuum pump oil.

      If the vacuum pump oil becomes dirty or depleted, replenish as needed.

11.1.6 Gas charging

(After Evacuation)

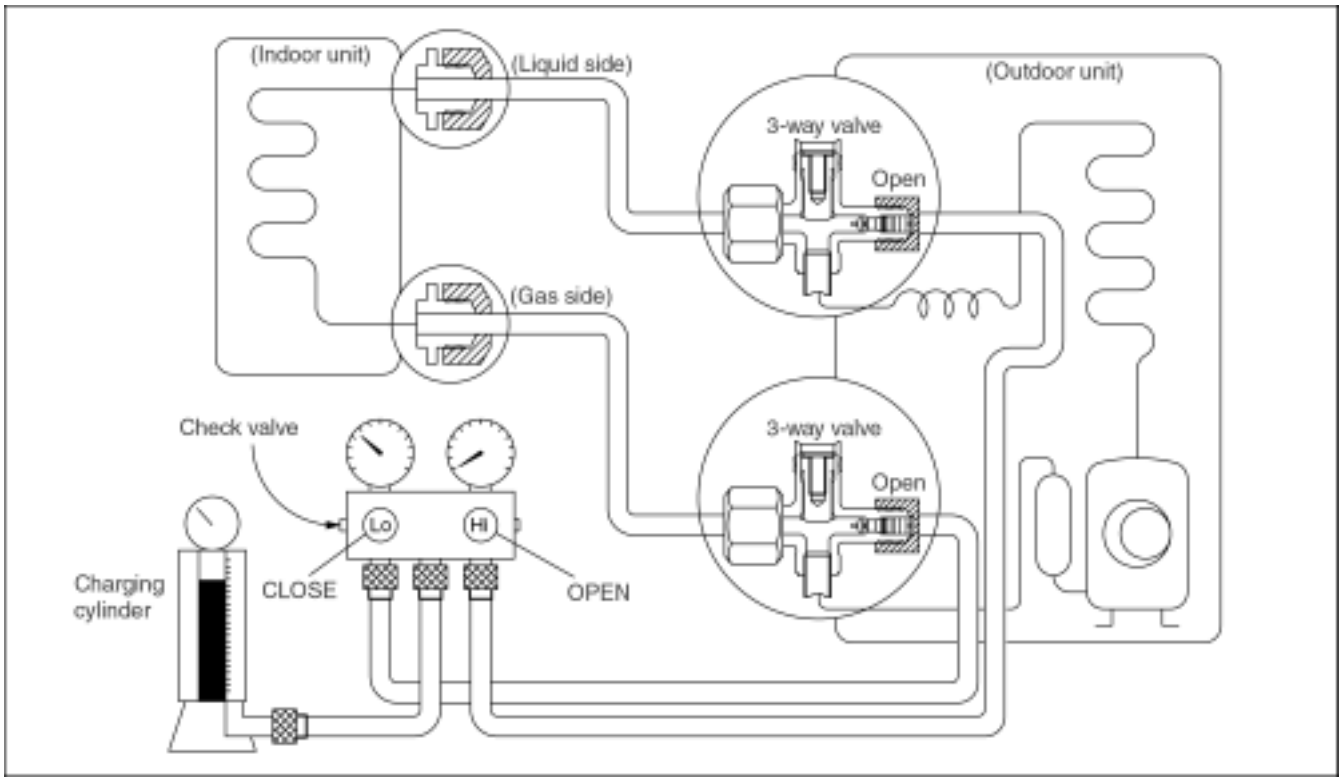

Procedure:

1. Connect the charge hose to the gas charging cylinder.
    - Connect the charge hose which you disconnected from the vacuum pump to the valve at the bottom of the cylinder.
2. Purge the air from the charge hose.
    - Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air. (Be careful of the liquid refrigerant). The procedure is the same if using a gas cylinder.
3. Open the valve (Low side) on the charge set and charge the system with liquid refrigerant.
    - If the system cannot be charged with the specified amount of refrigerant, it can be charged with a little at a time (approximately 150g each time) while operating the air conditioner in the cooling cycle; however, one time is not sufficient,wait approximately 1 minute and then repeat the procedure. (pumping down-pin)

4. Immediately disconnect the charge hose from the 3-way valve s service port.

    - Stopping partway will allow the refrigerant to be discharged.
    - If the system has been charged with liquid refrigerant while operating the air conditioner, turn off the air conditioner before disconnecting the hose.

5. Mount the valve caps and the service port caps.

    - Use a torque wrench to tighten the service port nut.
    - Be sure to check for gas leakage.

TOP PREVIOUS NEXT

12 Servicing Information

TOP PREVIOUS NEXT

Caution:

- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50 - 70°F (30 - 40°C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control,please set it to 700 ± 20°F (370 ± 10°C).
- Pb free solder will tend to splash when heated too high (about 1100° F/600°C).

12.1 Indoor Electronic Controllers Removal Procedures

12.2 Cross Flow Fan Indoor and Fan Motor Removal Procedures

TOP PREVIOUS NEXT

12.1 Indoor Electronic Controllers Removal Procedures

1. The Electronic Controller, a Signal Receiver and an Indicator (Fig. 3) can be seen by the below steps:
    - Open the Intake Grille and remove the screw at the front of the Front Grille. (Fig. 1).
    - Remove the 3 caps and 3 screws at the bottom of the Front Grille. (Fig. 1)
    - Remove the Front Grille by releasing the 3 hooks at the top of the Front Grille. (Fig. 1)
    - Unhook the tabs at the Control Board to remove the Control Board Cover. (Fig. 2)
2. To remove the Electronic Controllers:
    - Release the 2 Particular Piece. (Fig. 3)
    - Release the CN-REC/DISP connectors. (Fig. 4)
    - Release the CN-TH connector. (Fig. 4)
    - Release the CN-MAIN connector. (Fig. 4)
    - Release the CN-001 connector. (Fig. 4)
    - Release the CN-002 connector. (Fig. 4)
    - Release the CN-STM1 connector. (Fig. 4)
    - Release the CN-STM2 connector. (Fig. 4)
    - Release the hooks that hold the Electronic Controller. (Fig. 3)

Fig. 1

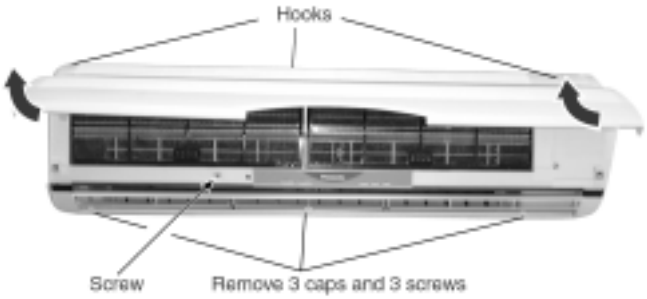

Fig. 2

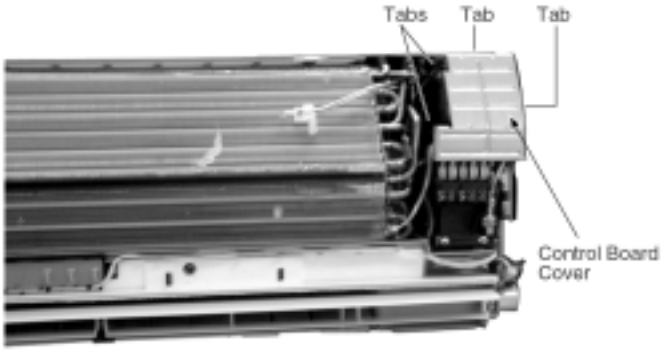

Fig. 3

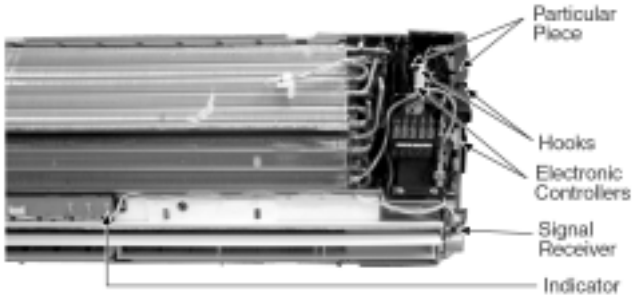

Fig. 4

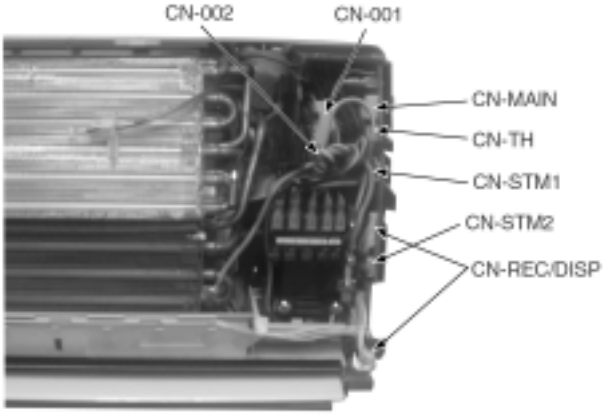

TOP PREVIOUS NEXT

12.2 Cross Flow Fan Indoor and Fan Motor Removal Procedures

1. In order to remove the Cross Flow Fan and Indoor Fan Motor, Control Board need to be taken out by releasing all the connectors as indicated below.

    A. Release the Earth Wire screw. (Fig. 5)

    B. Release the Intake Air Sensor. (Fig. 5)

    C. Release the Piping Sensor. (Fig. 5)

    D. Release the CN-REC/DISP connectors. (Fig. 5)

    E. Release the CN-STM1 connector. (Fig. 5)

2. Pull out the Drain Hose from outlet to remove the Discharge Grille. (Fig. 6)

3. Removing the right and left screws. (Fig. 7)

4. By pressing down the hook at the left and pushing up the hook at the right, you will be able to remove the Control Board. (Fig. 7)

5. Remove the screw at the Cross Flow Fan. (Fig. 8)

Fig. 5

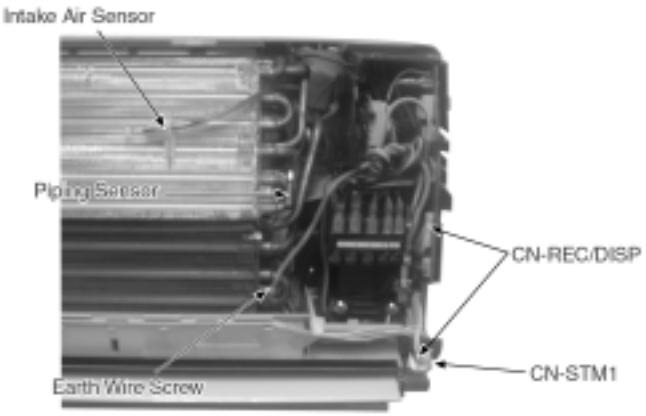

Fig. 6

Fig. 7

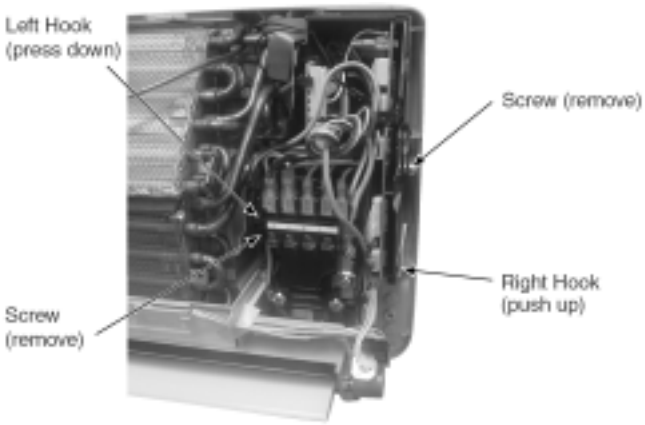

Fig. 8

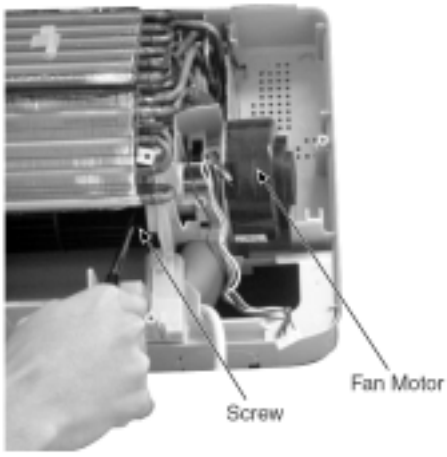

6. Remove the Bearing. (Fig. 9)

7. Remove the screws at the left of the Evaporator. (Fig. 9)

8. Push up the Evaporator and pull out the Cross Flow Fan from shaft. By then, Fan Motor can be taken out. (Fig. 10).

   REMINDER - To reinstall the Fan Motor, put it back in place, adjust the position of the Fan Motor s leadwire appropriately as shown in the Fig. 8 0before installing the Cross Flow Fan.

Fig. 9

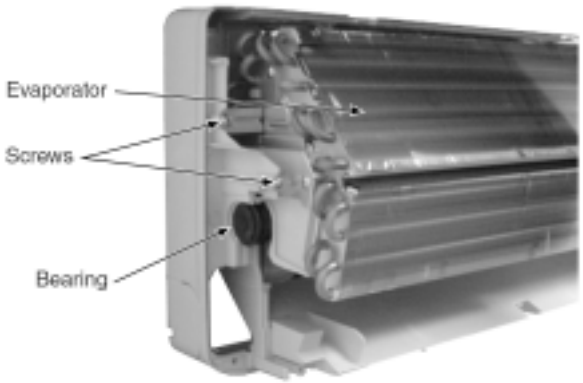

Fig. 10

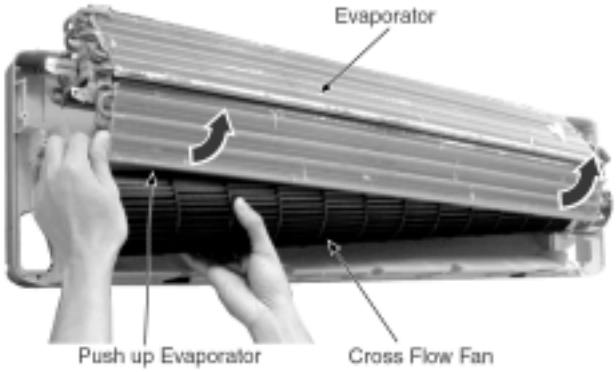

- Remote Control Reset

  When the batteries are inserted for the first time, or the batteries are replaced, all the indications will blink and the remote control might not work.

  If this happen, remove the cover of the remote control and you will find a resetting terminal, and by shorting it with a minus screwdriver, it will return to normal.

- Changing the wireless remote control transmission code

  When two indoor units are installed in the same room, in order to prevent operating errors caused by using two remote controls, cut a jumper wire at the remote control printed circuit board (J - A) and cut a jumper wire at the indoor printed circuitboard (JX4). It is possible to select from 4 types of transmission codes including one at time of delivery condition (0).

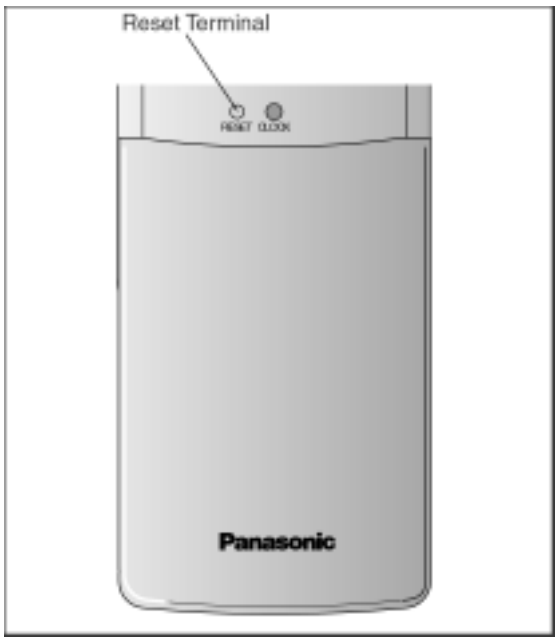

Indoor printed circuit board	Remote control printed circuit board
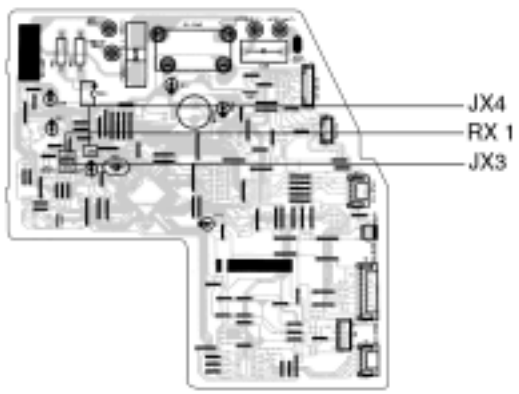	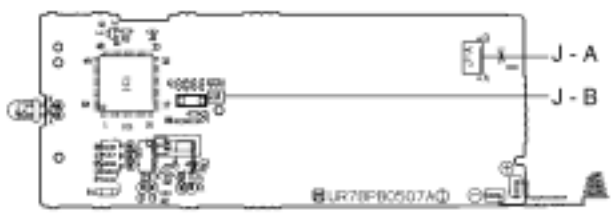

	Remote control printed circuit board		Indoor printed circuit board			Note
	J - A	J - B	JX3	JX4	RX 1	
0	SHORT	OPEN	SHORT	SHORT	——	At product delivery
1	OPEN	OPEN	SHORT	OPEN	——	
2	SHORT	SHORT	OPEN	OPEN	10 KΩ	
3	OPEN	SHORT	SHORT	OPEN	10 KΩ	

TOP PREVIOUS NEXT

13 Troubleshooting Guide

TOP PREVIOUS NEXT

13.1 Refrigeration cycle system

13.1.1 Relationship between the condition of the air conditioner and pressure and electric current

13.1.2 Diagnosis methods of a malfunction of a compressor and 4-way valve

TOP PREVIOUS NEXT

13.1 Refrigeration cycle system

In order to diagnose malfunctions, make sure that there are no electrical problems before inspecting the refrigeration cycle. Such problems include insufficient insulation, problem with the power source, malfunction of a compressor and a fan.

The normal outlet air temperature and pressure of the refrigeration cycle depends on various conditions, the standard values for them are shown in the table on the right.

Normal Pressure and Outlet Air Temperature (Standard)

	Gas pressure Mpa (kg/cm^2G)	Outlet air temperature (°C)
Cooling Mode	0.4 ~ 0.6 (4 ~ 6)	12 ~ 16
Heating Mode	1.5 ~ 2.1 (15 ~ 21)	36 ~ 45

* Condition: Indoor fan speed; High
Outdoor temperature 35°C at the cooling mode and 7°C at the heating mode

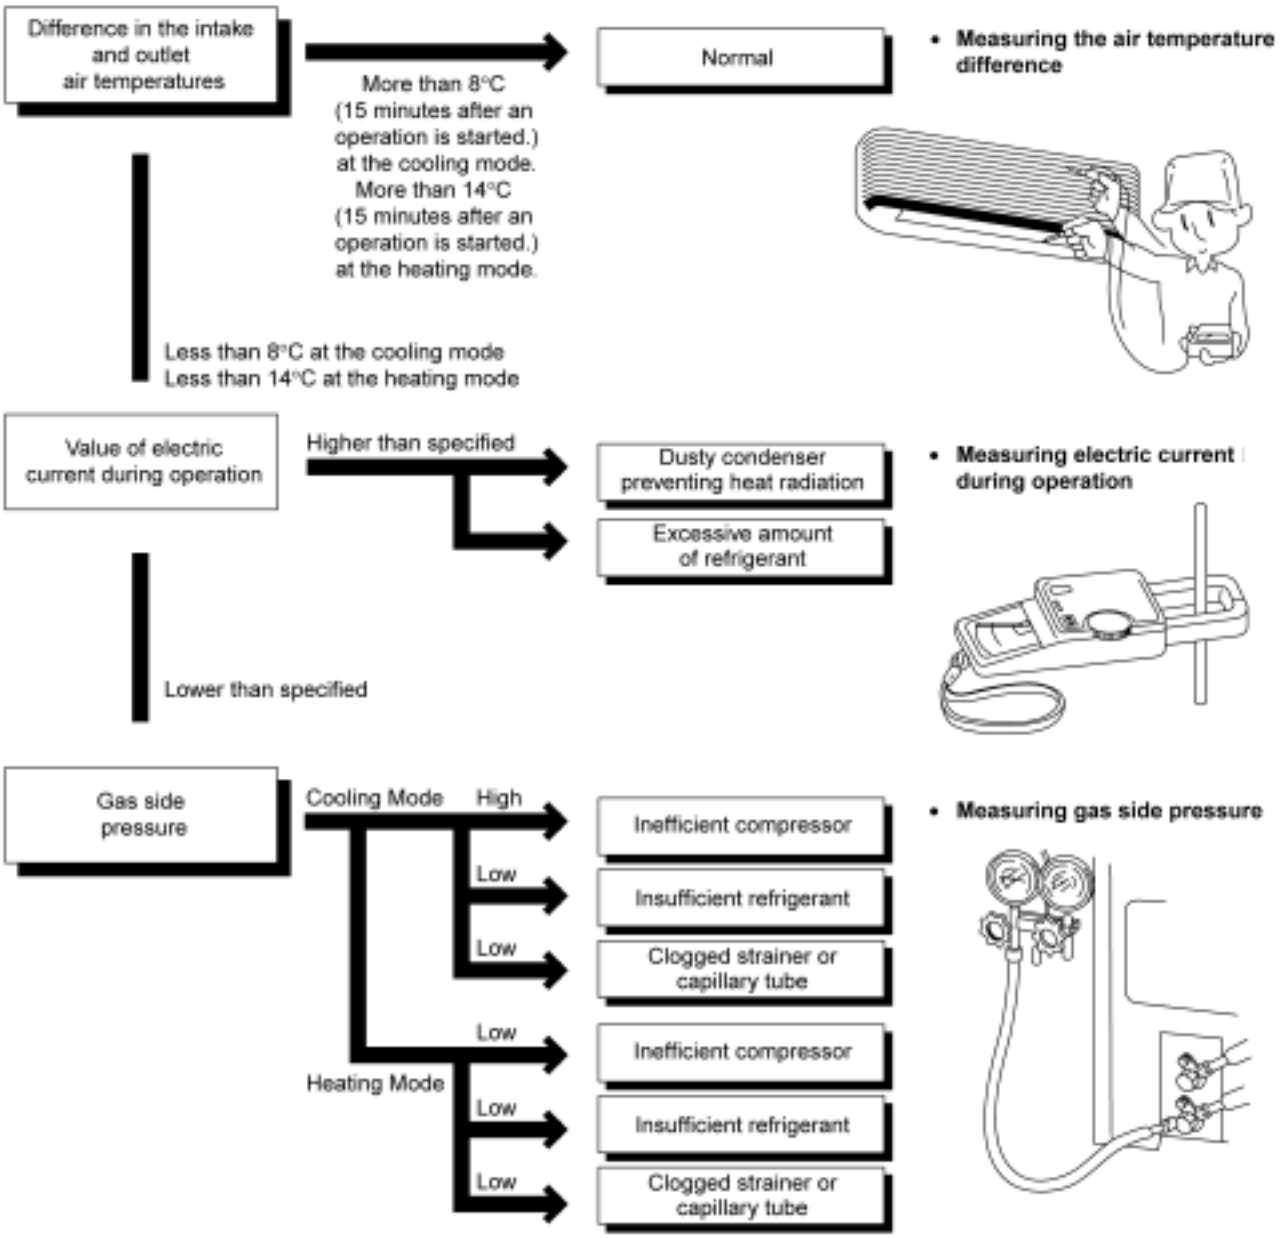
Difference in the intake and outlet air temperatures
More than 8°C (15 minutes after an operation is started.) at the cooling mode.
More than 14°C (15 minutes after an operation is started.) at the heating mode.
Normal
Less than 8°C at the cooling mode
Less than 14°C at the heating mode
Value of electric current during operation
Higher than specified
Dusty condenser preventing heat radiation
Excessive amount of refrigerant
Lower than specified
Gas side pressure
Cooling Mode
High
Low
Low
Low
Heating Mode
Low
Low
Inefficient compressor
Insufficient refrigerant
Clogged strainer or capillary tube
Inefficient compressor
Insufficient refrigerant
Clogged strainer or capillary tube
• Measuring the air temperature difference
• Measuring electric current during operation
• Measuring gas side pressure

13.1.1 Relationship between the condition of the air conditioner and pressure and electric current

13.1.2 Diagnosis methods of a malfunction of a compressor and 4-way valve

TOP PREVIOUS NEXT

13.1.1 Relationship between the condition of the air conditioner and pressure and electric current

TOP PREVIOUS NEXT

Condition of the air conditioner	Cooling Mode			Heating Mode		
	Low Pressure	High Pressure	Electric current during operation	Low Pressure	High Pressure	Electric current during operation
Insufficient refrigerant (gas leakage)	↘	↘	↘	↘	↘	↘
Clogged capillary tube or Strainer	↘	↘	↘	↘	↘	↘
Short circuit in the indoor unit	↘	↘	↘	↗	↗	↗
Heat radiation deficiency of the outdoor unit	↗	↗	↗	↘	↘	↘
Inefficient compression	↗	↘	↘	↗	↘	↘

- Carry out the measurements of pressure, electric current, and temperature fifteen minutes after an operation is started.

13.1.2 Diagnosis methods of a malfunction of a compressor and 4-way valve

Nature of fault	Symptom
	• Electric current during operation becomes approximately 20% lower than the normal value.
Insufficient compressing of a compressor	• The discharge tube of the compressor becomes abnormally hot (normally 70 to 90°C).
	• The difference between high pressure and low pressure becomes almost zero.
	• Electric current reaches a high level abnormally, and the value exceeds the limit of an ammeter. In some cases, a breaker turns off.
Locked compressor	
	• The compressor is a humming sound.
	• Electric current during operation becomes approximately 80% lower than the normal value.
Insufficient switches of the 4-way valve	

		• The temperature different between from the discharge tube to the 4-way valve and from suction tube to the 4-way valve becomes almost zero.

TOP PREVIOUS NEXT

14 Technical Data

■ Thermostat characteristics

CS-A18CK

- **Cooling**

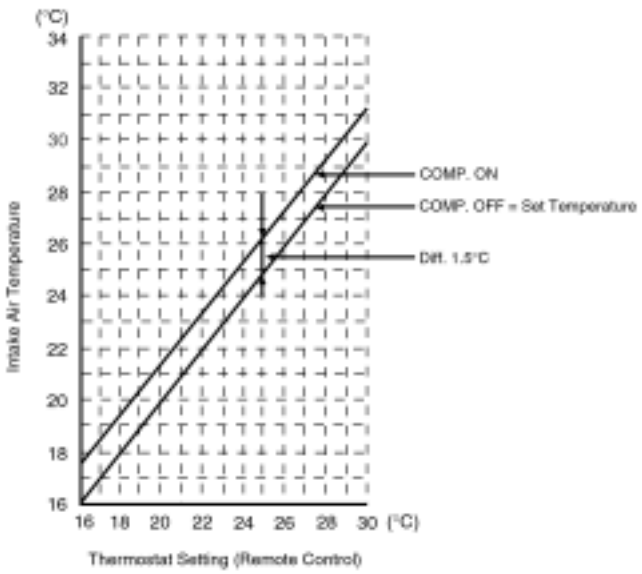

- **Soft Dry**

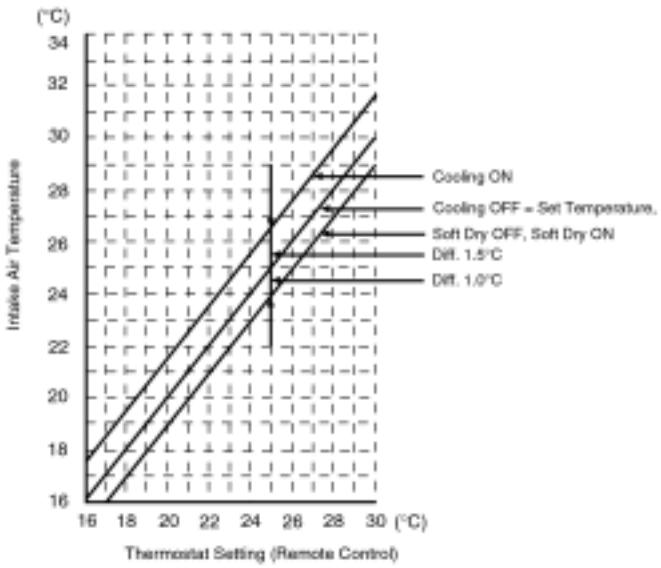

- **Heating**

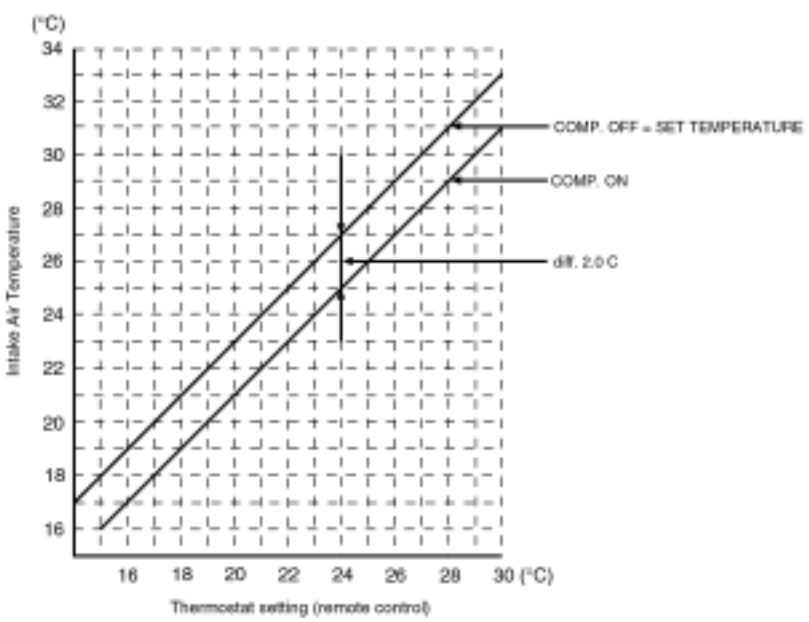

■ Operation characteristics

CS-A18CK / CU-A18CK

• Cooling Characteristic

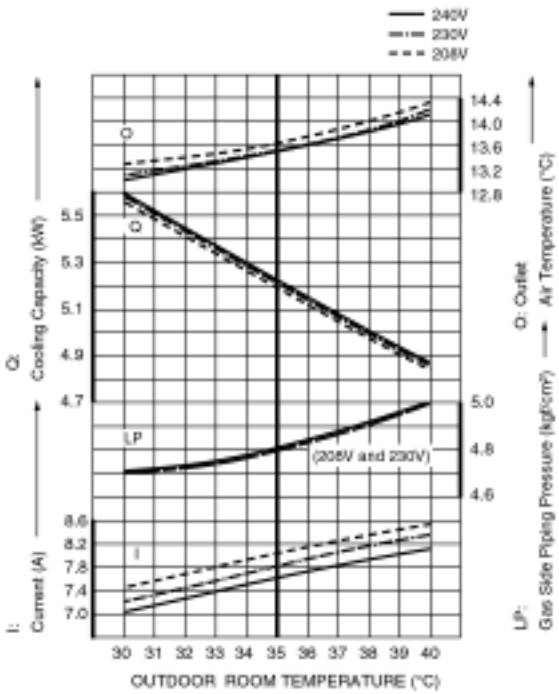

[Condition] Room temperature: 27/19°C
Cooling operation: At High fan
Piping length: 5 m

• Piping Length Characteristic (Cooling)

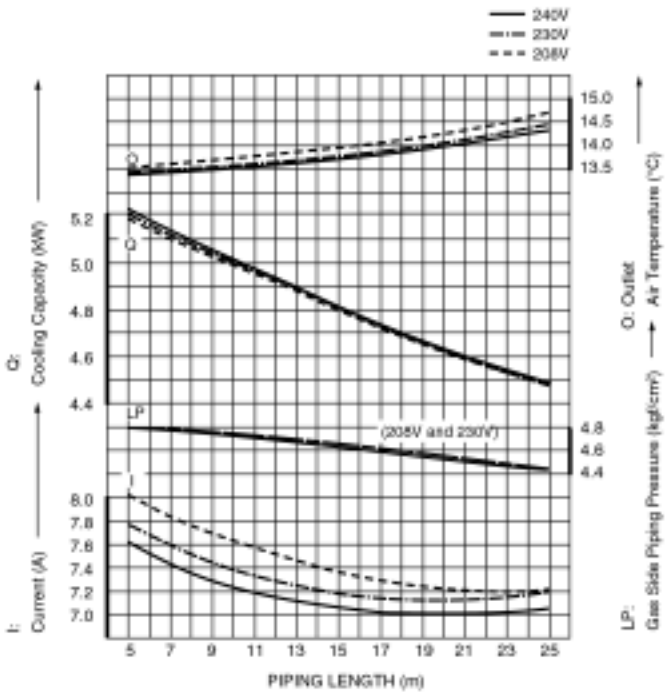

[Condition] Room temperature: 27/19°C
Outdoor temperature: 35/24°C
Cooling opeartion: At High fan

• Heating Characteristic

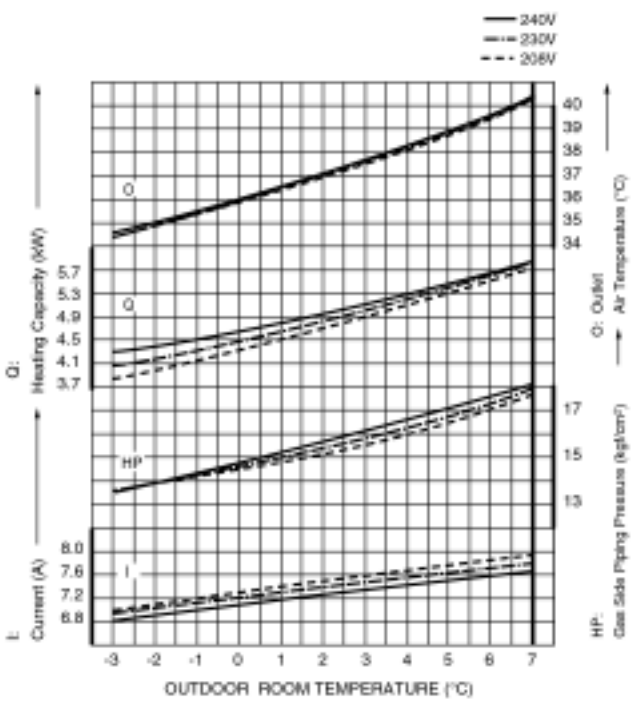

[Condition] Room temperature: 20°C
Heating operation: At High fan
Piping length: 5 m

• Piping Length Characteristic (Heating)

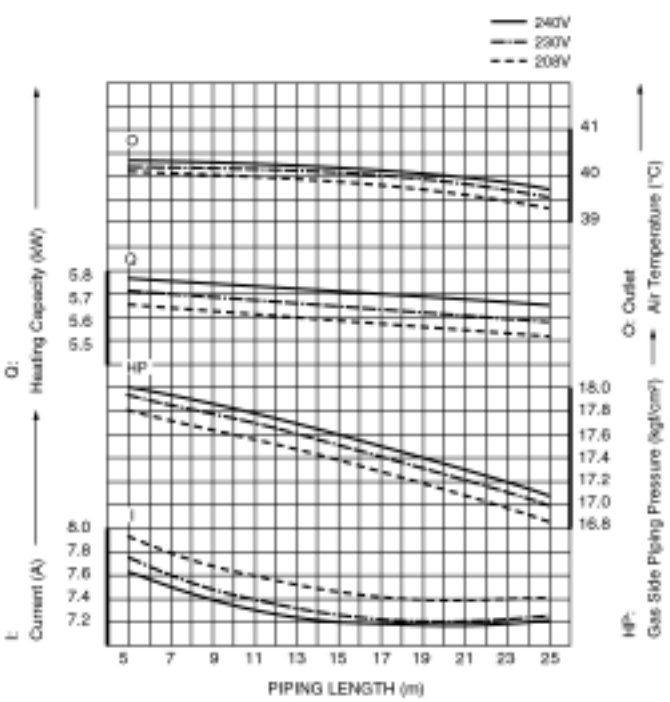

[Condition] Room temperature: 20°C
Outdoor temperature: 7/6°C
Heating opeartion: At High fan

15 Exploded View

Note:

The above exploded view is for the purpose of parts disassembly and replacement.

The non-numbered parts are not kept as standard service parts.

CS-A18CK

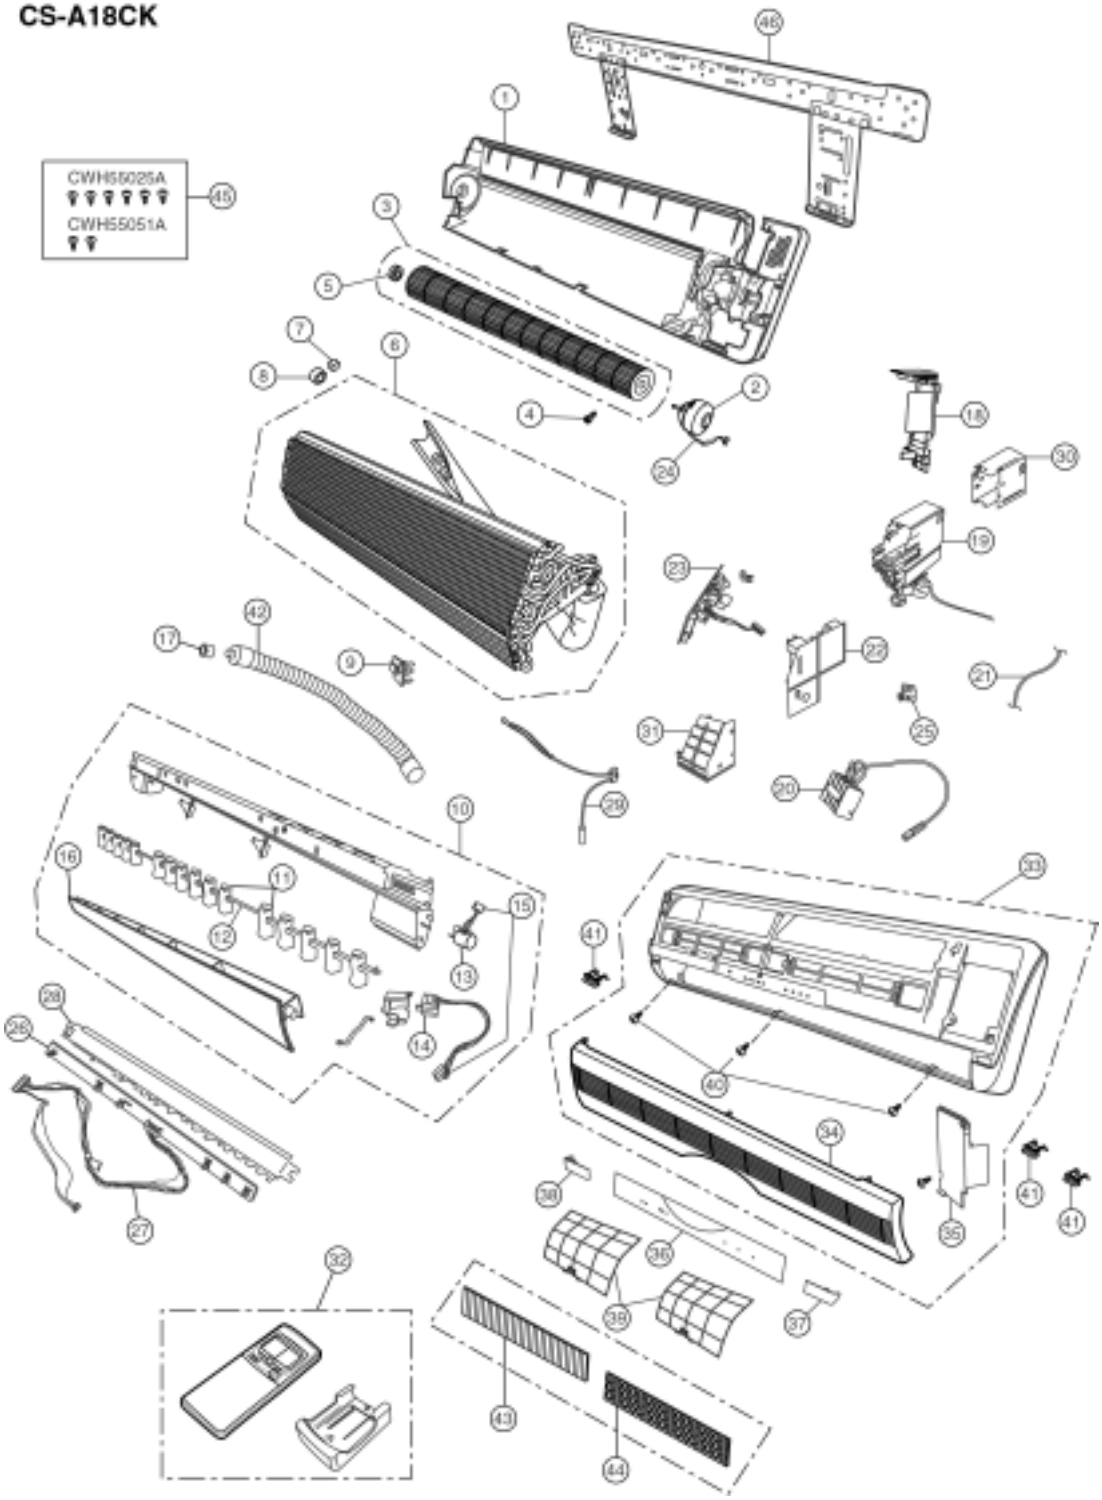

16 Replacement Parts List

TOP PREVIOUS NEXT

<Model: CS-A18CK>

REF. NO.	PART NAME & DESCRIPTION	QTY.		CS-A18CK	REMARKS
1	CHASSY COMPLETE	1		CWD50C1212	
2	FAN MOTOR	1		CWA981056	0
3	CROSS FLOW FAN COMPLETE	1		CWH02C1010	
4	SCREW - CROSS FLOW FAN	1		CWH4580304	
5	BEARING ASS Y	1		CWH64K007	
6	EVAPORATOR	1		CWB30C1283	
7	FLARE NUT	1		CWH6002140 (1/4)	
8	FLARE NUT	1		CWT25007 (1/2)	
9	INTAKE AIR SENSOR HOLDER	1		CWH32142	
10	DISCHARGE GRILLE COMPLETE	1		CWE20C2131	
11	VERTICAL VANE	16		CWE241088	
12	CONNECTING BAR	1		CWE261025	
13	AIR SWING MOTOR	1		CWA98260	0
14	AIR SWING MOTOR	1		CWA981041	0
15	LEAD WIRE - AIR SWING MOTOR	1		CWA67C3731	
16	HORIZONTAL VANE	1		CWE241072	
17	CAP - DRAIN TRAY	1		CWH52C1001	
18	PARTICULAR PIECE	1		CWD932162	
19	CONTROL BOARD	1		CWH102103B	
20	TERMINAL BOARD COMPLETE	1		CWA28C2166	0
21	POWER SUPPLY CORD	1		-	
22	ELECTRONIC CONTROLLER - MAIN	1		CWA743055	0
23	ELECTRONIC CONTROLLER - POWER	1		CWA742616	0
24	LEAD WIRE - FAN MOTOR	1		CWA67C3732	
25	P.C.B. RECEIVER	1		CWA73C1124	
26	ELECTRONIC CONTROLLER - INDICATOR	1		CWE39C1046	0
27	LEAD WIRE - INDICATOR	1		CWA67C3724	
28	INDICATOR HOLDER	1		CWD932163	

29	SENSOR COMPLETE	1		CWA50C2086	0
30	CONTROL BOARD TOP COVER	1		CWH131091	
31	CONTROL BOARD FRONT COVER	1		CWH131090	
32	REMOTE CONTROL COMPLETE	1	(1) (2)	CWA75C2351 CWA75C2189	0
33	FRONT GRILLE COMPLETE	1	(1) (2)	CWE11C2471 CWE11C2675	
34	INTAKE GRILLE	1		CWE221037	
35	GRILLE DOOR	1		CWE141047	
36	CONTROL PANEL	1		CWE312114	
37	DECORATION BASE (R)	1		CWE351067	
38	DECORATION BASE (L)	1		CWE351068	
39	AIR FILTER	2		CWD001099	
40	SCREW - FRONT GRILLE	3		XTT4+16C	
41	CAP - FRONT GRILLE	3		CWH521062	
42	DRAIN HOSE	1		CWH851044	
43	AIR PURIFYING FILTER	1	(1) (2)	CWD00C1088 CWMD00C0001	0
44	SOLAR DEODORIZING FILTER	1		CWMD00C0002	0
45	BAG COMPLETE - INSTALLATION SCREW	1		CWH82C067	
46	INSTALLATION PLATE	1		CWH36K1007	

(Note)

- All parts are supplied from MAICO, Malaysia (Vendor Code: 061).
- O marked parts are recommended to be kept in stock.
- (1) - CS-A18CKPG-4 (USA).
- (2) - CS-A18CKPG-5 (Canada).

TOP PREVIOUS NEXT

17 Exploded View

Note:

The above exploded view is for the purpose of parts disassembly and replacement.

The non-numbered parts are not kept as standard service parts.

CU-A18CK

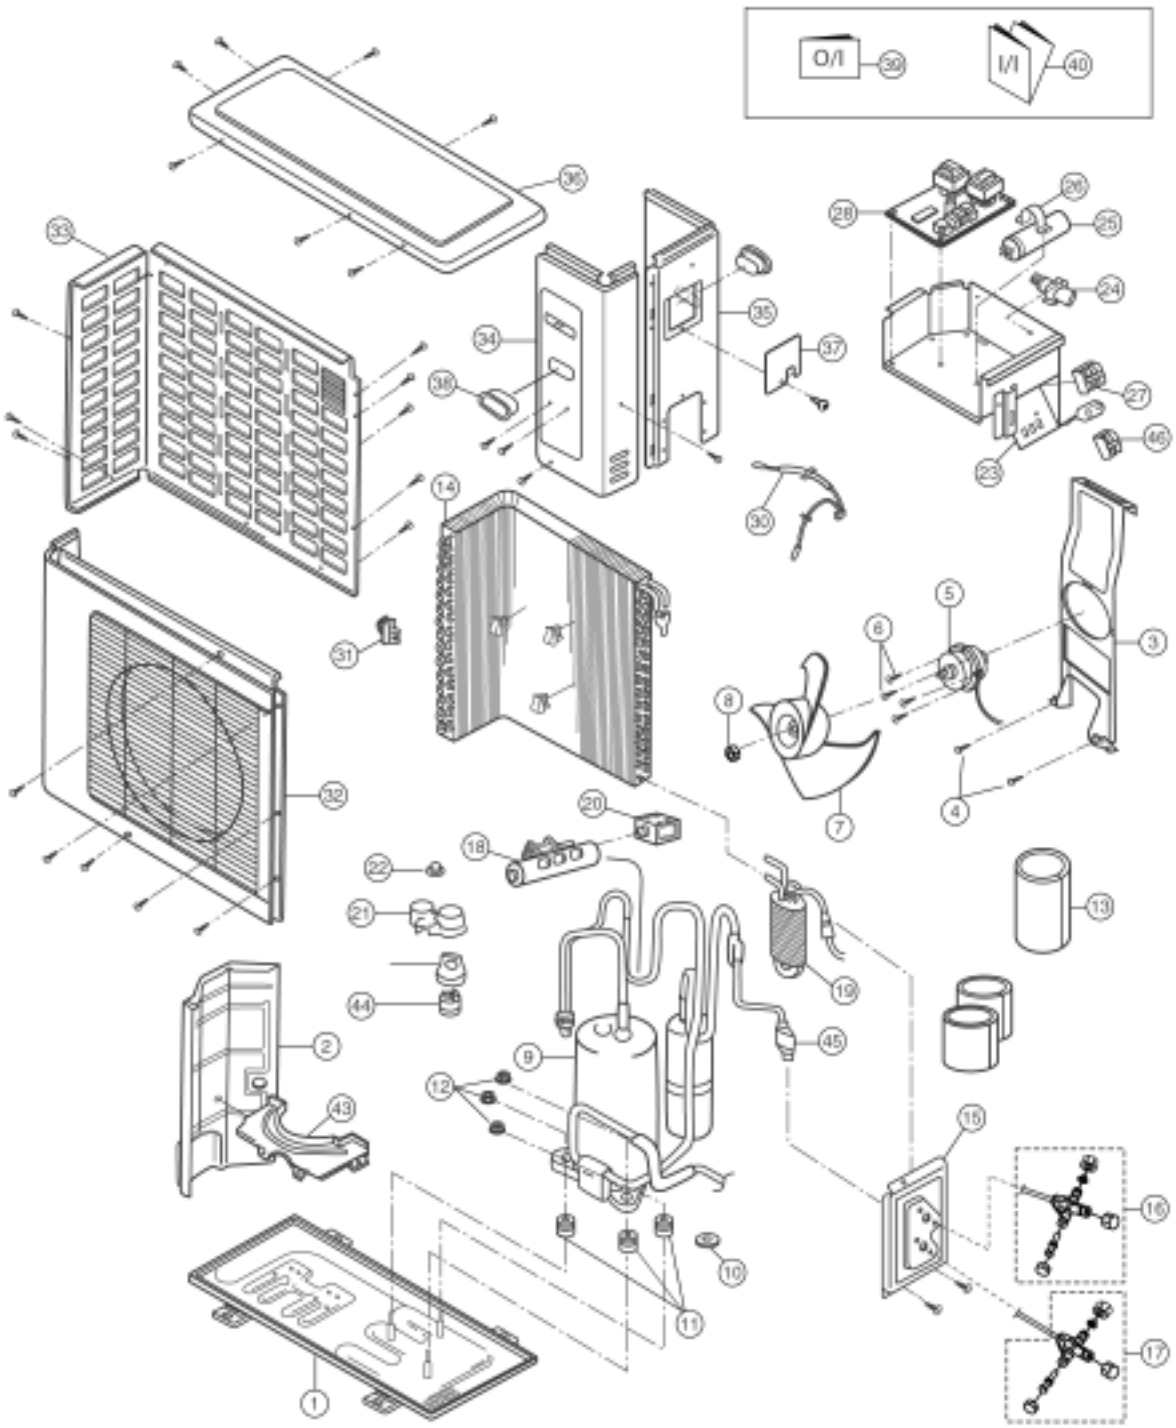
O/I
39
I/I
40
36
33
34
35
37
38
28
26
25
24
27
46
23
30
14
31
32
5
6
3
8
7
4
20
18
22
21
44
2
43
9
12
45
19
13
15
16
17
10
11
1

18 Replacement Parts List

<Model: CU-A18CK>

REF. NO.	PART NAME & DESCRIPTION	QTY.		CU-A18CK	REMARKS
1	CHASSY ASS Y	1		CWD50K2056B	
2	SOUND PROOF BOARD	1		CWH15223A	
3	FAN MOTOR BRACKET	1		CWD54237	
4	SCREW - FAN MOTOR BRACKET	4		CWH55027	
5	FAN MOTOR	1		CWA951238	0
6	SCREW - FAN MOTOR MOUNT	4		CWH55252	
7	PROPELLER FAN ASS Y	1		CWH00K1001	
8	NUT - PROPELLER FAN	1		CWH56060	
9	COMPRESSOR	1		2K25S236F6A	0
10	PACKING	1		-	
11	ANTI - VIBRATION BUSHING	3		CWH50055	
12	NUT - COMPRESSOR MOUNT	3		CWH4582065	
13	SOUND PROOF MATERIAL	1		CWG30894	
14	CONDENSER	1		CWB32C345R	
15	HOLDER COUPLING ASS Y	1		CWH35K029B	
16	3-WAY VALVE (LIQUID)	1		CWB01495	0
17	3-WAY VALVE (GAS)	1		CWB01364	0
18	4-WAY VALVE ASS Y	1		CWB00K1017	0
19	TUBE ASS Y (CAPILLARY TUBE & STRAINER)	1		CWT01C2685	
20	V-COIL COMPLETE	1		CWA43C2114	0
21	TERMINAL COVER	1		CWH171011	
22	NUT - TERMINAL COVER	1		CWH7080300	
23	CONTROL BOARD	1		CWH10K1027	
24	CAPACITOR - FAN MOTOR	1		F0GAH305A002	0
25	CAPACITOR - COMPRESSOR	1		CWA312078	0
26	HOLDER CAPACITOR	1	(1) (2)	CWH30060 CWH301005	
27	TERMINAL BOARD ASS Y	1		CWA28K1058	
28	ELECTRONIC CONTROLLER	1		CWA743035	

30	SENSOR COMPLETE	1		CWA50C618	
31	HOLDER - SENSOR	1		CWH32089	
32	CABINET FRONT PLATE	1		CWE06K1037B	
33	CABINET REAR PLATE	1		CWE021015B	
34	CABINET FRONT PLATE	1		CWE061054B	
35	CABINET SIDE PLATE	1		CWE041045B	
36	CABINET TOP PLATE	1		CWE031019B	
37	CONTROL BOARD COVER	1	(1) (2)	CWH13K1006A CWH131139	
38	HANDLE	2		CWE16000E	
39	OPERATION INSTRUCTIONS	1	(1) (2)	CWF563736 CWF563737	
40	INSTALLATION INSTRUCTIONS	1		CWF612331	
43	PARTICULATE PLATE	1		CWD90830	
44	OLP	1		CWA121074	
45	TUBE ASS Y (RECEIVER)	1		CWT01C2448	
46	TERMINAL BOARD ASS Y	1		CWA28K1068	

(Note)

- All parts are supplied from MAICO, Malaysia (Vendor Code: 061).
- O marked parts are recommended to be kept in stock.
- (1) - CU-A18CKP6G-4 (USA).
- (2) - CU-A18CKP6G-5 (Canada).

TOP PREVIOUS NEXT

19 Electronic Circuit Diagram

TOP PREVIOUS NEXT

How to use electronic circuit diagram

Before using the circuit diagram, read the following carefully.

* Voltage measurement
  Voltage has been measured with a digital tester when the indoor fan is set at high fan speed under the following conditions without setting the timer.
  Use them for servicing.
  Voltage indication is in Red at all operations.

	Intake air temperature	Temperature setting	Discharge air temperature	Pipe temperature
Cooling	27°C	16°C	17°C	15°C
Heating	20°C	30°C	40°C	50°C

* Indications for resistance
  a. K....kΩ M....MΩ
  W...watt Not indicated....1/4W
  b. Type
  Not indicated.....carbon resister
  Tolerance±5%
  .....metal oxide resister
  Tolerance±1%

* Indications for capacitor
  a. Unit μ....μF P....pF
  b. Type Not indicated....ceramic capacitor
  (S).....S series aluminium electrolytic capacitor
  (Z).....Z series aluminium electrolytic capacitor
  (SU).....SU series aluminium electrolytic capacitor
  (P).....P series polyester system
  (SXE).....SXE series aluminium electrolytic capacitor
  (SRA).....SRA series aluminium electrolytic capacitor
  (KME).....KME series aluminium electrolytic capacitor

* Diode without indication.....MA165
* Circuit Diagram is subject to change without notice for further development.

TIMER TABLE

Name		Time	Test Mode (When test point Short-circuited)	Remarks
Sleep Mode Waiting		1 hr.	6 sec.	
Sleep Mode Operation		8 hrs.	48 sec.	
Real Timer		1 hr.	1 min.	
		10 min.	10 sec.	
		1 min.	1 sec.	
Time Delay Safety Control		2 min. 58 sec.	0 sec.	
Forced Operation		60 sec.	0 sec.	
Time Save Control		7 min.	42 sec.	
Anti-Freezing		4 min.	0 sec.	
Auto Mode Judgement		25 sec.	0 sec.	
Soft Dry	OFF	6 min.	36 sec.	
	ON	10 min.	60 sec.	Soft Dry: 10 min. operation

Deodorizing Control	Cooling	40 sec.	4 sec.	
		70 sec.	7 sec.	
		20 sec.	2 sec.	
		180 sec.	18 sec.	
	Soft Dry	40 sec.	4 sec.	
		360 sec.	36 sec.	
Comp. Reverse Rotation Detection		5 min.	30 sec.	Comp. ON 5 min. and above
		2 min.	0 sec.	
Comp./ Fan Motor Delay Timer		1.6 sec.	0 sec.	
Powerful Mode Operation		15 min.	15 sec.	
Random Auto Restart Control		0 ~ 62 sec.	0 ~ 6.2 sec.	
4 Way Valve		5 min.	30 sec.	
After Deice Ended		30 sec.	3 sec.	Comp. OFF after deice
Hotstart Delay Times		4 min.	0 sec.	
Hotstart Finish Times		2 min.	0 sec.	

19.1 REMOTE CONTROL

19.2 PRINT PATTERNINDOOR UNIT PRINTED CIRCUIT BOARDTOP VIEW

19.3 PRINT PATTERNINDOOR UNIT PRINTED CIRCUIT BOARDBOTTOM VIEW

19.4 PRINT PATTERNOUTDOOR UNIT PRINTED CIRCUIT BOARD

TOP PREVIOUS NEXT

• CS-A18CK / CU-A18CK

SCHEMATIC DIAGRAM 1/3

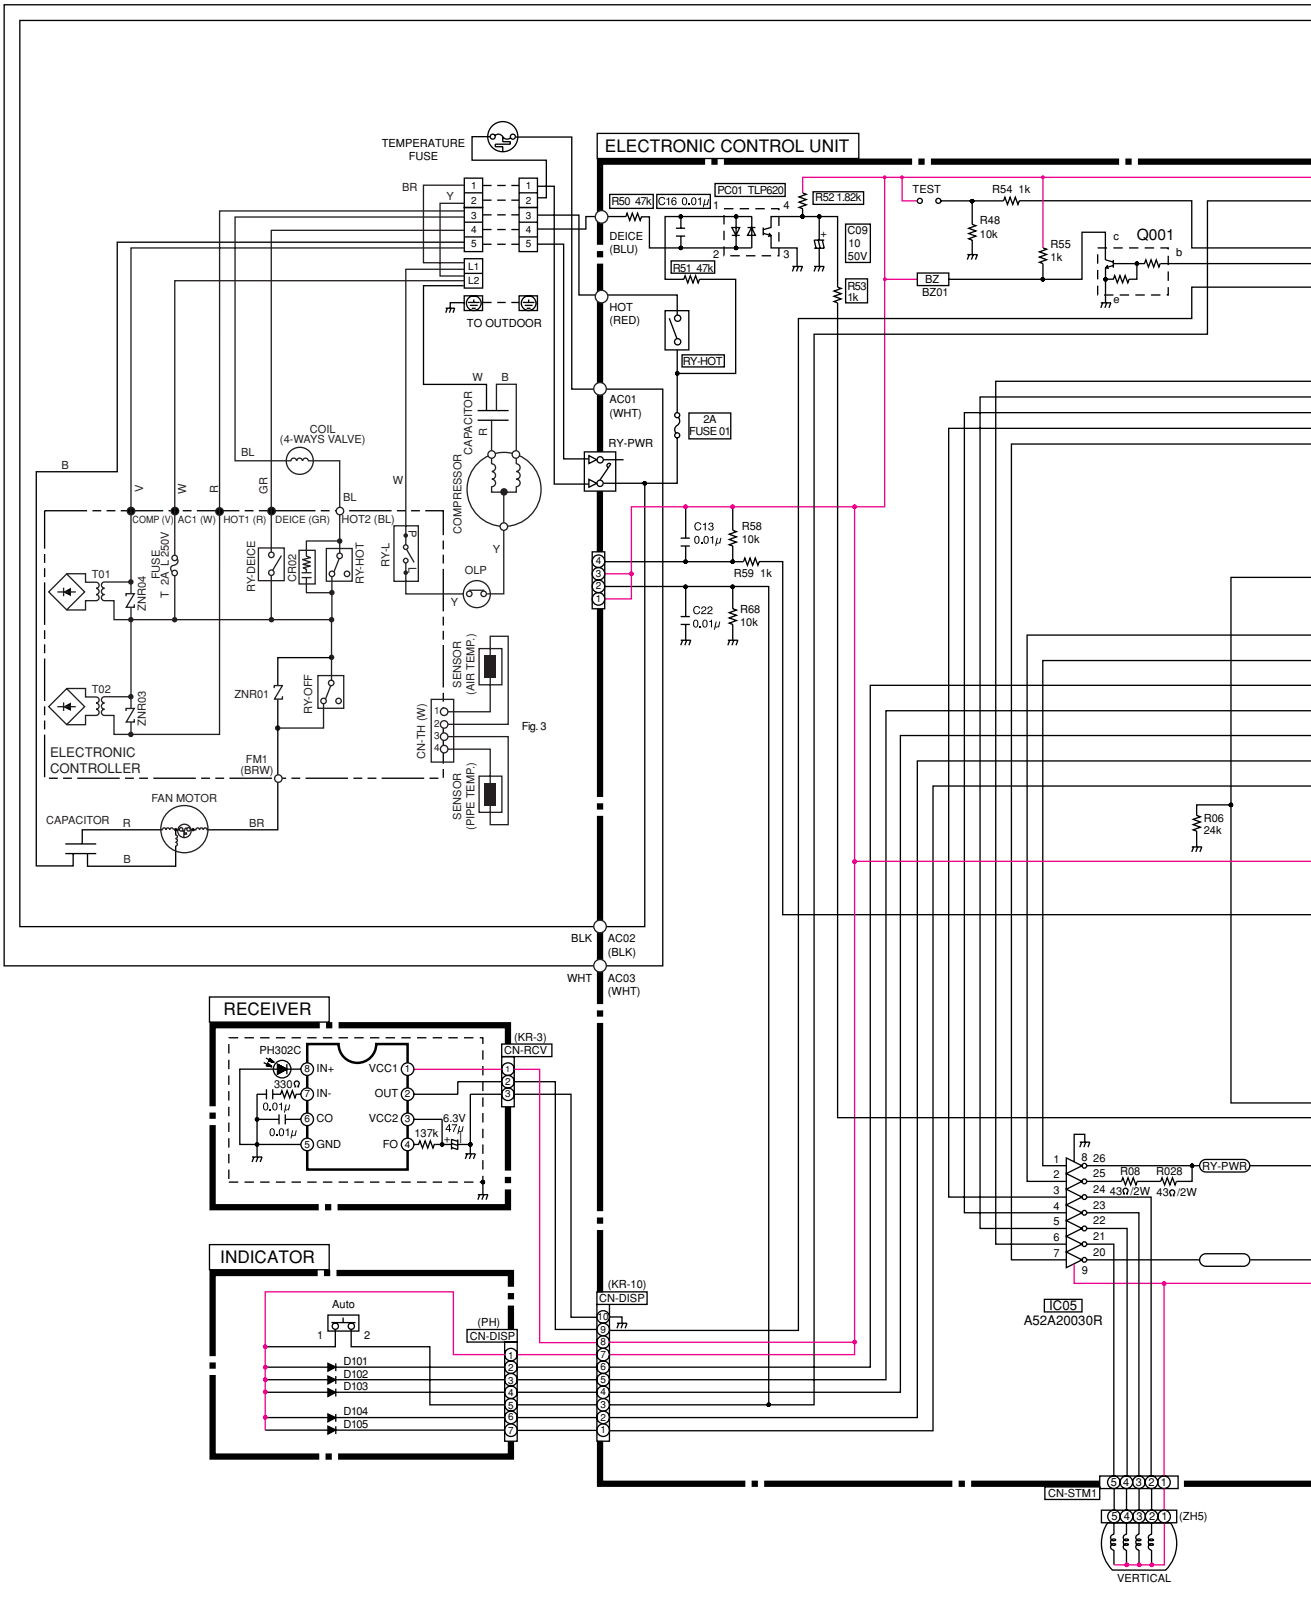

SCHEMATIC DIAGRAM 2/3

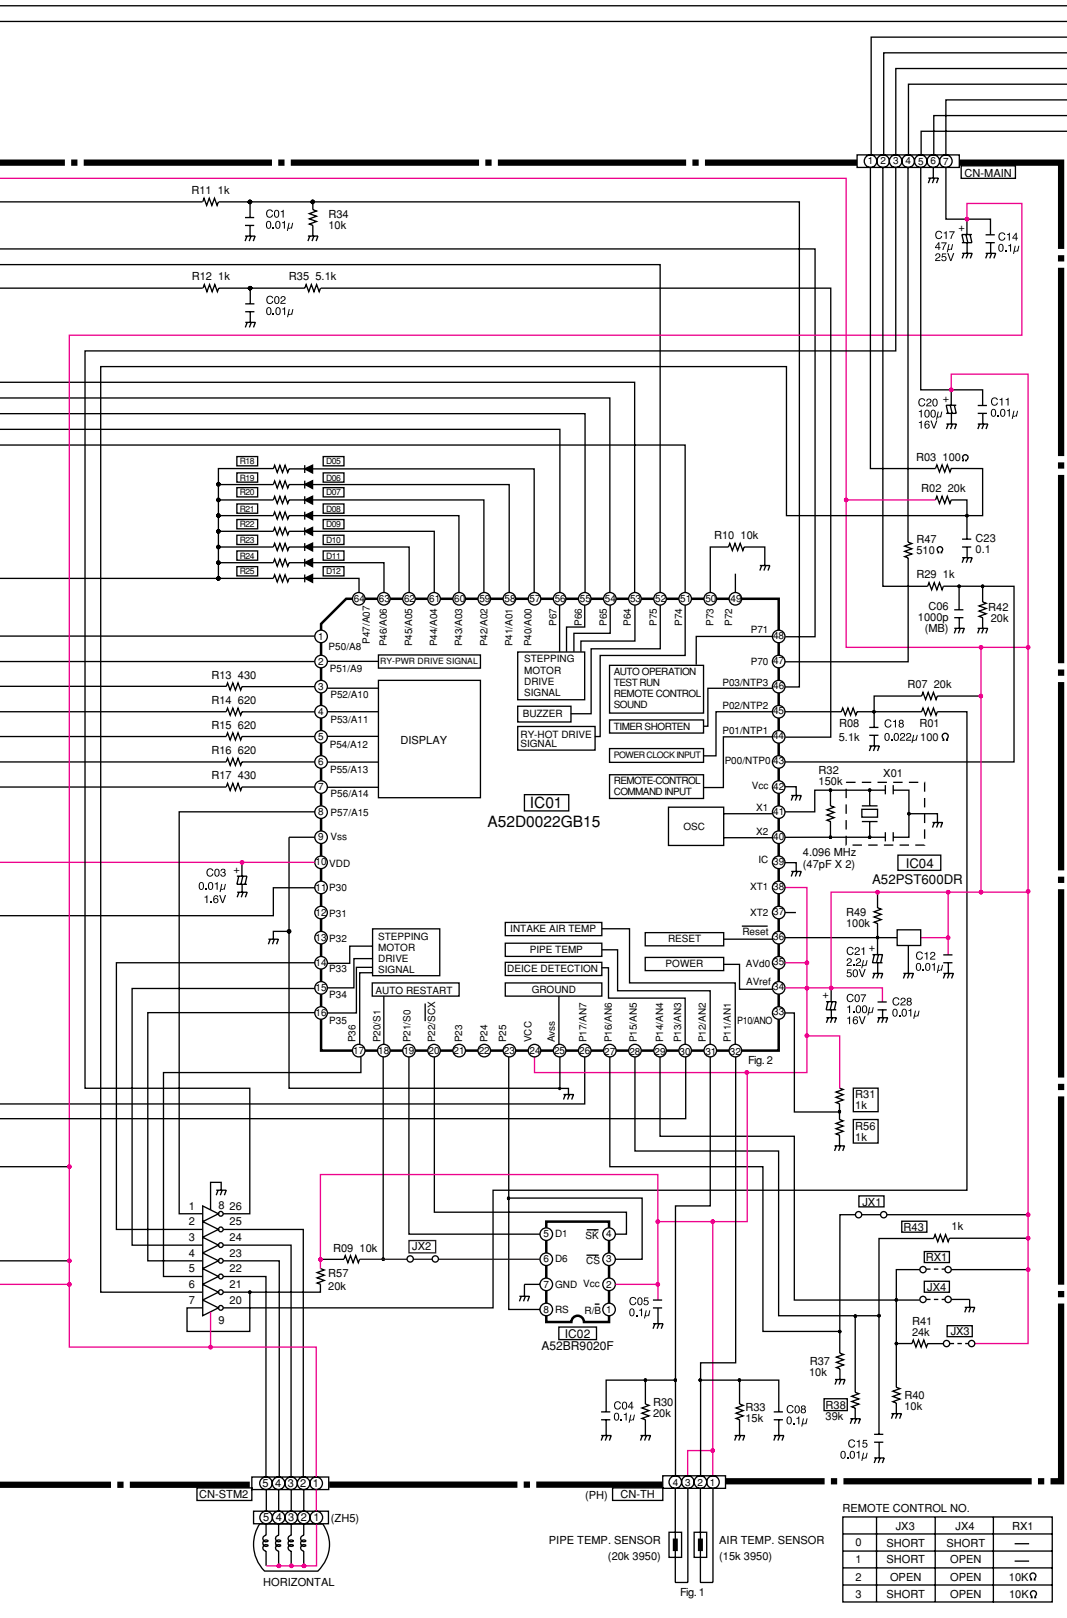

REMOTE CONTROL NO.

	JX3	JX4	RX1
0	SHORT	SHORT	—
1	SHORT	OPEN	—
2	OPEN	OPEN	10KΩ
3	SHORT	OPEN	10KΩ

SCHEMATIC DIAGRAM 3/3

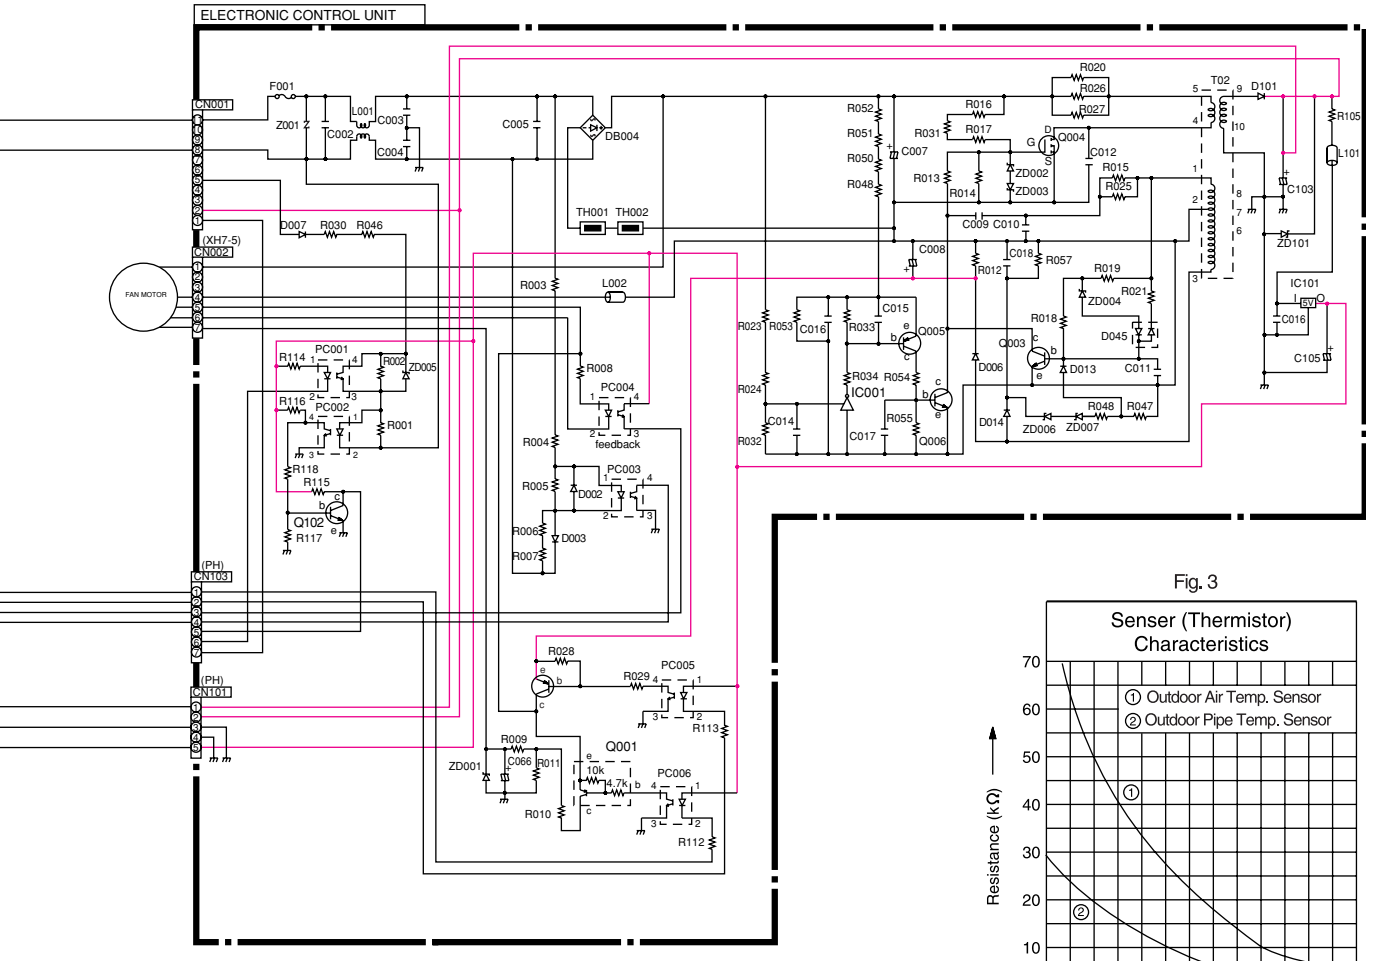

Fig. 3

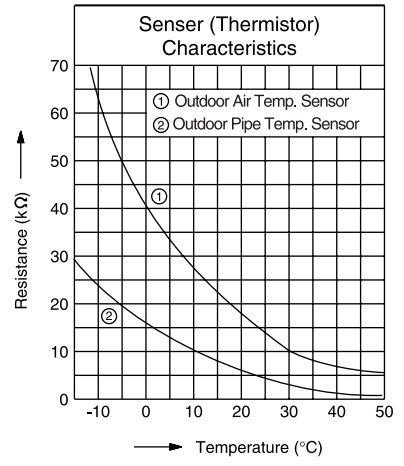

Fig. 1

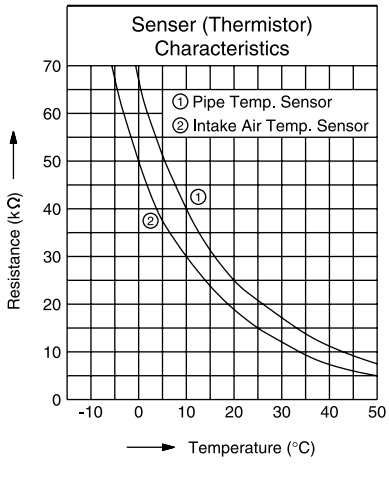

Fig. 2

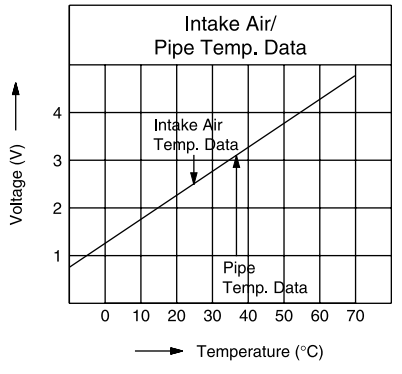

Fig. 4

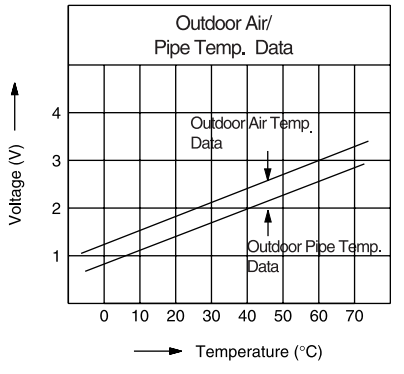

19.1 REMOTE CONTROL

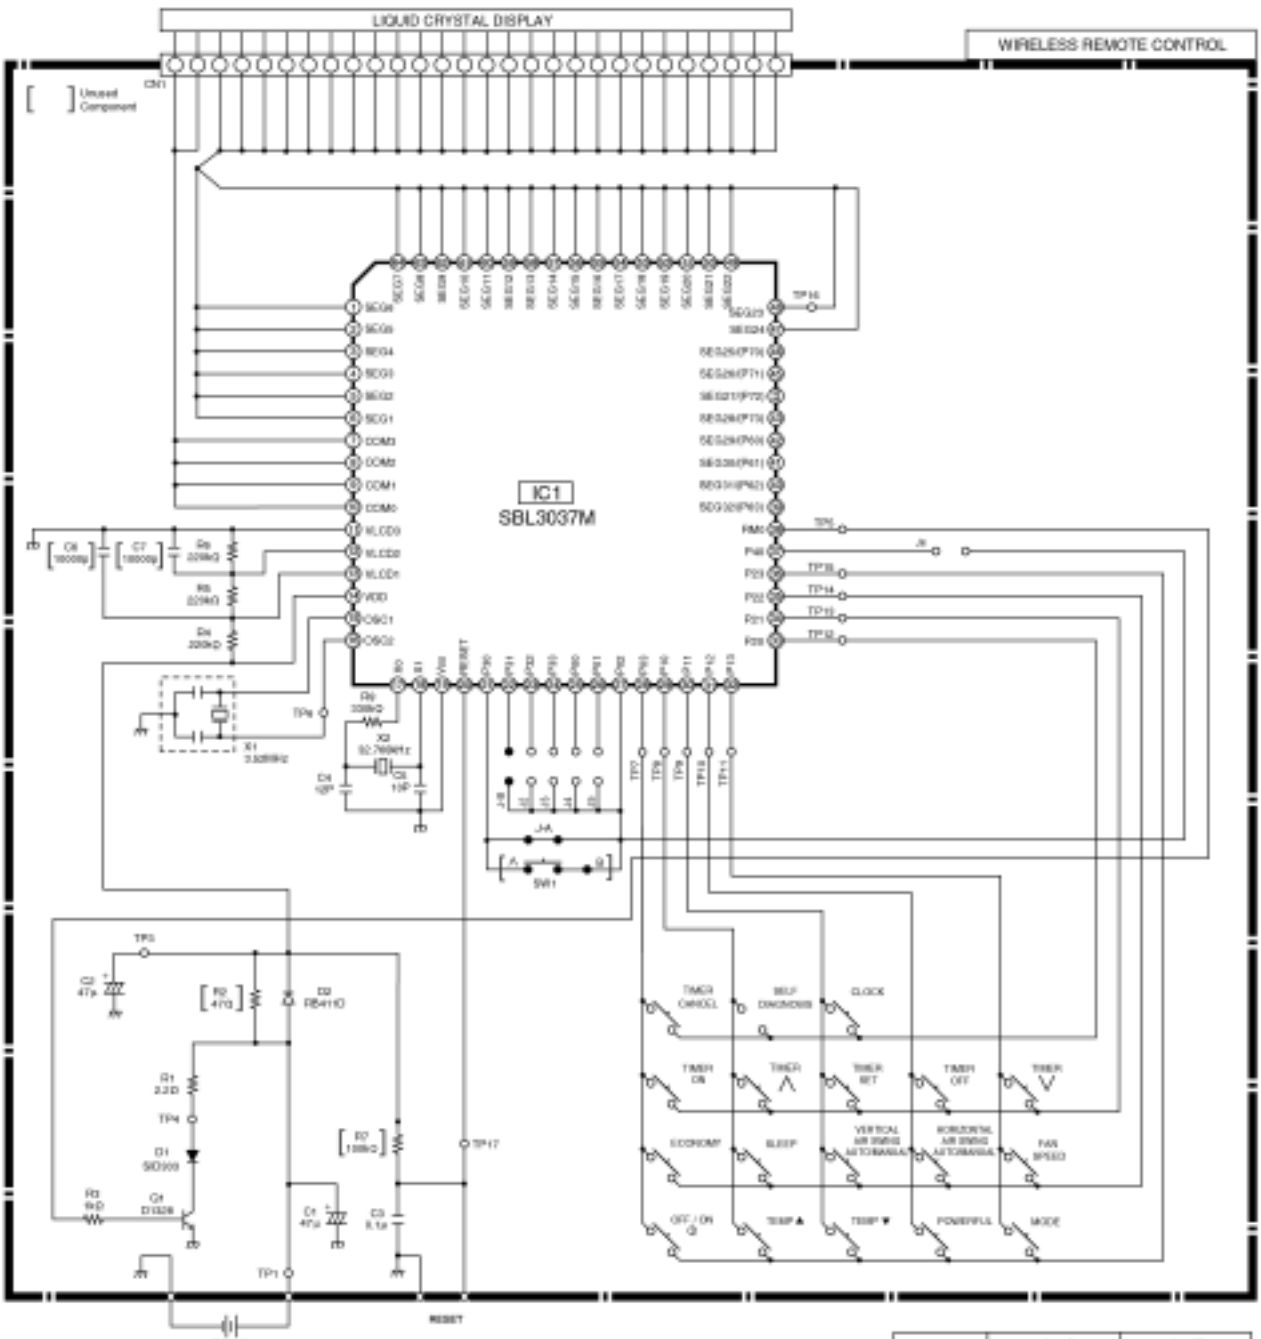

	J - A	J - B
0	SHORT	OPEN
1	OPEN	OPEN
2	SHORT	SHORT
3	OPEN	SHORT

19.2 PRINT PATTERN
INDOOR UNIT PRINTED CIRCUIT BOARD

TOP VIEW

TOP PREVIOUS NEXT

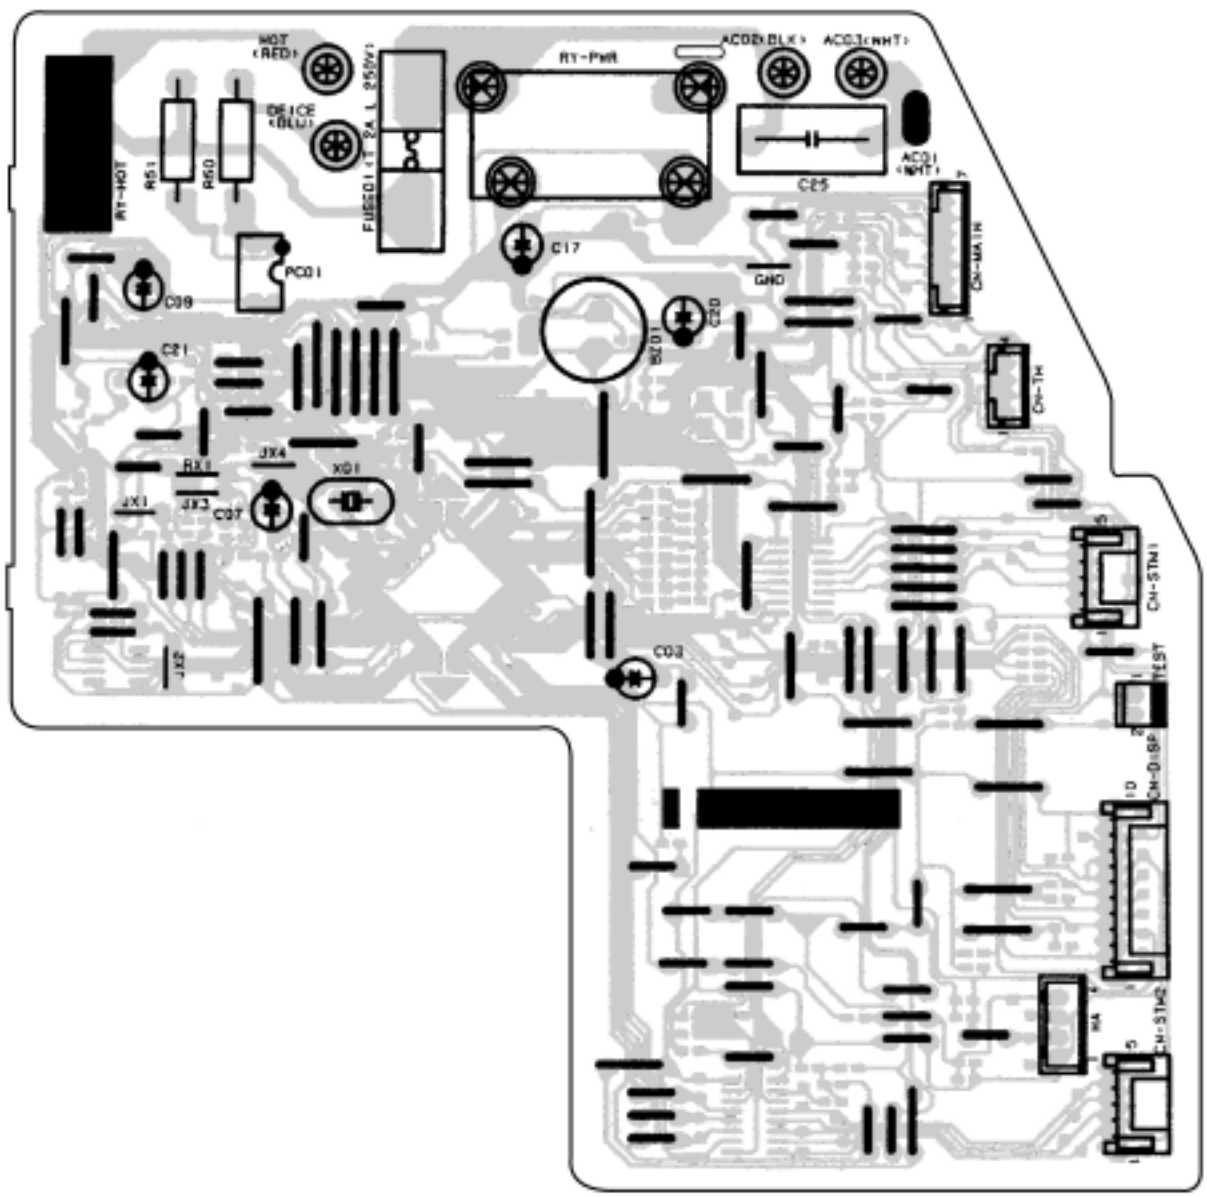

19.3 PRINT PATTERN
INDOOR UNIT PRINTED CIRCUIT BOARD

BOTTOM VIEW

TOP PREVIOUS NEXT

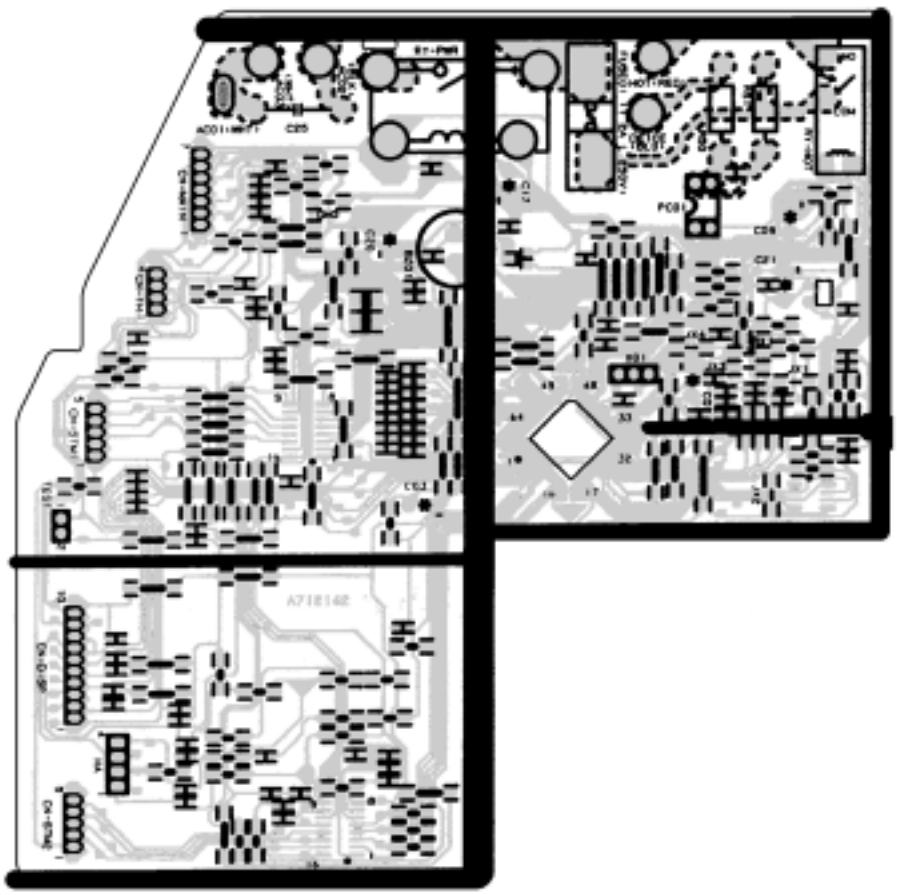

TOP PREVIOUS NEXT

19.4 PRINT PATTERN OUTDOOR UNIT PRINTED CIRCUIT BOARD

TOP PREVIOUS

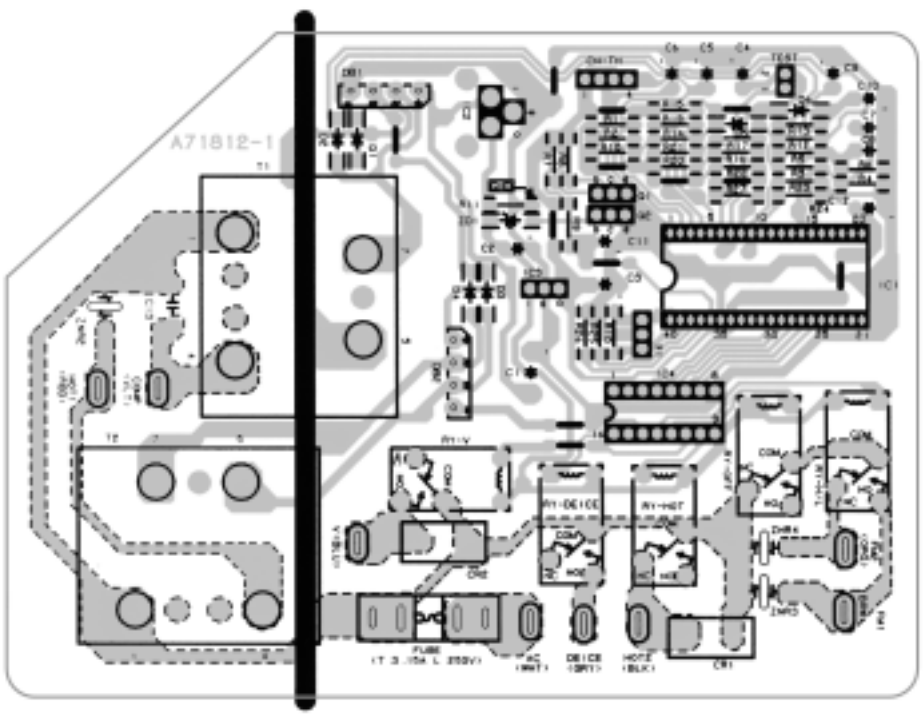

TOP PREVIOUS